
#### **Apollo 15 G&C Checklist**

Please note that most of the hand-written additions to this document were added during the compilation of the Apollo 15 Flight Journal in 1998 to 2000. To a large extent, they reflect changes read up to the crews during the course of the mission.

David Woods – Editor: Apollo Flight Journal



GUIDANCE & CONTROL SYSTEMS PROCEDURES BRANCH CREW PROCEDURES DIVISION

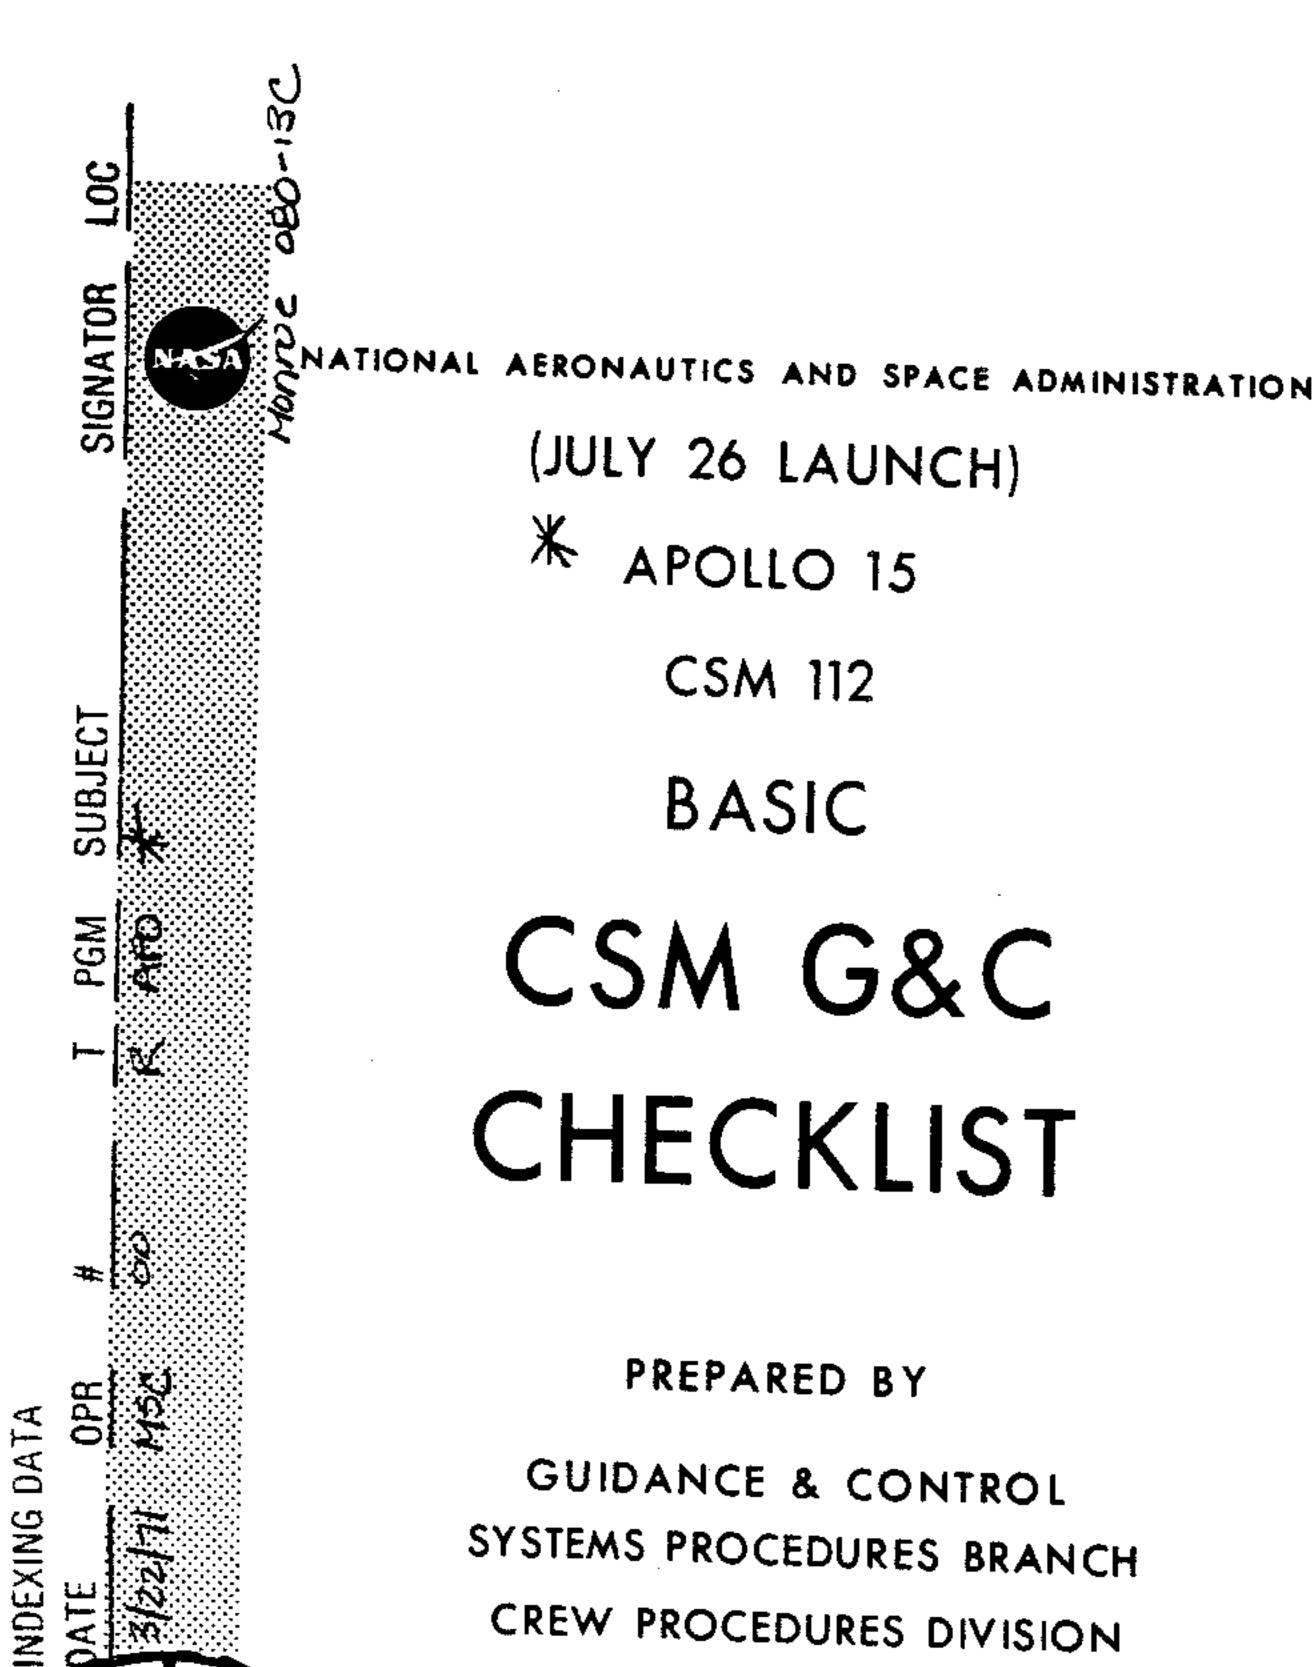

MARCH 22, 1971

#### APOLLO 15

#### CSM G&C CHECKLIST

MARCH 22, 1971

PREPARED BY:

BOOK MANAGER

**APPROVE** 

PROCEDURES

It is requested that any organization having comments, questions, or suggestions concerning this document contact John J. Monroe, Systems Procedures Branch, CG221, Building 4, room 253, telephone 483-4371.

This document is under the configuration control of the Crew Procedures Control Board (CPCB). All proposed changes should be submitted to the Apollo Flight Data File Manager, T. W. Holloway, CG5, Building 4, room 230 telephone 483-4271.

Distribution of this document is controlled by Flight Data File Manager, T. W. Holloway, Flight Planning Branch, Crew Procedures Division.

#### **G&C CHECKLIST**

# LIST OF EFFECTIVE PAGES

Basic 3/22/71

i        3/22/71       1-26        3/22/71         ii        3/22/71       1-27        3/22/71         iii        3/22/71       1-28        3/22/71         iv        3/22/71       1-29        3/22/71         v        3/22/71       1-30        3/22/71         vi        3/22/71       1-31        3/22/71         1-1        3/22/71       2-1        3/22/71         1-2        3/22/71       2-2        3/22/71         1-3        3/22/71       2-3        3/22/71         1-4        3/22/71       2-4        3/22/71         1-5        3/22/71       2-5        3/22/71         1-6        3/22/71       3-1        3/22/71         1-7        3/22/71       3-2       3/22/71         1-8        3/22/71       3-3       3/22/71         1-9        3/22/71       3-6	PAGE	DATE	PAGE	DATE
ii        3/22/71       1-27       3/22/71         iii        3/22/71       1-28       3/22/71         iv        3/22/71       1-29       3/22/71         v        3/22/71       1-30       3/22/71         vi        3/22/71       1-31       3/22/71         1-1        3/22/71       2-1       3/22/71         1-2        3/22/71       2-2       3/22/71         1-3        3/22/71       2-3       3/22/71         1-3        3/22/71       2-2       3/22/71         1-4        3/22/71       2-3       3/22/71         1-5        3/22/71       2-5       3/22/71         1-6        3/22/71       3-1       3/22/71         1-7        3/22/71       3-2       3/22/71         1-8        3/22/71       3-2       3/22/71         1-9        3/22/71       3-3       3/22/71         1-10        3/22/71       3-6       3/22/71         1-12        3/22/71	i	3/22/71	1-26	3/22/71
iii       3/22/71       1-28       3/22/71         iv       3/22/71       1-29       3/22/71         v       3/22/71       1-30       3/22/71         vi       3/22/71       1-31       3/22/71         1-1       3/22/71       2-1       3/22/71         1-2       3/22/71       2-2       3/22/71         1-3       3/22/71       2-3       3/22/71         1-3       3/22/71       2-4       3/22/71         1-5       3/22/71       2-5       3/22/71         1-6       3/22/71       3-1       3/22/71         1-7       3/22/71       3-2       3/22/71         1-8       3/22/71       3-3       3/22/71         1-9       3/22/71       3-4       3/22/71         1-10       3/22/71       3-5       3/22/71         1-10       3/22/71       3-6       3/22/71         1-12       3/22/71       3-7       3/22/71         1-13       3/22/71       3-8       3/22/71         1-14       3/22/71       3-9       3/22/71         1-15       3/22/71       3-10       3/22/71         1-16       3/22/71       3-13 <td>ii</td> <td>3/22/71</td> <td>1-27</td> <td>_ * *</td>	ii	3/22/71	1-27	_ * *
iv       3/22/71       1-29       3/22/71         v       3/22/71       1-30       3/22/71         vi       3/22/71       1-31       3/22/71         1-1       3/22/71       2-1       3/22/71         1-2       3/22/71       2-2       3/22/71         1-3       3/22/71       2-3       3/22/71         1-4       3/22/71       2-4       3/22/71         1-5       3/22/71       2-5       3/22/71         1-6       3/22/71       3-1       3/22/71         1-7       3/22/71       3-2       3/22/71         1-8       3/22/71       3-3       3/22/71         1-9       3/22/71       3-4       3/22/71         1-10       3/22/71       3-5       3/22/71         1-10       3/22/71       3-5       3/22/71         1-11       3/22/71       3-6       3/22/71         1-12       3/22/71       3-7       3/22/71         1-13       3/22/71       3-8       3/22/71         1-14       3/22/71       3-1       3-1       3/22/71         1-15       3/22/71       3-1       3-1       3/22/71         1-16	iii	3/22/71		• •
V        3/22/71       1-30       3/22/71         vi        3/22/71       1-31       3/22/71         1-1        3/22/71       2-1       3/22/71         1-2        3/22/71       2-2       3/22/71         1-3        3/22/71       2-3       3/22/71         1-4        3/22/71       2-4       3/22/71         1-5        3/22/71       2-5       3/22/71         1-6        3/22/71       3-1       3/22/71         1-7        3/22/71       3-2       3/22/71         1-8        3/22/71       3-3       3/22/71         1-9        3/22/71       3-4       3/22/71         1-10        3/22/71       3-5       3/22/71         1-10        3/22/71       3-6       3/22/71         1-11        3/22/71       3-7       3/22/71         1-12        3/22/71       3-8       3/22/71         1-13        3/22/71       3-9       3/22/71         1-14        3/22/71       <	iv			
vi        3/22/71       1-31       3/22/71         1-1        3/22/71       2-1       3/22/71         1-2        3/22/71       2-2       3/22/71         1-3        3/22/71       2-3       3/22/71         1-4        3/22/71       2-4       3/22/71         1-5        3/22/71       2-5       3/22/71         1-6        3/22/71       3-1       3/22/71         1-7        3/22/71       3-2       3/22/71         1-8        3/22/71       3-3       3/22/71         1-9        3/22/71       3-4       3/22/71         1-10        3/22/71       3-5       3/22/71         1-11        3/22/71       3-6       3/22/71         1-12        3/22/71       3-7       3/22/71         1-13        3/22/71       3-8       3/22/71         1-14        3/22/71       3-9       3/22/71         1-15        3/22/71       3-10       3/22/71         1-16        3/22/71	v	3/22/71	1-30	
1-1       3/22/71       2-1       3/22/71         1-2       3/22/71       2-2       3/22/71         1-3       3/22/71       2-3       3/22/71         1-4       3/22/71       2-4       3/22/71         1-5       3/22/71       2-5       3/22/71         1-6       3/22/71       3-1       3/22/71         1-7       3/22/71       3-2       3/22/71         1-8       3/22/71       3-3       3/22/71         1-9       3/22/71       3-4       3/22/71         1-10       3/22/71       3-5       3/22/71         1-10       3/22/71       3-6       3/22/71         1-11       3/22/71       3-6       3/22/71         1-12       3/22/71       3-7       3/22/71         1-13       3/22/71       3-8       3/22/71         1-14       3/22/71       3-9       3/22/71         1-15       3/22/71       3-10       3/22/71         1-16       3/22/71       3-13       3/22/71         1-19       3/22/71       3-14       3/22/71         1-20       3/22/71       3-14       3/22/71         1-21       3/22/71       4	vi	3/22/71		<u> </u>
1-2       3/22/71       2-2       3/22/71         1-3       3/22/71       2-3       3/22/71         1-4       3/22/71       2-4       3/22/71         1-5       3/22/71       2-5       3/22/71         1-6       3/22/71       3-1       3/22/71         1-7       3/22/71       3-2       3/22/71         1-8       3/22/71       3-3       3/22/71         1-9       3/22/71       3-4       3/22/71         1-10       3/22/71       3-5       3/22/71         1-10       3/22/71       3-6       3/22/71         1-11       3/22/71       3-6       3/22/71         1-12       3/22/71       3-7       3/22/71         1-13       3/22/71       3-8       3/22/71         1-14       3/22/71       3-9       3/22/71         1-15       3/22/71       3-10       3/22/71         1-16       3/22/71       3-11       3/22/71         1-18       3/22/71       3-13       3/22/71         1-20       3/22/71       3-14       3/22/71         1-21       3/22/71       4-2       3/22/71         1-22       3/22/71	1-1	•		
1-3       3/22/71       2-3       3/22/71         1-4       3/22/71       2-4       3/22/71         1-5       3/22/71       2-5       3/22/71         1-6       3/22/71       3-1       3/22/71         1-7       3/22/71       3-2       3/22/71         1-8       3/22/71       3-3       3/22/71         1-9       3/22/71       3-4       3/22/71         1-10       3/22/71       3-5       3/22/71         1-11       3/22/71       3-6       3/22/71         1-12       3/22/71       3-7       3/22/71         1-13       3/22/71       3-8       3/22/71         1-14       3/22/71       3-9       3/22/71         1-15       3/22/71       3-10       3/22/71         1-16       3/22/71       3-12       3/22/71         1-17       3/22/71       3-13       3/22/71         1-18       3/22/71       3-13       3/22/71         1-20       3/22/71       3-14       3/22/71         1-21       3/22/71       4-2       3/22/71         1-22       3/22/71       4-3       3/22/71         1-23       3/22/71 <t< td=""><td>1-2</td><td>_ * *</td><td></td><td></td></t<>	1-2	_ * *		
1-4       3/22/71       2-4       3/22/71         1-5       3/22/71       2-5       3/22/71         1-6       3/22/71       3-1       3/22/71         1-7       3/22/71       3-2       3/22/71         1-8       3/22/71       3-3       3/22/71         1-9       3/22/71       3-4       3/22/71         1-10       3/22/71       3-5       3/22/71         1-11       3/22/71       3-6       3/22/71         1-12       3/22/71       3-7       3/22/71         1-13       3/22/71       3-8       3/22/71         1-14       3/22/71       3-9       3/22/71         1-15       3/22/71       3-10       3/22/71         1-16       3/22/71       3-11       3/22/71         1-17       3/22/71       3-12       3/22/71         1-18       3/22/71       3-13       3/22/71         1-20       3/22/71       3-13       3/22/71         1-21       3/22/71       4-1       3/22/71         1-22       3/22/71       4-2       3/22/71         1-23       3/22/71       4-3       3/22/71         1-24       3/22/71       <		_ ` `		_ * *
1-5       3/22/71       2-5       3/22/71         1-6       3/22/71       3-1       3/22/71         1-7       3/22/71       3-2       3/22/71         1-8       3/22/71       3-3       3/22/71         1-9       3/22/71       3-4       3/22/71         1-10       3/22/71       3-5       3/22/71         1-11       3/22/71       3-6       3/22/71         1-12       3/22/71       3-7       3/22/71         1-13       3/22/71       3-8       3/22/71         1-14       3/22/71       3-9       3/22/71         1-15       3/22/71       3-10       3/22/71         1-16       3/22/71       3-11       3/22/71         1-17       3/22/71       3-12       3/22/71         1-18       3/22/71       3-13       3/22/71         1-20       3/22/71       3-14       3/22/71         1-21       3/22/71       4-1       3/22/71         1-22       3/22/71       4-2       3/22/71         1-23       3/22/71       4-3       3/22/71         1-24       3/22/71       4-5       3/22/71		_ · ·		
1-6       3/22/71       3-1       3/22/71         1-7       3/22/71       3-2       3/22/71         1-8       3/22/71       3-3       3/22/71         1-9       3/22/71       3-4       3/22/71         1-10       3/22/71       3-5       3/22/71         1-11       3/22/71       3-6       3/22/71         1-12       3/22/71       3-7       3/22/71         1-13       3/22/71       3-8       3/22/71         1-14       3/22/71       3-9       3/22/71         1-15       3/22/71       3-10       3/22/71         1-16       3/22/71       3-11       3/22/71         1-17       3/22/71       3-12       3/22/71         1-18       3/22/71       3-13       3/22/71         1-20       3/22/71       3-14       3/22/71         1-21       3/22/71       4-1       3/22/71         1-22       3/22/71       4-2       3/22/71         1-23       3/22/71       4-3       3/22/71         1-24       3/22/71       4-5       3/22/71		• •		
1-7       3/22/71       3-2       3/22/71         1-8       3/22/71       3-3       3/22/71         1-9       3/22/71       3-4       3/22/71         1-10       3/22/71       3-5       3/22/71         1-11       3/22/71       3-6       3/22/71         1-12       3/22/71       3-7       3/22/71         1-13       3/22/71       3-8       3/22/71         1-14       3/22/71       3-9       3/22/71         1-15       3/22/71       3-10       3/22/71         1-16       3/22/71       3-11       3/22/71         1-17       3/22/71       3-12       3/22/71         1-18       3/22/71       3-13       3/22/71         1-19       3/22/71       3-14       3/22/71         1-20       3/22/71       4-1       3/22/71         1-21       3/22/71       4-2       3/22/71         1-22       3/22/71       4-3       3/22/71         1-23       3/22/71       4-4       3/22/71         1-24       3/22/71       4-5       3/22/71	•			· · · · · ·
1-8       3/22/71       3-3       3/22/71         1-9       3/22/71       3-4       3/22/71         1-10       3/22/71       3-5       3/22/71         1-11       3/22/71       3-6       3/22/71         1-12       3/22/71       3-7       3/22/71         1-13       3/22/71       3-8       3/22/71         1-14       3/22/71       3-9       3/22/71         1-15       3/22/71       3-10       3/22/71         1-16       3/22/71       3-11       3/22/71         1-17       3/22/71       3-12       3/22/71         1-18       3/22/71       3-13       3/22/71         1-19       3/22/71       3-14       3/22/71         1-20       3/22/71       4-1       3/22/71         1-21       3/22/71       4-2       3/22/71         1-22       3/22/71       4-3       3/22/71         1-23       3/22/71       4-3       3/22/71         1-24       3/22/71       4-5       3/22/71         1-24       3/22/71       4-5       3/22/71	<b>-</b>	•	·	
1-9       3/22/71       3-4       3/22/71         1-10       3/22/71       3-5       3/22/71         1-11       3/22/71       3-6       3/22/71         1-12       3/22/71       3-7       3/22/71         1-13       3/22/71       3-8       3/22/71         1-14       3/22/71       3-9       3/22/71         1-15       3/22/71       3-10       3/22/71         1-16       3/22/71       3-11       3/22/71         1-17       3/22/71       3-11       3/22/71         1-18       3/22/71       3-13       3/22/71         1-19       3/22/71       3-14       3/22/71         1-20       3/22/71       4-1       3/22/71         1-21       3/22/71       4-2       3/22/71         1-22       3/22/71       4-3       3/22/71         1-23       3/22/71       4-4       3/22/71         1-24       3/22/71       4-5       3/22/71	7 0		^ ^	
1-10       3/22/71       3-5       3/22/71         1-11       3/22/71       3-6       3/22/71         1-12       3/22/71       3-7       3/22/71         1-13       3/22/71       3-8       3/22/71         1-14       3/22/71       3-9       3/22/71         1-15       3/22/71       3-10       3/22/71         1-16       3/22/71       3-11       3/22/71         1-17       3/22/71       3-12       3/22/71         1-18       3/22/71       3-13       3/22/71         1-19       3/22/71       3-14       3/22/71         1-20       3/22/71       4-1       3/22/71         1-21       3/22/71       4-2       3/22/71         1-22       3/22/71       4-3       3/22/71         1-23       3/22/71       4-4       3/22/71         1-24       3/22/71       4-5       3/22/71	_	•		
1-11        3/22/71       3-6       3/22/71         1-12        3/22/71       3-7       3/22/71         1-13        3/22/71       3-8       3/22/71         1-14        3/22/71       3-9       3/22/71         1-15        3/22/71       3-10       3/22/71         1-16        3/22/71       3-11       3/22/71         1-17        3/22/71       3-12       3/22/71         1-18        3/22/71       3-13       3/22/71         1-19        3/22/71       3-14       3/22/71         1-20        3/22/71       4-1       3/22/71         1-21        3/22/71       4-2       3/22/71         1-22        3/22/71       4-3       3/22/71         1-23        3/22/71       4-4       3/22/71         1-24        3/22/71       4-5       3/22/71			3-4	3/22/71
1-12       3/22/71       3-7       3/22/71         1-13       3/22/71       3-8       3/22/71         1-14       3/22/71       3-9       3/22/71         1-15       3/22/71       3-10       3/22/71         1-16       3/22/71       3-11       3/22/71         1-17       3/22/71       3-12       3/22/71         1-18       3/22/71       3-13       3/22/71         1-19       3/22/71       3-14       3/22/71         1-20       3/22/71       4-1       3/22/71         1-21       3/22/71       4-2       3/22/71         1-22       3/22/71       4-3       3/22/71         1-23       3/22/71       4-4       3/22/71         1-24       3/22/71       4-5       3/22/71			3-5	3/22/71
1-13       3/22/71       3-8       3/22/71         1-14       3/22/71       3-9       3/22/71         1-15       3/22/71       3-10       3/22/71         1-16       3/22/71       3-11       3/22/71         1-17       3/22/71       3-12       3/22/71         1-18       3/22/71       3-13       3/22/71         1-19       3/22/71       3-14       3/22/71         1-20       3/22/71       4-1       3/22/71         1-21       3/22/71       4-2       3/22/71         1-22       3/22/71       4-3       3/22/71         1-23       3/22/71       4-4       3/22/71         1-24       3/22/71       4-5       3/22/71		. · ·	3-6	3/22/71
1-13       3/22/71       3-8       3/22/71         1-14       3/22/71       3-9       3/22/71         1-15       3/22/71       3-10       3/22/71         1-16       3/22/71       3-11       3/22/71         1-17       3/22/71       3-12       3/22/71         1-18       3/22/71       3-13       3/22/71         1-19       3/22/71       3-14       3/22/71         1-20       3/22/71       4-1       3/22/71         1-21       3/22/71       4-2       3/22/71         1-22       3/22/71       4-3       3/22/71         1-23       3/22/71       4-4       3/22/71         1-24       3/22/71       4-5       3/22/71		3/22/71	3-7	3/22/71
1-14       3/22/71       3-9       3/22/71         1-15       3/22/71       3-10       3/22/71         1-16       3/22/71       3-11       3/22/71         1-17       3/22/71       3-12       3/22/71         1-18       3/22/71       3-13       3/22/71         1-19       3/22/71       3-14       3/22/71         1-20       3/22/71       3/22/71       3/22/71         1-21       3/22/71       4-2       3/22/71         1-22       3/22/71       4-3       3/22/71         1-23       3/22/71       4-4       3/22/71         1-24       3/22/71       4-5       3/22/71	1-13	3/22/71	3-8	
1-15        3/22/71       3-10        3/22/71         1-16        3/22/71       3-11        3/22/71         1-17        3/22/71       3-12        3/22/71         1-18        3/22/71       3-13        3/22/71         1-19        3/22/71       3-14        3/22/71         1-20        3/22/71       4-1        3/22/71         1-21        3/22/71       4-2        3/22/71         1-22        3/22/71       4-3        3/22/71         1-23        3/22/71       4-4        3/22/71         1-24        3/22/71       4-5        3/22/71	1-14	3/22/71	3-9	- · · · · · · · · · · · · · · · · · · ·
1-16        3/22/71       3-11        3/22/71         1-17        3/22/71       3-12       3/22/71         1-18        3/22/71       3-13       3/22/71         1-19        3/22/71       3-14       3/22/71         1-20        3/22/71       4-1       3/22/71         1-21        3/22/71       4-2       3/22/71         1-22        3/22/71       4-3       3/22/71         1-23        3/22/71       4-4       3/22/71         1-24        3/22/71       4-5       3/22/71	1-15	3/22/71	<b>.</b>	· ·
1-17        3/22/71       3-12       3/22/71         1-18        3/22/71       3-13       3/22/71         1-19        3/22/71       3-14       3/22/71         1-20        3/22/71       4-1       3/22/71         1-21        3/22/71       4-2       3/22/71         1-22        3/22/71       4-3       3/22/71         1-23        3/22/71       4-4       3/22/71         1-24        3/22/71       4-5       3/22/71	1-16	3/22/71		
1-18        3/22/71       3-13       3/22/71         1-19        3/22/71       3-14       3/22/71         1-20        3/22/71       4-1       3/22/71         1-21        3/22/71       4-2       3/22/71         1-22        3/22/71       4-3       3/22/71         1-23        3/22/71       4-4       3/22/71         1-24        3/22/71       4-5       3/22/71	1-17	3/22/71	0.10	
1-19        3/22/71       3-14       3/22/71         1-20        3/22/71       4-1       3/22/71         1-21        3/22/71       4-2       3/22/71         1-22        3/22/71       4-3       3/22/71         1-23        3/22/71       4-4       3/22/71         1-24        3/22/71       4-5       3/22/71	1-18		0.10	
1-20        3/22/71       4-1        3/22/71         1-21        3/22/71       4-2        3/22/71         1-22        3/22/71       4-3        3/22/71         1-23        3/22/71       4-4        3/22/71         1-24        3/22/71       4-5        3/22/71         1-25        3/22/71       4-5        3/22/71			2.14	
1-21        3/22/71       4-2        3/22/71         1-22        3/22/71       4-3        3/22/71         1-23        3/22/71       4-4        3/22/71         1-24        3/22/71       4-5        3/22/71			· · ·	• •
1-22 3/22/71 4-3 3/22/71 1-23 3/22/71 4-4 3/22/71 1-24 3/22/71 4-5 3/22/71				
1-23 3/22/71 4-4 3/22/71 1-24 3/22/71 4-5 3/22/71		_ · · ·		
1-24   .   .   3/22/71   4-5   .   .   3/22/71				
7/20/71		_ ' '		
4-6 $3/22/71$				
	1-25	3/24//1	4-6	3/22/71

# (LIST OF EFFECTIVE PAGES CONT)

PAGE 4-7 4-8 4-9 4-10 4-11 4-12 4-13 4-14 4-15 4-16 4-17 4-18 4-19 4-20 4-21 4-22 4-23 4-24 5-1 5-3 5-4 5-5 5-7 5-8 5-10 5-11 5-12 5-13 5-14 5-15 5-16 5-17 5-18 5-19 6-1	DATE 3/22/71	PAGE 6-4	DATE 3/22/71
6-2 6-3	3/22/71	10-3	

## CONTENTS

	PAGE
CMC GENERAL Star List Verb List (Decimal) Noun List (Decimal) V05 N09 Alarm Codes V50 N25 Checklist Codes V04 N06 (N12) Option Codes Monitor Data in Erasable Memory Flag Word Set/Reset Change Data in Erasable Memory Flag Word Bit Assignments Monitor of Input/Output Channels	
Channel Set/Reset	1-18
SC Cont/Mode and Optics Mode Override CMC Input/Output Channels VHF RNG DSKY DISPLAY G&N Recovery Procedures V35 DSKY Condition Light Test V41 N91 Coarse Align OCDU's V41 N20 Coarse Align ICDU's V42 Gyro Torquing V48 DAP Data Load & Activate Procedure V49 Crew Defined Maneuver V54 Backup Optics Mark V55 CMC Time Update V57 Display FULTKFLG Condition V64 Hi Gain Antenna Pointing V67 W-Matrix Error Display V74 CMC Downlink V82 Orbit Parameter Display #1	1-18 1-19 1-20 1-20 1-23 1-24 1-25 1-26 1-27 1-27 1-28 1-28 1-29
V85 Rndz Parameter Display #2	1-29 1-29
V89 Rendezvous Final Attitude	1-30 1-31

## iv

# CONTENTS (CONT)

		PAGE
2.	G&C SYSTEM MANAGEMENT	2-1
	Power Up Procedure	2-1 2-1 2-2
	CMC: Power Up Procedure	2-2 2-2 2-3
÷.	Power Up Procedure	2-3 2-3 2-3
	Power Up	2-4 2-4 2-5 2-5
3.	NAVIGATION (P20's) P20 Options P20-Universal Tracking (Opts 1&5) P20-Universal Tracking (Opts 0&4) P21 Ground Track Determination P22 Orbital Navigation P23 Cislunar Midcourse Nav Meas P24 Rate-aided Optics Tracking P27 CMC Update P29 Time of Longitude P20 with GDC REFSMMAT	3-11 3-12
4.	PRETHRUST (P30's & P70's)  P30 External AV  Minkey Sequencer  P31 Ham Prethrust  P32 CSI Prethrust (P72 LM)  P36 Plane Change Prethrust  P33 CDH Prethrust (P73 LM)	4-2 4-5 4-7 4-9

# CONTENTS (CONT)

		PAGE
	P34 TPI Prethrust (P74 LM)	4-1
	P35 TPM Prethrust (P75 LM)	4-12
	P79 Rndz Final Program	4-14
	P37 Return to Earth PGM	4-14
	Obtain Entry REFSMMAT (NO COMM)	4-18
	P76 ΔV UPDATE (P77 CSM)	4-19
	P37 Longitude Iteration	4-20
	$\Delta V_{o}$ vs $\Delta 0$ Long	4-2
	P37 Block Data	4-23
_	THRUSTING (DAGLe)	<b>-</b> 1
J.	THRUSTING (P40's)	5-1
	P40 SPS Thrusting	5-1
	Prop Cons	5-6
	SPS vs RCS Criteria	5-8
	GIMB ANGS vs WT	5-12
	G&N Critical Burns	5-15
	SCS Critical Burn	5-1t
	P41 RCS Thrusting	5-1
	P47 Thrust Monitor Program	5-19
6.	ALIGNMENTS (P50's)	6-1
	P51 IMU Orientation	6-1
	P52 IMU Realign	
	P53 Backup IMU Orient Determination	6-1
	DSA Rackup Ind Offent Determination	
	P54 Backup IMU Realign	6-5
	Star Charts	6-8
7.	INITIALIZATION PROCEDURES	7-1
	Rapid IMU Realign	7-1
	Changing Landing Site REFSMMAT For	
	Out-of-Plane Burns	7-1
	GDC Alignment to IMU Gimbal Angles	7-3
	Backup GDC &/or IMU Alignment	7-3
	In-Plane GDC Alignment	7-4
	PGNS Ordeal Initialization	7-5
	SCS Ordeal Initialization	7-5
	COAS LOS Determination	7-6
	VYNV EVV DELEIMINGLIUM	,()

# CONTENTS (CONT)

٧i

		PAGE
	CMC/LGC Clock Sync/TEPHEM Update V55 CMC Time Update (See EXT VB pg G/1-27) Align LM IMU to CSM IMU Align LM IMU to CSM GDC Align LM AGS to CSM IMU/GDC Align CSM GDC to LM IMU Align CSM GDC to LM AGS CSM IMU to LM AGS Align CSM IMU to LM AGS Crescent Align GDC REFSMMAT DETERMINATION GDC REFSMMAT REALIGN (P52) LM Steerable Ant Pointing	7-7 7-7 7-7 7-8 7-9 7-10 7-11 7-13 7-17
8.	PTC/ORB RATE PROCEDURES	8-3 8-4
9.	Erasable-LOAD UPDATE	9-1 9-1 9-8
10.	PLANET VECTORS	10-1

	G
	1-1
	STAR LIST
STAR NAME	
(Numerical)	( /
Ö	
) Planet	

STAR NAME

(Numerical)		(Alphabetical)	(Alphahetical)	
NO	iner reary	(Miphabe creat)	(Arphabecicar)	
00	Planet	Acamar	6	
1	Alpheratz	Achernar	4	
2	Diphda	Acrux	25	
3	Navi	Aldebaran	11	
4	Achernar	Alkaid	27	
5	Polaris	Alphard	21	
6	Acamar	Alphecca	32	
7	Menkar	Alpheratz	1	
10	Mirfak	Altair	40	
11	Aldebaran	Antares	33	
12	_	Arcturus	31	
13	Rigel Capella	Atria	34	
14	Canopus	Canopus	14	
15	Sirius	Capella	13	
16	. <u> </u>	Dabih	41	
17	Procyon	Deneb	43	
20	Regor Dnoces	Denebola	23	
21	Alphard	Diphda	2	
22	Regulus	Dnoces	20	
23	Denebola	Earth	47	
24	Gienah	Enif	44	
25	Acrux	Fomalhaut	45	
26	Spica	Gienah	24	
27	Alkaid	Menkar	7	
30	Menkent	Menkent	30	
31	Arcturus	Mirfak	10	
32	Alphecca	Moon	50	
33	Antares	Navi	3	
34	Atria	Nunki	37	
35	Rasalhague	Peacock	42	
36	Vega	Planet	00	
37	Nunki	Polaris	5	
40	Altair	Procyon	16	
41	Dabih	Rasalhague	35	
42	Peacock	Regor	17	
43	Deneb	Regulus	22	
44	Enif	Rigel	12	
45	Fomalhaut	Sirius	15	
46	Sun	Spica	26	
47	Earth	Sun	46	
50	Moon	Vega	36	
<b>J</b> O	1.0011			

```
G
1-2
```

```
VERB LIST (Decimal)
01
    Display Oct Compnt 1 (R1)
02
    Display Oct Compnt 2 (R1)
03
    Display Oct Compnt 3 (R1)
04
    Display Oct Compnt 1, 2 (R1, R2)
    Display Oct Compnt 1, 2, 3 (R1, R2, R3)
05
06
    Display Decimal (R1 or R1, R2 or R1, R2, R3)
07
    Display DP Decimal - (R1,R2)
וו
    Monitor Oct Compnt 1 (R1)
12
    Monitor Oct Compnt 2 (R1)
13
    Monitor Oct Compnt 3 (R1)
    Monitor Oct Compnt 1, 2 (R1, R2)
14
    Monitor Oct Compnt 1, 2, 3 (R1,R2,R3)
15
16
    Monitor Decimal (R1 or R1, R2 or R1, R2, R3)
17
    Monitor DP Decimal - (R1,R2)
21
    Load Compnt 1 (R1)
22
    Load Compnt 2 (R2)
23
    Load Compnt 3 (R3)
    Load Compnt 1, 2 (R1, R2)
24
    Load Compnt 1, 2, 3 (R1, R2, R3)
25
27
    Display Fixed Memory
30
    Request Executive
31
    Request Waitlist
32
    Recycle Prog
33
    Proceed Without DSKY inputs
34
    Terminate Function
35 Test Lights
36
     Request Fresh Start
37
     Change Prog (Major Mode)
*40
    Zero ICDU
     Coarse Align CDU (N20 & N91)
41
42
    Fine Align IMU
43
    Load FDAI ATT Error needles
*44 Set Surface Flag
*45
    Reset Surface Flag
*46 Activate DAP
*47 Set LM State Vector into CSM State Vector
48
    Load DAP (RO3)
49
    Start Crew Defined MNVR(R62)
 50
     Please Perform
51
    Please Mark
*52 Marked on offset landing site
53 Please Mark alternate LOS
 54
    Start REND backup sighting mark (R23)
```

```
55 Increment CMC Time (Decimal)
*56 Terminate Tracking (P20)
57 FULTKFLG Display
*58 Reset Stick Flag and set V50 N18 flag
59 Please Calibrate
*60 Set N17 = N20
*61 Display DAP att error
*62 Display total att error (N22-N20)
*63 Display total astro att error (N17-N20)
64
    Start S-band ant routine (RO5)
*65 Verify Prelaunch Align Optics (CSM)
*66 Set CSM State Vector into LM State Vector
67 W-Matrix RSS Error Display
*69 Restart
70 Update Liftoff Time (P27)
 71
    Univ Update-BLOCK ADR (P27)
72 Univ Update-SINGLE ADR (P27)
73 Update CMC Time (Octal) (P27)
*74 Initialize erasable dump via downlink
*75 Backup Liftoff
*78
     Update prelaunch azimuth
*80
    Update LM State Vector
*81
     Update CSM State Vector
 82
     Start Orbit Param Disp (R30)
 83
     Start REND Param Display No. 1 (R31)
 85
     Start REND Param Display No.2 (R34)
*86
    Reject REND backup sighting mark
*87
     Set VHF range flag
*88
     Reset VHF range flag
 89
     Start REND Final ATT Routine (R63)
 90
     Request REND out of plane display (R36)
 91 Compute Banksum
*93 Enable W matrix initialization
*94 Enable CISLUNAR Tracking recycle
*96
     Terminate integration and go to POO
       (Select POO by V37 after use of V96)
 97 SPS Thrust Fail (R40)
     Enable engine ignition
 99
    *Callable with other extended verb in use
     and does not lock out other extended verbs
```

# NOUN LIST (Decimal)

01	Specify Machine Address (Fract) (R1,R2,R3)	.XXXXX
02	Specify Machine Address (Whole) (R1,R2,R3)	XXXXX.
03	Specify Machine Address	
	(R1,R2,R3)	.01°
05	Angular Error/Diff	.01°
06	Option Code (R1 & R2)	OCTAL
07	BIT operator: Address, E Action	BIT ID, OCTAL
80	Alarm Data	OCTAL
09	Alarm Codes	0CTAL
10	Channel to be Specified	(R1) OCTAL
11	TIG (CSI)	hrs,min,.Olsec
12	Option code (R1&R2)	OCTAL
13	TIG (CDH)	hrs,min,.01sec
14	VC/O (R1) (P15)	FPS
15	Increment Machine	OCTAL
-	Address (R1)	
16	Time of event	hrs,min,.Olsec
17	Astronaut total att	R,P,Y .01°
18	Auto Maneuver	R,P,Y .01°
20	Present ICDU Angles	R,P,Y .01°
21	PIPA PULSES X,Y,Z	Pulses
22	New ICDU Angles	R,P,Y .01°
24	Delta CMC Clock Time	hrs,min,.Olsec
25	Checklist (please perfor	rm)
26	Prio/Delay, ADRES,	OCTAL
	BBCON(R1,R2 & R	3)
27	Self-Test on/off sw	OCTAL
29	X SM LAUNCH Azimuth	.01°
30	Target Code (Gyrocomp ve	
31	Time of W-mat. reinit.	hrs,min,.01sec
32	Time from Perigee	hrs,min,.Olsec
33	Time of Ignition (TIG)	hrs,min,.01sec
34	Time of Event	hrs,min,.Olsec
35	Time from Event	hrs,min,.01sec
36	Time of CMC Clock	hrs,min,.01sec
37	TIG (TPI)	hrs,min,.01sec
38	State Vector Time	hrs,min,.01sec
39	Δ <u>Time</u> of	hrs,min,.01sec
	Transfer	

	1-5	
40	TF GETI/TFC VG	min-sec .1 FPS
	ΔV (Accumulated)	.1 FPS
41		nuth .01°
		ion .001° ent 0000X
42	Apogee Alt (HA)(RLS/Pad)	MN I.
	Perigee Alt (HP) (RLS/Pad)	.1 NM
43	ΔV (Required) Lat	.1 FPS .01°
		(+ North)
	Long	.01°
	Alt (RLS/Pad)	(+ East) .1 NM
44	Apogee Alt (HA) (RLS/Pad)	.1 NM
	Perigee Alt (HP)(N50)(RLS/Pad TFF	•
45	Marks	min-sec XXBXX
	TF GETI	min-sec
46	MGA DAP Config (R1&R2)	.01° OCTAL
47	CSM weight	LBS
40	LM Weight	LBS
48	Pitch Trim Yaw Trim	.01° .01°
49	ΔR	.01 NM
	SOURCE CODE (1 anting 2 MUE)	.1 FPS
50	SOURCE CODE (1 optics,2 VHF)	0000X.
	Perigee Alt (HP)(RLS/Pad)	.1 NM
51	TFF RHO	min-sec .01°
J,	GAMMA	.01°
52	CENTANG (active veh)	.01°
53	RANGE RANGE RATE	.01 NM .1 FPS
	PHI (1c1 horiz)	.01°
54	Range Pange Pate	.01 NM
	Range Rate Theta (1cl horiz)	.1 FPS .01°
55	Precision offset	CODE
	E(ELEV ANGLE) CENTANG (passive veh)	°10. °10.
	SENTING (PUSSING VEII)	.01

	G
]	-6

58 59 60 61	HP alt (post TPI) (RLS/Pad) ΔV (TPI) ΔV (TPF) ΔV LOS 1 ΔV LOS 2 ΔV LOS 3 G Max V Pred Gamma EI Impact Lat	.1 NM .1 FPS .1 FPS .1 FPS .1 FPS .01 G FPS .01°
	Impact Long	(+ North) .01°
	Head Up/Down	(+ East) +/-00001
62	VI-Inertial Vel Mag H Dot-Alt Rate H-Alt (RLS/Pad)	Heads up) FPS FPS .1 NM
63	RTGO from 0.05 G To Splash	.T NM
64	VIO, Predicted Iner Vel TFE, time from .05G Drag Acceleration	FPS min-sec .01 G
65		FPS .1 NM nin,.01 sec
66	(fetched in interrupt) Beta, CMD Bank Angle CRSRNG Error	.01° .1 NM
67	DNRNG Error RTOGO to Target Lat, Present Position	.1 NM .1 NM .01°
	Long, Present Position	(+ North) .01°
68	Beta, CMD Bank Angle VI, Inertial Vel.	(+ East) .01° FPS
69	H Dot, Alt Rate Beta DL	FPS .01° .01 G
70	VL Star Code(before mark) LMK Data Horiz data	FPS OCTAL OCTAL OCTAL

71	Star code (after mark) LMK Data	OCTAL OCTAL
	Horiz data	OCTAL
73	ALT (P21) (RLS/Pad)	10 NM
	VEL (P21)	FPS
7.	GAMMA (P21)	.01°
74	BETA, CMD Bank Angle	.01°
	VI, Inertial Velocity Drag Acceleration	FPS 01.6
75	ΔH (CDH)	.01 G .1 NM
, 0	ΔΤ	min-sec
	ΔΤ	min-sec
78	Axis YAW	.01°
	Axis PITCH	.01°
70	OMI CRON	.01°
79	P20 opt 2 rate	.0001°/sec
80	P2O deadband TF GETI/TFC	.01°
00	VG	min-sec FPS
	ΔV (Accumulated)	FPS
81	$\Delta VX,Y,Z$ (1c1 vert)	.1 FPS
82	ΔVX,Y,Z (LV) CDH	.1 FPS
83	ΔVX,Y,Z (Body Control Axis)	.1 FPS
84	ΔVX,Y,Z (Other Vehicle)	.1 FPS
85	VGX,Y,Z (Body Control Axis)	.1 FPS
86 97	$\Delta VX, Y, Z$ (lcl vert)	FPS
87	Opt Calib Data - Shaft (R1) Trunnion(R2)	°10.
88	Planet X	.001° .XXXXX
00	Y	.XXXXX
	Ż	.XXXXX
89	Landmark - Lat	.001°
		(+ North)
	Long/2	.001°
	47.	(+ East)
	Alt /Maan lumpu us div	-1 01 1111
90	(Mean lunar radiu REND out of Y (Active)	
30	Plane para Y DOT (Active)	.01 NM .1 FPS
	Y DOT (Passiv	
91	OCDU Angles Shaft (R1)	.01°
	Trunnion (R2)	.001°
92	New OCDU Angles Shaft (RI)	.01°
	Trunnion (R2)	.001°

93 94	Delta Gyro Angles X, OCDU ANGLES (R56 & R	•
	•	R1 SHAFT .01°
		R2 TRUNNION .001°
95	TF GETI/TFC (P15)	min-sec
	VG (P15)	FPS
0.0	VI (P15)	FPS
96	Y (CSM)	.01 NM
	Y DOT (CSM)	.1 FPS
0.7	Y DOT (LM)	.1 FPS
97	System Test Inputs	XXXXX.
		XXXXX.
98	System Test Results	XXXXX.
50	oly cem rest westites	XXXXX. .XXXXX
		XXXXX.
99	POS ERR	1 FT
- •	VEL ERR	.1 FPS
	OPTION Code	0000X
	<del></del>	0000X

# VO5 NO9 ALARM CODES

00110	Mark reject has been entered but ignored
	Continue
00113	No inbits (chan 16)
	Continue; if alarm recurs use MDC DSKY.
00114	More marks made than desired
	Continue
00115	V41 N91 keyed with OPTICS MODE not
	in CMC
	OPTICS MODE - CMC and OPTICS ZERO - OFF
00116	Optics switch altered before 15 sec
	zero time elapsed
	OPTICS ZERO - ZERO (15 sec).
00117	V41 N91 keyed but CMC has reserved
	OCDU (from start of gimbal test in
	P40 until termination of TVC
	functional allocation of the
	"optics" CDU Driving Output)
	V41 N91 not yet available

	G
1	-9

00120 Optics torque has been requested but optics have not been zeroed since last FRESH START or RESTART OPTICS ZERO - OFF then ZERO (15 sec). 00121 In 0.05 sec following mark, an ICDU changed by more than 0.033° Repeat MK. (m)00205 PIPA saturated Use SCS control (G&N 12). 00206 The IMU zero routine has been entered with both the GMBL LOCK 1t and NO ATT 1t on Coarse align to 0,0,0 Reselect V40E (m)00207 ISS turn-on request not present for 90 sec Redo IMU turn on (G&N 12). (m)00210 The IMU is not operating Redo IMU turn on. If alarm recurs, perform fresh start (V36E). Consult MSFN. (G&N 12). (m)00211 Coarse align error If P51(3)/52(4) in progress record gyr torquing angles and perform fine ali check in P52(4). Otherwise, see G/1-24. (G&N 12). (m)00212 PIPA fail, but PIPA is not being used PIPA BIAS check (G&N 6/8). (m)00213 IMU not operating with turn-on request See 00210 00214 Program using IMU when turned OFF See 00210 or exit program. (m)00217 IMU coarse align or pulse torque difficulty has occurred If code 211 also, perform 211 cure only Reinitiate current program. If alarm recurs, terminate use of ISS (G&N 12). 00220 IMU orientation unknown Align or if aligned set REFSMMAT flag.

00402 Second MINKEY pulse torque must be dor

realign IMU.

Desired middle gimbal angle is excess?

Call N22 - maneuver if MGA < 85° or

00401

```
G
1-10
```

```
00404
         Target out of view (90 deg test)
         (G/3-7,3-11,6-3)
         Acceptable star pair is not available
  00405
          (G/6-3,6-6)
  00406 Rend navigation not operating
         Select P20 or continue.
  00421 W-matrix overflow
         Notify MSFN but continue.
         W-matrix automatically reinitialized at
           next mark.
  00600
         No solution on first iteration in
            P32/72
         (G/4-6,4-8)
  00601 Post CSI Perigee/lune alt <85nm/ 5.8nm
         (G/4-6,4-8)
  00602 Post CDH Perigee/lune alt <85nm/ 5.8nm
         (G/4-6,4-8)
  00603
         Time from TIG (CSI) to TIG (CDH)
           <10 min
         (G/4-6,4-8)
         Time from TIG (CDH) to TIG (TPI)
  00604
           <10 min
          (G/4-6.4-8)
  00605
         Number of iterations exceeds loop
           maximum
          (G/4-6,4-8,4-15,4-16)
  00606
         ΔV (CSI) has been >1000 fps for last
            two iterations
          (G/4-6,4-8)
  00611
         No TIG for given ELEV angle
         (G/4-10,4-12)
  00612 State vector in wrong sphere of influence
            at TIG
          (G/4-15)
  00613 Reentry angle out of limits
          (G/4-16)
(m)00777 ISS warning caused by PIPA fail
          (G&N 6).
  01102 CMC self test error
          (G/2-3)
         Downlink too fast
(m)01105
          Rset. If alarm recurs DOWNLINK FAILURE.
```

(G&N 12).

```
G
1-11
```

(m)01106	Uplink too fast Rset. If alarm recurs UPLINK FAILURE.
	(G&N 12).
(m)01107	Phase table failure-assume erasable
	memory is destroyed
	If Comm: 1. V74 CMC DOWNLINK
	2. P27 As Necessary.
	3. V48 As Necessary (V46).
	4. Reestablish REFSMMAT via
	P51 As Necessary.
	If FRESH START recurs, CMC
	FAILURE (SSR-3).
	· · · · · · · · · · · · · · · · · · ·
01203	If no Comm, pg G/9-1
01301	Arcsin or arccos input is greater than
	one
( ) 07.407	notify MSFN, continue.
(m)U14U/	VG increasing
	(G&N 12).
01426	IMU unsatisfactory
	Realign or use SCS.
01427	IMU reversed
	Note FDAI operation is inverted.
01520	V37 request not permitted at this time
	Wait till COMP ACTY lt.
	not on continuously - reselect V37
	if P62-67, select P00 and then desi
	program.
01600	Overflow in drift test
	This is gnd test alarm only.
01601	Bad IMU torque abort
	See 01600
01703	Insufficient time for integration.
	TIG slipped
	(G/5-3,5-18)
(m)03777	ISS warning caused by ICDU fail
(, 00777	(G&N 6)
(m)04777	ISS warning caused by ICDU & PIPA fai
(111)04777	(G&N 6)
(m)07777	·
(111/0/1/1/	ISS warning caused by IMU fail (G&N 6)
(m)10777	TCC warning assessed by TMU 0 DIDA
(111) 10777	ISS warning caused by IMU & PIPA
	fail (G&N6)

	G		
1	_	Į	2

(m)13777	ISS warning caused by IMU & ICDU fail (G&N 6)
(m)14777	ISS warning caused by IMU,ICDU & PIPA fail
	(G&N 6)
**20430	Orbital integration has been
	terminated to avoid possible
	infinite loop.
	Notify MSFN.  Deckable S. V. uplink required
**20607	Probable S.V. uplink required No solution to conic subroutine
~~20007	Reselect program.
**20610	Alt at specified TIG in P37 < 400K ft
20010	Reselect P37 and decrease TIG.
**21204	Negative or zero time waitlist call.
2,20	If ave-g on, continue.
	Otherwise reselect program.
**21206	Second job attempts to go to sleep via
	keyboard and display program
	See 21204.
<b>**</b> 21210	Second attempt is made to stall
	Reselect program
	Do not attempt use of IMU while CMC is
++01.000	using it.
**21302	SQRT called with negative argument
**21501	See 21204  Kovboord and display alarm during
~~21301	Keyboard and display alarm during internal use
	See 21204
**21502	Illegal flashing display
4.002	See 21204
**21521	POl selected and Pll has already been
	performed
	Select correct program
*31104	Delay routine busy
	Reselect extended verb or continue with
	program.
<b>*</b> 21201	Notify MSFN.
^31201	Executive overflow - no vac area
	Reselect Extended Verb and/or Continue

Program. \*31202 Executive overflow - no core sets See 31201

```
G
1-13
```

\*31203 Waitlist overflow - too many tasks See 31201

\*31211 Illegal interrupt of extended verb Reselect extended verb after optics marking is completed.

(m) - Malf procedure indicated

\*\*(2xxxx) - Generates restart, F37 (no lt) (P00D00)

\*(3xxxx) - Restart (no lt) and program continues (i.e. attempted recovery)(BAILOUT)

NOTE - All \*\*alarms act as \*type if they occur when Ave-g is on or display type extended verb is active

G 1-14

# V50 N25 CHECKLIST CODES

R1 Code	ACTION	FUNCTION
00013	Key in	Gyro Torque Option
00014 00015 00016 00017 00020	Key in Perform Key in Perform Perform	(P52,54) Fine Align Option Celestial Body Acq Terminate Mark Sequence MINKEY Rendezvous MINKEY PC pulse
00041 00062 00202 00204	Switch Key Perform Key in	torquing CM/SM SEP to UP CMC to STBY 3-axis MNVR Engine gimbal test opt

# VO4 NO6 (N12)OPTION CODES

R1 Code	Purpose	Input for R2
00001	Specify IMU Orientation	1=PREF, 2=NOM 3=REFS, 4=LDG SITE
00002 00004	Specify vehicle Specify FULTKFLG setting	<pre>1=CSM, 2=LM 0=VHF and optics,</pre>
00007	Specify Propulsion System	1=VHF <u>or</u> optics 1=SPS, 2=RCS
00024	Specify P20 mode	<pre>0=Rndz., VECPOINT 1=Celestial body,     VECPOINT 2=Rotate 4=Rndz., 3-axis 5=Celestial body,     3-axis</pre>

THIS PAGE INTENTIONALLY BLANK

#### MONITOR DATA IN ERASABLE MEMORY

V11 NOIE (OCTAL ADD) E
F 01 01 R1 DATA R3 OCTAL ADD
N15E (For next succeeding word)
ENTR (For each succeeding word)

FLAG WORD SET/RESET

V25N 07E F 21 07 (LOAD FLAG WORD ADDRESS) E F 21 01

2 F 22 O7 (LOAD BIT CODE)\* ENTR

3 F 23 07 (SET BIT) Key 1E (RESET BIT) Key 0E

\*To determine code:

Find bit in chart

Number above bit (4,2 or 1) is code.

(Used in correct octal position)

For more than one bit, add codes.

Examples: Bit Code 3 4 6 40 7 100 15&13 50000

DATE 3/22/71

#### CHANGE DATA IN ERASABLE MEMORY

V21 NO1E (ADDRESS) E
R3 ADDRESS
Load New Data in R1 E
N15E (For next succeeding word)
ENTR (For each succeeding word)

DATE 3/22/71

I FLAGWORD F

SSIGNMENTS !

									<u></u>				<del> </del>			
LAGNORE	ADDMESS	4	5	l	4	2	1	4	2	l	4	5	1	•	2	L
		B i T 15	B# 14	DIT 13	B   T 12	BIT 11	BIT 10	8(1.9	BIT 0	817.7	a)T 6	BIT 5	BIT 4	OH 3	817.2	DIT 1
•	74		JSWITCH	MIDFLAG	MOONFLAG	FARHOR MORFHOR)	2MEASURE	MEEDLEFLG	IMUSE	RNOVZFLG	SGTMK (RSSFLAG)	FZRTE	CYCAUFLG	FREEFLAG	AMOONFLG	P2WLAG
1	15-	ZJETSFLG ONJETSFLG)	STIKFLAG	ERADCOMP (ERADFLAG)	NODOPOL	RCSBURN RNG2FLG1	LMTRG (TARGIFLG)	LMKTRG (TARG2FLG)	CSMUPDAT IVEHUPFLGI	UPDATFLG	IOLEFAIL	TRACKFLG	MARKFLG	ITERISW (SLOPESW)	GUESSW	AVEGFLAG
7	ж	DRIFTFLG	RZIMARK	2205FFLG	P21FLAG	SYEERSW	SKIPVHF	IMPLASW	XDELVFLG	FIRSTFLG HAVEELEV ETPIFLAG)	FINALFLG	LMACTELG (AVELAG)	PFRATFLG	P24MKFLG	CALCMANZ	NODOV37 NODOFLAGI
3	n	V50N18FL	GLOKFAIL	REFSMFLG	LUNLATLO (LUNAFLAG)	P22MKFLG	VRAG	POOFLAG	PRECIFLG"	CULTFLAG	ORDWFLAG	STATEFLG	CONICINT	CSMINTSW NINTFLAGI	9DIMMMAT IDGCR FEGI	WMATINT IDIMOFLAG
4	100	MARKIDLE (MRKIDFLG)	PRIOIDLE IPRIODELE I	NORMIDLE MRMIDFLG)	PDSPFLAG		NORMNAIT NWAITFLGI		NRMNTKEY NRMNVFLG)	PROWTKEY (PROMVFLG)	PINBRFLG	RUPTMARK MRUPTFLG	RUPTNORM MRUPIFEG)	MKOVNORM (MKOVFLAG)	VMFLAG	XDSPFLAG
5	ioi	DSKYFŁAG	RETROFLG	SLOWFLG	PZICALIB IVS#LAG)	FSTINCRP (INCORFLG)	NEWTFLAG	DMENFLG	CMCCOMP (COMPUTER)	ENGONFLG	3AXISFLG	BKUPLO IGRRBKFLG)		(SOLNSW)	MGLVFLAG	RENOWFLG
6	102	DAPBITE	DAPS172	ENTRYOSP STRULLSW	CMDAPARM	GAMDIFSW	GONEPAST	RELVELSW	EGSW (KNOWNFLG) LDNKNOWN	NOSWITCH	HIND	INRLSW	LATSW	. 05C SW	CMDSTBY	GYMDIF
7	103	TERMIFLG	ITSWITCH	IGNFLAG	ASTMFLAG	TIMRFLAG	NORMSW	RVSW	GONEBYTG IGONEBY)		V37FLAG	·	UPLOCKEL	VERIFLAG	LMATTCH (ATTCHFLG)	TFFSW
\$	104	RPQFLAG	NEWLMFLG	NEWIFLG	CMOONFLG	LMOONFLG	ADVTRK	UTFLAG	SURFFLAG	INFINFLG	ORDERSW	APSESW	COGAFLAG	VMONFLG	RETFLAG	3605W
•	105	SWIOVER	P2&LAG	V#ZEMFLG	MAXDERG	VMFLAG	SAVECFLG	VIFERRAG	VHFSOURC (SOURCFLG)	RZZCAFLG	NZZERNOS NZZERNITI	QUITFLAG	RBIFLAG	MIDVIAG	MIDAVFLG	AVEMIDSW
)Ø	106	PCMANFLG	INTINUSE (INTILAG)	INTGRAB MEINTFLG)	REJETFLG	HOSUPFLG	BURNFLAG	RANGFLAG	PINFLAG	AUTOSEQ		MANEUFLG	PTYPSELG	TPIMOFLG	AULTKALG	PCFLAG
11	107	532. 1F1	\$32. VF2	SX. IFM	\$12. IF36				AZIMFLAG	HAFLAG	CSISPLAG					

```
MONITOR OF INPUT/OUTPUT CHANNELS
```

```
V11 N10E

F 11 10 (LOAD CHANNEL ADDRESS) E
R1 Octal Contents of Specified
Channel

CHANNEL SET/RESET
Note: Only channel no's <30
may be used
```

V25N 07E F 21 07 (LOAD CHANNEL NUMBER) E

2 F 22 07 (LOAD BIT CODE)\* ENTR

F 23 07 (SET BIT) Key 1E (RESET BIT) Key 0E

\*To determine code:

Find bit in chart

Number above bit (4,2 or 1) is code.
(Used in correct octal position)

(Used in correct octal position)
For more than one bit, add codes.

Examples:

Bit Code 3 4 6 40 7 100 15&13 50000

DATE 3/22/71

# SC CONT/MODE AND OPTICS MODE OVERRIDE

V21 N1E, 374E, A00DO ENTR

A=0: Use switches (SC CONT and CMC MODE)

A=1: CMC FREE A=2: CMC HOLD

A=3: CMC AUTO

A=5,6 or 7: SCS

D=0: Use switches (OPTICS)

D=1: OPT CMC D=2: OPT ZERO D=3: OPT MAN DATE 3/22/71

#### CMC INPUT/OUTPUT CHANNELS

			1	2		4	2	1	1	2	1	4		1	4	2	1
СН	MNEE	NAME	R11   5	R17 14	1113	817 12	ALT 11	£17 10	PITG	RITA	RIT 7	B116	A105	BIT 4	RIT 5	B11 2	RIT 1
	1	L	<u> </u>		SHET PIRSE			CP RE	GISTER L. BITS	16-1	<b>.</b>	····		ļ	<u> </u>	ļ	
	7	Q	SHET PINESE CP REGISTER		GISTER O. BIT		<u></u>			<u> </u>	<b>ļ</b>	<del></del>	<u> </u>				
(r	1	SUSCALAR			SIRT PHISE		<u> </u>	<u> </u>	iner scaler (		15 14 1	· · · · · · ·		<del> </del>	<del></del>	<del></del>	
	1	I DSC ALAR			SOFT PULSE			TO: A -Ot	ROFR SCALER (	<del>-</del> `	IS 14 1			ļ	<u> </u>	Y P	
	5	PV JETS						i	SIM	4 Y - Y 'Y	Y > Y'Y	Y Y'Y	+ Y + Y Y	1111	P Y YY	P . 7	+P V + Y'Y
							<u> </u>	<u> </u>	C/M	· Y/W - Y + P	• Y'7 Y-P	Y''  - Y - P	· Y'Y · c · P	P+/			+2 +R
OUT	6	ROLL JETS	<u> </u>						SIM	+Y -R	·Y +R	-Y-R	• Y •R	+7-R -R-Y4+7	-Z +R +R +Y^Y -7	7 R R-Y1-Z	•R•V*•7
	Ì		l		<u> </u>	. <u></u>	ļ		CIM					-K-1,4-5	*# * 1 * 4 * 7	- K-1 /-Z	
ÇP	7	<b>SUPERBUX</b>						<u> </u>	<u></u>		FE7	FEB	f65		051.434	DEL AN	## 1 A \
	10	ουτο	HELAN ADAS 4	RELAY ADRS )	ADRS 2	RELAY ADR'S I	81111	Ritio	85143	Billy	RELAY BIT'S	BITO	BFF4Y	BFFAY	BFFY	BILZY	8114
	ıı	DSAt MOUT			SPS ENGINE ON			CAUSION RESET	TEST CONNECTOR COYNET		OPERATOR ERROR LAMP	YN FLASH	KEY LAMP	TEMP CAUTION LAMP	UPLINK (AANP	COMP ACTY LAMP	ISS WAREING
าบา	12	CHANIS	ISS THEYOU PLAY COMPLETE	EUV OFF	SIV B (N) SIV B		OISABLE BACICS	ZERO OPTICS	SIV A INABLE ENABLE	TVC ENABLE	<u>" "" " " " " " " " " " " " " " " " " "</u>	MABLE AND ERROR COUNTER	ZERO LSU COUS	COARSE ALIGN ENABLE		ENA BLE OPT ERROR COUNTER	ZERO OPTICS COURS
	15	CHAN13	ENABLE TORIJET	RESET 12	RESET TO 45 31R	PESET 31A	ENABLE	TEST ALARMS		BMAG CTR ENABLE	DNINK	BLOCK BLOCK	CAPLINK	RNG DAIT	RNG UNIT	RNG UNIT SEL B	RECUPLIT SEC. C
	10	CHANI4	DRIVE	DRIVE FOUY	ORIVE COUZ	DRIVE CDU	COUS.	CYRO 4CTY	GYRC	GYRO	CYRO	GYRO ENABLE					<b>SEH</b> I.∧K
	15	MNKEY IN	<del> </del>	<del></del>			1	İ			I	· · · · · · · · · · · · · · · · · · ·	MKEYS	MKEY4	MK{Y}	MKEY2	VIK[A1
	_	HAVKEY IN	<u></u>			1.31.557					MEYECT	MARK	NKEYS	NKEY4	NKEY3	MKEY?	NKEY)
	×	· CHAN30	TEATP IN COMATS	ISS TURNO! REOUEST	JAN1	1CDIr FAIL	EME:	S/C CONTRUL OF SAT	OPERATE		optics		LIFT OFF	SI YARAM	SPSDY	SMICM SCPARATE	ULLACE THRUSS PRESS
IN.	31	• CHAN31	CONTROL CONTROL	f REE	HULD	Z IRANS	irans	TRANS	TRANS	IRANS	TRANS	RHC -ROLL	RHC •RML	RHCW	RHC VAW	PHC PITCH	RHC ◆PITC+
	×	- CHAN32		PROCEED			ATTACHED		<u> </u>			MINIM TROYL	MNI-M -ROLL	MNFM -YASY	MULM	-PITCH	MNIM +PIICH
	"	- CHAN33	nsc A(ARM	COMPUTER VARNING	PIPA	PNIK	UPLYK YOO FAST	NA FINK RFUCK					8M6814	SPITES		ļ	
	и	DEITME								WO WORDS	ļ <u></u>			<del> </del>	ļ. <u></u>	<del> </del>	<del></del>
OUT	*	SNTND					<u> </u>	<u></u>	SECOND OF	IWO WORDS	ļ. <del></del>			<del>                                     </del>	<del></del>	7	<u>,</u>
	· INV	RTED LOCIC	15	10	13	12	11	10	•	8	<u> </u>	<u>, b</u>	5		L,		1

1-19 1-19

```
G
1-20
```

# VHF RNG DSKY DISPLAY VHF RNG - on (up) P20 - running in opt 0 or 4

V87E V16 NO2E 3703E R1=XXX.XX nm (max R1 = 163.83; if R1 neg, RNG = 327.67 - R1 )

#### G&N RECOVERY PROCEDURES

#### Recoveries:

- if PO6 inadvertently selected: (with F 50 25 00062)
  - 1. a. Press PRO to STBY, press PRO again to F 37

or b. V37E 00E

- 2. V25 N7E, 76E, 40000E, 1E (set DRIFT flag)
- 3. V25 N7E, 77E, 10000E, 1E (set REFSMMAT flag)

### if V36 inadvertently keyed in:

- 1. V25 N7E, 76E, 40000E, 1E (set DRIFT flag)
- 2. V48
- 3. V46
- 4. Perform General System Checkout as necessary
- if GO JAM performed:
  V74 when convenient, see V36

# if All 8's appear spontaneously on DSKY

- V99 N99
- 2. V25 N1E
- 3. 00000E
- 4. +99999E
- 5. +99999E
- 6. +99999 CLR, CLR, CLR
- 7. 00000E
- 8. 00000E
- 9. 00000E

If OPR ERR, begin again

#### General System Checkout:

Get to POO by one of the following:

- 1. V37E 00E
- 2. V96E
- 3. V36E V96E
- 4. Simultaneously press RSET and MARK REJECT (GO JAM), wait 15 sec, V37E 00E

OPT ZERO - OFF OPT ZERO - ZERO

#### Check for Reasonableness

- 1. V82 with both options
- 2. V83
- 3. P21 NAV CHECK
- 4. P52 check auto optics positioning If nominal, continue; if not, perform P51
- 5. CMC Self Test

THIS PAGE INTENTIONALLY BLANK

```
G
1-23
```

# V35 - DSKY CONDITION LIGHT TEST

Key V37E OOE (required) DSKY - POO

Key V35E

Monitor the following events a. All DSKY condition lts - on

- b. ISS warning lt on CMC warning lt - on
- c. All DSKY numerical windows display ' Sign positions in R1,R2, R3 show + V, N windows flash

Wait 5 sec

- d. All DSKY warning Its off
- e. ISS lt off CMC lt - off V, N quits Flashing
- f. POO will be displayed.
- g. Key RSET (Don't call ave. G for 15 sec)

# V41 N91 COARSE ALIGN OCDU's

CMC - on G/N PWR OPTICS - on OPT MODE - CMC OPT ZERO - OFF

V37E00E

2 V41N 91E

```
1 - 24
3
     F 21 92
               SHAFT, TRUN NEW OCDU (.01°,.001°)
               Load desired shaft and trun
4
               OPTICS DRIVE TO SPECIFIED ANGLES
       41
               V41 N20 COARSE ALIGN ICDU's
                    CMC - on
                    ISS - on
               V41N 20E
     F 21 22
               NEW ICDU ANGLES RPY
                                                  (.01^{\circ})
               Load desired ICDU angles
3
       41
               NO ATT 1t - on
                          *POSS PROG ALARM
                          *V5 N9E 211 Coarse align error*
                         *Repeat V41 N20
               V40E
               NO ATT lt - off
               Wait 10 sec
5
               V37E XXE
               V42 GYRO TORQUING
                    CMC MODE - FREE
               V42E
     F 21 93
               LOAD DELTA GYRO ANGLES (XYZ)
                                                (.001°)
                 (In flight - 90° max)
       42
               NO ATT It - off
               Monitor Gyro Torquing on FDAI
```

G

4

G 1-25

#### V48 - DAP DATA LOAD & ACTIVATE PROCEDURE

1 V48E F 04 46 R1 ABCDE\* R2 ABCDE

VEHICLE CONFIG	QUAD A/C FOR X	QUAD B/D FOR X	ERR DEADBAND	RATE SELECT
O = No DAP	0 = Fa11 A/C	0 - Fa11 8/D	0 • +0.5°	0 • 0.05°/sec
1 = CSM	1 = Use A/C	1 = Use B/D	1 + +5.0"	1 = 0.2°/sec
2 - CSM & LM				2 = 0.5°/sec
3 = CSM & SIVE				3= 2.0°/sec
6 = CSN & LN	_			
(Ascent Stg only)	•			
Rall Quad Select	Quad A	Quad 8	Quad C	Quad D
0 = Use 8/0	G=Fail	- 0=Fail	O=Fail	0=Fail
1 = Use A/C	1=Use	1=Use	1≠Use	1=Use
	0 = No DAP  1 = CSM 2 = CSM & LM  3 = CSM & SIVE 6 = CSM & LM (Ascent Stg only)  Roll Quad Select  0 = Use 8/0	O = No DAP  1 = CSM 2 = CSM & LM 3 = CSM & SIVE 6 = CSM & LM (Ascent Stg only)  Roll Quad Select Quad A  O = Use 8/0 Q=Fail	0 = No DAP	0=No DAP

PR<sub>0</sub>

2 F 06 47 CSM WT, LM WT (1bs,1bs Load correct values\* PRO

3 F 06 48 TRIM ENGINE GMBL (.01°) Load correct values PRO

If activation req'd (Changing to or fro NO DAP or CSM & SIVB DAP): CMC MODE - FREE V46E

\* For SPS burn w/Ascent Stage, A=1, & load total mass in R1 of N47

```
G
                             1-26
                     CREW DEFINED
                                   MANEUVER
                      CMC - on
                      ISS - on
                      SCS - operating
                 V37E 00E
                 V62E
                 V49E
                NEW ICDU ANGLES RPY
     F 06 22
                                                      (.01°)
                 Load desired angles
                 PR0
3
     F 50
                REQ MNVR TO FDAI RPY ANGLES
                                                      (.01^{\circ})
           (AUTO)
                      BMAG MODE (3) - RATE 2
                      SC CONT - CMC
                      CMC MODE - AUTO
                 PR<sub>0</sub>
           (MAN)
                      MNVR - To 5
4
       06 18
                AUTO MNVR TO FDAI RPY ANGLES
                                                      (.01°)
5
     F 50 18 REQ TRIM MNVR TO FDAI RPY ANGLES
           (TRIM) PRO To 4
           (BYPASS) ENTR
                V54 BACKUP OPTICS MARK
                      P20 - running in opt. 0 or 4
                        and tracking
                 V54E
                      *PROG ALARM
                      *V5 N9E - 00406
                      *Not rend tracking*
     F 06 94
                Backup SHAFT, TRUN
                                                 (.01^{\circ},.001^{\circ})
                 Load angles
                 PR<sub>0</sub>
```

```
1-27
F 53 45
          PERFORM BACKUP MARK
          MARKS, TFI, MGA or code
                               (marks,min-sec,.01°)
          RHC - Align target on alt. LOS
          ENTR (V86E to reject - within 10 sec)
               *POSS F 06 49 AR, AV, source code*
                              (.01NM,.1fps,0000X)*
               *(REJECT) V32E
               *(ACCEPT) PRO
          When marking complete:
          PRO (return to Program in process)
          V55 - CMC TIME UPDATE
          V55E
F 21 24
          LOAD A CMC TIME
                                    (hrs,min,.01sec
          V57 DISPLAY FULTKFLG CONDITION
          V57E
F 04 12
          R1 00004 Specify FULTKFLG setting
          R2 00000 VHF and Optics working
             00001 VHF or Optics working
          Load desired value in R2
             (If display erased upon ENTR,
             verify by repeating V57)
          PR<sub>0</sub>
          V64 HI GAIN ANTENNA POINTING
          V64E
F 06 51
                                         (.01°,.01°
          RHO, GAMMA
          HGA TRACK - MAN
          Set in required P&Y Angles
          S BD ANT - HI GAIN
          HGA TRACK - AUTO
          PRO
```

G

```
G
1-28
```

```
V67 - W-MATRIX ERROR DISPLAY
         V67E
F 06 99 POS ERR, VEL ERR, OPT CODE (ft,.1fps)
                         R3 00001=Rend
                           (must do V93E to reinit.)
                            00002=0rbital
                            00003=Cislunar
                             00000=No Reinitialization
               Load desired data
               PR0
          V74 CMC DOWNLINK
          V74E (Places erasable memory on downlink)
          V82 ORBIT PARAMETER DISPLAY
     Note: If high CMC activity (e.g. P4Xw.Lambert)
              POSS PROG ALARM and restart (no light)
              -code 31201 or 31202 stored
          V82E (If AVE G On, Go To 3)
          Rl 00002 Specify Vehicle
F 04 12
          R2 00001 CSM
             00002 LM
          PR0
F 06 16
          GET EVENT
                                  (hrs,min,.01sec)
          Load desired time (present time,
                             use all zeroes)
          PRO
F 16 44 HA, HP, TFF (.lnm,.lnm,min-sec)
```

- (RECYCLE) V32E To 2 (Not Nec If AVE G On)
  (ΔR-miss dist DISP-P11 & POO) N50E To 4
  (TF PER) N32E To 5
  (EXIT) PRO
- 4 F 16 50 ΔR (miss dist), HP, TFF(.lnm,.lnm,min-sec, KEY RLSE To 3
- F 16 32 TIME FROM PER (Useful only if TFF=-59B59)
  (hrs,min,.01sec)
  KEY RLSE To 3

```
DATE 3/22/71
```

```
1 - 29
          V83 RNDZ PARAMETER DISPLAY #1
     Note: If high CMC activity (e.g.P3X or P7X w
              P20), POSS PROG ALARM and restart (no
              light)-code 31201 or 31202 stored
            If alt above earth or moon >432 nm:
              P23 running - do not key V83 (or 85)
              P23 not running:
                Wait for no integration (COMP ACTY
                 not on continuously)
                 V96E (selects P00)
                V83E (or 85E) - perform routine
                V37E 00E
          V83E
          RANGE, RANGE RATE, THETA (.01nm, .1fps, .01°
F 16 54
          PR<sub>0</sub>
          V85 - RNDZ PARAMETER DISPLAY #2
     Note: See V83 restrictions
          V85E
          RANGE, RANGE RATE, PHI (.01nm,.1fps,.01°
F 16 53
          PR0
          V87 - SET VHF RNG FLAG
          VHF AM B - DUPLEX
          VHF RNG - on (up)
          P20 - running in opt. 0 or 4
          V87E (starts VHF range sampling)
          V88E (TERMINATE)
```

or V37E XXE

G

	1-30					
				<u>V89</u> -	RENDEZVOUS FINAL ATTITUDE CMC - on ISS - on SCS - operating	
1				V37E V62E	00E	
2	F	06	78		YAW, AXIS PITCH axis to be pointed at LM	(.01°)
3	F	06	(AUTO	) MNVR	FDAI RPY ANGLES R) PRO SPLAY) V32E	(.01°)
4	F	50	18. (AUTC	)) PRO	INVR TO FDAI RPY ANGLES BMAG MODE (3) - RATE 2 SC CONT - CMC CMC MODE - AUTO MNVR To 6	(.01°)
5		06	18		MNVR TO FDAI RPY ANGLES	(.01°)
6	F	50	(TRIM	REQ M 1) PRO T NSS)		(.01°)

G

```
G
1-31
```

### V90 - OUT-OF-PLANE DISPLAY

```
F 06 16 GET EVENT (hrs,min,.01sec)
Load desired time (present time,
use all zeroes)

PRO

2 F 06 96 Y(CSM),YDOT(CSM),YDOT(LM)
(RECYCLE) V32E to 2
(EXIT) PRO

(hrs,min,.01sec)
(load desired time (present time,
use all zeroes)
```

# V91 - COMPUTE BANKSUM CMC - on (req)

V37E 00E

V91E

F 05 01 R1 - Sum of all cells in bank
R2 - Bank number
R3 - Bugger word
Verify R1=R2 or R1+R2=77777 (If not, rcd
(NEXT BANK) PR0
(TERM) V34E

# V93 - ENABLE W-MATRIX INITIALIZATION

V93E

# G&C SYSTEMS

```
IMU POWER UP PROCEDURE
```

LOGIC POWER 2/3-on FDAI POWER - BOTH FDAI SELECT - 1/2 CMC MODE - FREE

G/N IMU PWR - on (up)
NO ATT lt - on (90 sec)
NO ATT lt - out
Wait 15 sec (To allow PIPA inhibit reset)

2

V37E XXE

\*If CMC not available: \*

\* G/N IMU PWR - on(up) \*

\* Wait 90 sec \*

\* IMU CAGE - on(up) 5 sec,\*

\* then release \*

## IMU POWER DOWN PROCEDURE

CMC MODE - FREE

G/N IMU PWR - OFF \*ISS warning\* \*RSET \* G 2-2

#### MEASUREMENT & LOADING OF PIPA BIAS

```
DET - RESET
                    SC RATES <0.1°/sec
                    CMC MODE - FREE
              V25N 21E, E,E,E/Start Event Timer
3
              V06 N21 (do not ENTR)
      06 21 XYZ PIPA COUNTS
4
              At T + 1:04 - ENTR
    Record (X) R1 (Y) R2 (Z) R3 (+000AB)
5
            V21N 01E (use same sign as above)
    F 21 01 1452 E (CALCULATED X BIAS) E,E,(+AB000)
              1454 E (CALCULATED Y BIAS) E,E
               1456 E (CALCULATED Z BIAS) E
               CMC POWER UP PROCEDURE
              PRO, hold (~5 sec) until STBY lt - out
                    (repeat, if necessary)
                   *CMC warning, RESTART, PROG ALARM*
                    *RSET and continue
    F 37
              OOE
              PO6 - CMC POWER DOWN PROGRAM
               V48E
    F 04 46
              Load O (NO DAP) in left digit of R1
               PRO, PRO, PRO
               V46E
         V37E 06E
    F 50 25 00062 CMC PWR DN
              PRO, hold (~5 sec) until STBY lt - on
                   (repeat, if necessary)
```

			CMC SELF CHECK
	1	F 21 01	V25 NO1E, 1365E E,E,E
	2	15 01	V15 NO1E, 1365E R1 NUMBER OF ERRORS R2 NUMBER OF TESTS STARTED R3 NUMBER OF TESTS SUCCESSFUL
	3		V21 N27E 10E SELF TEST FIXED & ERASABL (4E SELF CHECKS ERASABLE 5E SELF CHECKS FIXED)
	4	15 01 (TERM)	TEST SUCCESSFUL WHEN R2>3 (78 sec mini  * IF PROG 1t - On
			OPTICS POWER UP PROCEDURE  Verify optics manual drive diseng
17	1		G/N PWR OPTICS - on (up)
3/22/71	2		OPT ZERO - OFF OPT ZERO - ZERO (15 sec)
			OPTICS POWER DOWN
DATE	1		G/N PWR OPTICS - OFF
			SCT MANUAL DRIVE PROCEDURE Verify G&N PWR OPTICS - OFF
	1		Insert tool E and rotate ∿1 rev CC to engage drive (socket backs ou
	2		Drive optics either direction (∿1 rev/degree)
	3		To disengage, push and rotate ∿l rev CW(button will remain flu

G 2-3 G 2-4

AUTO RCS SELECT (16) - OFF
BMAG MODE (3) - RATE 2
CMC MODE - FREE
SC CONT - CMC
cb SCS LOGIC PWR (4) - close
ΔV CG - as required
LOGIC PWR 2/3 - on (up)
SIG COND/DRIVER BIAS PWR (2) - ACI
SCS ELEC PWR - GDC/ECA (88 watts)
FDAI PWR - OFF (verify)
BMAG PWR (2) - ON (145 watts)
FDAI PWR - BOTH (58 watts)
AUTO RCS SELECT (16) - enable

SCS POWER DOWN

EMS FUNCTION - OFF EMS MODE - STBY FDAI SCALE - 5/1 FDAI SELECT-1/2 FDAI SOURCE - ATT SET ATT SET - GDC MAN ATT (3) - MIN IMP ATT DB - MAX RATE - LOW AUTO RCS SELECT (16) - OFF TRANS CONTR PWR - OFF RHC PWR NORMAL (2) - OFF RHC PWR DIRECT (2) - OFF CMC MODE - FREE BMAG MODE (3) - RATE 2 SCS TVC (2) - RATE CMD .05G sw - OFF  $\alpha/Pc sw - Pc$ TVC GMBL DRIVE (P&Y) - AUTO BMAG PWR (2) - WARMUP (105 watts) TVC SERVO PWR (2) - OFF FDAI PWR - OFF LOGIC PWR 2/3 - OFF SCS ELEC PWR - OFF SIG COND/DRIVER BIAS PWR (2) - OFF

```
Key V16 N20E (present IMU angs)
           FDAI SELECT - 1
           FDAI SOURCE - ATT SET
           ATT SET - GDC
           ATT SET dials - null FDAI 1 error
                            needles
           Key VERB when nulled (freeze display
           Record from DSKY:
           Record ATT SET dials:
     EMS AV TEST & NULL BIAS CHECK
           EMS MODE - STBY
           EMS FUNC - AV SET/VHF RNG
           SET \Delta V ind to 1586.8 fps
           EMS MODE - NORMAL
           EMS FUNC - AV TEST
             SPS THRUST Lt - on/off (10 sec)
             \Delta V ind. stops at -0.1 to -41.5
           EMS MODE - STBY
           EMS FUNC - AV SET/VHF RNG
           SET \Delta V ind to - 100.0 fps
           CMC MODE - FREE (Until meas complete
       or BMAG MODE (3) - RATE 2
           EMS FUNC - \Delta V (wait 5 sec)
           Start DET
00:00
          EMS MODE - NORM
01:40
          EMS MODE - STBY
                If \Delta V < 1 fps, do not bias
                If \Delta V > 1 fps but <10 fps, bias
                  if desired
                If \Delta V > 10 fps, EMS is NO-GO
          *Bias check is invalidated by EMS
              FUNC - OFF*
```

G

2-5

SCS - operating

CMC - on

IMU - on

SCS ATTITUDE REFERENCE COMPARISON

If SIVB SEPARATED: Damp vehicle rate

 $(.01^{\circ})$ 

G

3-1

4 - Rendz, 3-axis, p. G/3-2

P20 - UNIVERSAL TRACKING

1 - Celestial body, VECPOINT, p. G/3-1

5 - Celestial body, 3-axis, p. G/3-1

(1:VECPOINT; 5:3-axis)

CMC - on (req)

Options 1 & 5 - Celestial Body

ISS - on and aligned (req)

BMAG MODE (3) - RATE 2

P20 - OPTIONS

2 - Rotate, p. G/8-1

```
AXIS YAW, AXIS PITCH, OMICRON
            F 06 78*
                       Load values (OMICRON ignored for opt 1)
                       Sim. Bay: 90°, 52.25°
3/22/71
                       OMICRON SEF: 180
                               BEF:
                                     0
                       PR0
 DATE
            F 06 79*
                       R2 DEADBAND
                       Load d.b.
                       PR0
                       R1 000DE STARCODE
            F 01 70
       4
                       Load code
                       PRO (DE \neq 00 to 6)
                       CELESTIAL BODY VECTOR
       5
             F 06 88
```

Load vector

(If required mnvr <10°, go to 7)

**PRO** 

V37E 20E

R2 00000

PR<sub>0</sub>

F 04 06 R1 00024 TRACKING OPTION

Load 1 or 5 in R2

DATE 3/22/71

 $(.01^{\circ})$ 

6 F 50 18 MNVR request

(AUTO) SC CONT - CMC CMC MODE - AUTO PRO

06 18 RPY (.01°) to 6 when MNVR complete

(MAN) RHC - MNVR to N18 angles

When att. acceptable

SC CONT - CMC CMC MODE - AUTO

ENTR

7

\*POSS UPLINK ACTY 1t \*
\*(Mnvr >10° req'd) \*
\*To reestablish F 50 18\*
\* Key V58E \*

CMC continues tracking center of celestial body \*CMC will react to changes in N78 and N79 (May take 2 sec)

To terminate P20 - V56E

P20 - UNIVERSAL TRACKING

Options 0 & 4 - Rendezvous (0:VECPOINT; 4:3-axis)

CMC - on (req)

ISS - on and aligned (req)

SCS - on (des)

BMAG MODE (3) - RATE 2

G/N OPT PWR - on

OPT ZERO - OFF then ZERO (15 sec)

OPT MODE - CMC

Note: For VHF RNG display see p G/1-20

```
3/22/71
```

```
V37E 20E
     F 04 06
               RI 00024 TRACKING OPTION
               R2 00000
               Load 0 or 4 in R2
               PRO
     F 06 78*
               AXIS YAW, AXIS PITCH, OMICRON
               Load values (OMICRON ignored for Opt. 0)
               PR0
     F 06 79* R2 DEADBAND
                                                    (.01°
               Load d.b.
               PRO
               (If required mnvr <10°, go to 5)
    F 50 18 MNVR request
                                                    (.01°
          (AUTO) SC CONT - CMC
                 CMC MODE - AUTO
                 PR<sub>0</sub>
       06 18 RPY (.01°) to 4 when MNVR complete
          (MAN) RHC - MNVR to N18 angles
       When att. acceptable
                    SC CONT - CMC
                    CMC MODE - AUTO
                    ENTR
5
                          *POSS UPLINK ACTY It
                         *(Mnvr >10° req'd)
                          *To reestablish F 50 18*
                          * Key V58E
```

OPT ZERO - OFF

```
G
3-4
```

CMC continues LM attitude and optics tracking \*CMC will react to changes made to N78 and N79 (May take 18 sec)
To start VHF marks - V87E (V88E to stop)
MARK at will (Reject within 10 sec)

will (Reject within 10 sec)
\*POSS F 06 49 ΔR, ΔV, source code\*
\* (.01nm,.1fps,0000X)\*
\*(REJECT) V32E
\*(ACCEPT) PR0
\*

For backup marks, see V54 (p G/1-26)

To terminate P20 - V56E OPT ZERO - ZERO G/N OPT PWR - OFF

Note: To display N49 for each measurement:

V1 N1E 2002 E Rcrd: R1 V21 E 2002 E 77776 E

To return:
V21 N1E
2002 E
Load previously recorded value

```
G
3-5
```

# P21 GROUND TRACK DETERMINATION CMC - on (req)

V37E 21E F 04 06 R1 00002, Specify Vehicle R2 00001, CSM or 00002, LM PRO

F 06 34 GET LAT,LONG (hrs,min,.01sec)
Load desired GET (for present time, use
all zeroes)
PRO

F 06 43 LAT,LONG,ALT (.01°,.01°,.1nm) (RECYCLE) V32E to 2 (Increment GET 10 min) (EXIT) PRO

4 F 37 XXE

NOTE: Additional Information is availab by V6 N73E N73 Alt, VEL, GAMMA(10nm, fps,.01°

```
G
3-6
```

```
P22 - ORBITAL NAVIGATION
               CMC - on (req)
                ISS - on and aligned (req)
                SCS - on (reg)
                BMAG MODE (3) - RATE 2
               G&N PWR OPTICS - on
                COUPLING - RESOLVED
               SPEED - MED
               OPT ZERO - OFF then ZERO (15 sec)
               OPT MODE - CMC
               To remove rate limit: V21N1E,1341E,E
          V37E 22E
F 06 45 R3=MAX MGA
                                            (.01°)
     (REJECT) R3>60° to P52
               R3<60° IMU ALIGNED
          MNVR TO SIGHTING ATTITUDE
                  Roll to keep shaft axis >10° from
                  plane defined by X axis & LOS to
                  LMK (For 60nm alt, LMK >10nm from
                  gnd track requires no roll)
     (MAN)
               OPT MODE - MAN
               OPT ZERO - OFF
          PRO (To 3 for earth orbit)
     (AUTO) OPT ZERO - OFF
     PRO (To 3 for earth orbit)
F 05 70 (lunar orbit only)
          R2 ABCDE 1mk code
          Load 1mk code: SITE = 10001
                         KNOWN = 10000
                         UNKN = 20000
            A=1(known), 2(unknown)
            B=INDEX OF OFFSET designator
            C=not used
      DE=LMK ID (0,1, 5X are legal)
          IF A=2
               OPT MODE - MAN
          PRO to 5
          IF A=1 & DE≠00
      or
          PRO to 4 (To 5 if OPTICS - MAN)
          IF A=1 & DE=00
      or
```

PRO to 3

```
3-7
3
     F 06 89
                LAT, LONG/2, ALT
                                     (.001°,.001°,.01nm)
                Load 1mk coords
                PRO (To 5 if OPTICS - MAN)
       06 92 SHAFT, TRUN NEW OCDU
4
                                             (.01°,.001°)
                           *F 05 09 00404
                                                (TRUN>90°)
                           * MNVR to acquire
                                 PR0
                           * or V34E, F 37
                Establish proper pitch rate
                     OPTICS MODE - MAN
  F 51
5
                MARK REQUEST (Avoid 1mk near horiz)
                MARK
                  After sufficient MARKS:
                           *After 5 MARKS:
                           *F 50 25 00016 TERM MARKS*
                PR<sub>0</sub>
6
     F 05 71
                R2 ABCDE LMK DATA
                Load 1mk code (if nec)
                  A=1 if KNOWN LMK
                  A=2 if UNKNOWN LMK
                  B=INDEX OF OFFSET DESIGNATOR
                     (If only 1 mark made, insure B=0)
                  C=Not used in P22
                 DE=LMK ID NO. (0,1 are valid)
                PRO - if A=2 (or A is 1 & DE = 01) to 8
     F 06 89 LAT, LONG/2, ALT
                                    (.001°,.001°,.01nm)
                PR0
8
     F 06 49 \Delta R, \Delta V (SV PARA)
                                            (.01nm,.1fps)
           (RECYCLE) V32E to 2
(ACCEPT) Hold for 30 sec
                PR<sub>0</sub>
9
     F 06 89
               LAT, LONG/2, ALT LMK ID
                                     (.001°,.001°,.01nm)
           (DON'T STORE) PRO to 2
           (STORE-CODE 01) V32E to 2
           (terminate Prog) V34E
```

G

```
G
                          3-8
10 F 37
               XXE
                    OPT ZERO - ZERO
                    G/N PWR OPTICS - OFF
               To restore rate limit (CDU transient
                 detection): V21N1E,1341E,5E
               P23 - CISLUNAR MIDCOURSE NAV MEASUREMENT
               CMC - on
               SCS - on
               ISS - on & aligned
               G/N PWR OPTICS - on (30 min prior)
               OPT ZERO - OFF then ZERO (15 sec)
               OPT MODE - CMC
               V37E 23E
2
     F 50 25
                    R1 00015 ACQ CALIBRATION STAR
          (MAN MNVR)
                         Mnvr veh. to point LLOS at body
                         ENTR to 7
          (AUTO MNVR)
                         PRO
3
     F 01 70
               R1 000DE STAR CODE
               Load desired code
               PRO (to 5 if DE \neq 00)
4
     F 06 88
               CELESTIAL BODY VECTOR
               Load desired vector
               PR0
5
     F 50 18
               REQUEST MNVR TO FDAI R,P,Y
                                                  (.01°)
               (AUTO)
                         SC CONT-CMC
                         CMC MODE - AUTO
                         BMAG MODE (3) -RATE 2
                         PRO to 6
               (MAN)
                         V62E
                         MNVR to 5
```

6 06 18 AUTO MNVR FDAI R, P, Y (.01°)
AUTO MNVR COMPLETE RETURN TO 5

(BYPASS) ENTR to 7

		G 3-9
7	F 59	REQUEST OPTICS CALIB (BYPASS) ENTR to 9 (CALIB) OPT MODE - MAN OPT COUPLING - DIR SPEED - LOW OPT ZERO - OFF SUPERIMPOSE LLOS ON SLOS MARK
8	F 06 87	R2 TRUN BIAS (.001°) (Repeat until 2 measurements agree within .003°) For manual load:     V22 N94E     XXXXXE (RECALIB) MARK to 8 (INCORP CALIB) PRO
9	F 05 70	R1 000DE STAR ID R2 00C00 LMK ID R3 00CDO HOR ID
		STAR/ENH STAR/LNH STAR/EL
		000DE 000DE 000DE 00000 00000 00100 00110 00210 00000
		STAR/EFH STAR/LFH STAR/LL
		000DE 000DE 000DE 00000 00000 00200 00120 00220 00000
		STAR/HOR PRO TO 12 (DE=00 to 11) STAR/LMK PRO
10	F 06 89	LAT, LONG/2, ALT (LMK)(.001° +N/E,.01nm) PRO (DE #00 to 12)
11	F 06 88	CELESTIAL BODY VECTOR LOAD DESIRED VECTOR

```
G
                           3-10
     F 50 25 00202 3-AXIS MNVR REQUEST
12
                (3-AXIS) PRO
                (VECPOINT)ENTR
                                                   (.01°)
13
     F 50 18
               REQUEST MNVR TO FDAI R,P,Y
                          SC CONT - CMC
                (AUTO)
                          CMC MODE - AUTO
                          BMAG MODE (3) - RATE 2
                          PRO to 14
                (MAN)
                          V62E
                          MNVR to 13
                (BYPASS) OPT MODE - CMC
                          OPT ZERO - OFF
                          ENTR to 15
                                                    (.01^{\circ})
                AUTO MNVR FDAI R, P, Y
14
       06 18
                AUTO MNVR COMPLETE RETURN TO 13
                                             (.01°,.001°)
       06 92
                AUTO OPT SHFT/TRUN
15
                (MNVR)
                       V94E to 12
                          MNVR SC TO POSITION LMK/HOR
                 MARK)
                             IN FOV
                          OPT MODE - MAN
16
     F 51
                MARK REQUEST
                (MNVR)
                          V94E to 12
                          SUPERIMPOSE STAR ON LMK/HOR
                (MARK)
                           MARK
      F 50 25
                00016 TERM MARKS
17
                 (REJECT) MARK REJECT to 16 (Noun + R1 not
                                               blanked)
                 (TERM)
                          PR0
      F 05 71
                    OOODE STAR ID
 18
                RI
                 R2
                    OOCOO LMK ID
                 R3
                     OOCDO HOR ID
                 (STAR/HOR) PRO to 21 (DE=00 to 20)
                 (STAR/LMK) PRO to 19
                 LAT, LONG/2, ALT(LMK) (.001^{\circ}+N/E,.01nm)
      F 06 89
 19
```

PRO (DE #00 to 21)

```
G/N PWR OPTICS - OFF
                      P24 RATE-AIDED OPTICS TRACKING
                      CMC - on (req)
                      ISS - on and aligned
                      SCS - on
                      BMAG MODE (3) - RATE 2
                      G&N PWR OPTICS - on
                      OPT ZERO - OFF then ZERO (15 sec)
                      OPT MODE - CMC
                      TVC SERVO PWR 1 & 2 - OFF (verify)
                      GMBL MTRS (4) - OFF (verify)
                      V37E 24E
3/22//1
            F 06 89 LAT, LONG/2, ALT (.001°,.001°,.01nm)
                      LOAD LMK COORDS
                      OPT ZERO - OFF
                      MNVR to SIGHTING ATT
                        Roll to keep shaft axis > 10° from
                        plane defined by X-axis & LOS to
                        LMK (For 60nm alt, LMK > 10nm from
                        gnd track requires no roll)
                      PRO
              06 92 AUTO OPT SHFT/TRUN
       3
                                                   (.01°,.001°)
                                 *F 05 09 00404 (TRUN >90°)*
                                    MNVR to acquire
                                      PR0
                                   or V34E, F 37
                      OPTICS MODE - MAN
```

G

3-11

(.01nm,.1 fps)

CELESTIAL BODY VECTOR

ΔR,ΔV (SV PARA)

(REJECT) V37E 23E

Verify vector

(UPDATE) PRO

OPT ZERO - ZERO

**PRO** 

XXE

20

F 06 88

21 F 06 49

22 F 37

```
G
3-12
```

```
F 51
               MARK REQUEST
               MARK (as often as desired)
               To terminate:
               PR0
     F 37
5
               XXE
               OPT ZERO - ZERO
               G/N PWR OPTICS - OFF
                P27 CMC UPDATE
                    CMC - on (req)
          Auto Update:
               V37E 00E (Not nec. if P20 opt 1,2,5 in
                          foreground)
                    UP TLM (2) - ACCEPT
                    UPLINK ACTY 1t - on
                          *POSS LOS before completion*
                          *If V33 NO2 showing:
                           Key ENTR
                             UPLINK ACTY 1t - out
                                                      *
                          * P00 or P20 displayed
                          *If V21 N01
                                                      *
                          *or V21 NO2
                                                      *
                            Key V34E
                             UPLINK ACTY lt - out
                             P00 or P20 displayed
                          *UP TLM (2) - BLOCK
                                                      *
          Update complete:
                     UPLINK ACTY 1t - out
                     UP TLM (MDC) - BLOCK
           Voice Transmission Update:
                V37E 00E (Not nec. if P20 opt 1,2,5 in
                          foreground)
2
                V70E LIFT-OFF TIME UPDATE
            or V71E LOAD DATA CONSEC ADD
            or V72E LOAD DATA IN NON CONSEC
             or V73E CMC TIME UPDATE
3
                P27 Displayed
```

4

F 06 43

```
G
                            3-13
4
     F 21 01
               R3 UPDATE BUFFER ADD (initially 304)
               R1 Data E (R3 Increments)
                 (If change - To 6)
               Repeat Step 4 for all data
    F 21 02 R3 330
5
               (Verify Data) VI NIE
                              R3 304E
                              Rl Verify Data
                              N15E (R3 305)
                              R1 Verify Data
                              Consecutive ENTR's display
                                remaining comps. Note
                                octal ident (01-24) of
                                comps which need change
                              KEY REL To 6
6
     F 21 02 R3 330
          (CHANGE) Load octal ident, XXE to 4
           (ACCEPT UPDATE) Key Verb, then PRO
               POO or P20 Displayed
               P29 TIME OF LONGITUDE
                     CMC-on (reg)
                V37E29E
     F 04 06
                R1 00002 Specify Vehicle
                R2 00001, CSM
                   00002, LM
                PR0
3
     F 06 34
               GET BASE TIME
                                        (hrs,min,.01 sec)
                Load time from which
                  CMC will begin search (all 0's for
                  present time)
                PR<sub>0</sub>
```

R2 DESIRED LONG

Load long

PR0

(.01°)

```
3/22/71
```

```
G
                          3 - 14
                                        (hrs,min,.01 sec)
5 F 06 34 GET LONG
 (Change long) V32E to 4
    (see lat.) PRO
                                         (.01^{\circ},.01^{\circ},.1nm)
     F 06 43 LAT, LONG, ALT
6
     (Recycle) V32E to 2
        (Term) PRO
   F 37
     P20 with GDC REFSMMAT
                CMC - on (req)
                IMU - off
                GDC - on and REFSMMAT Known (pg G/7-13)
                SCS - operating
                G/N OPT PWR - on
                OPT ZERO - OFF then ZERO (15 sec)
                OPT MODE - CMC
                V25N20E
                Load present GDC angles
                Perform P20 opt 4 (p. G/3-2)
                Return after PRO on N79
                Display desired att.
                                            (R,P,Y) (.01°)
                V16N18E
                Mnvr to Roll O° or 180°, Yaw O°
                   and Pitch shown in N18
                 V25N20E
                 Load present GDC angles
                 OPT ZERO - OFF
 5
                 MARK (repeat as necessary)
                      * POSS F 06 49 \DeltaR, \DeltaV, source code *
                                      (.1nm, .1fps, 0000X)*
                      *
                      * (REJECT) V32E
                      * (ACCEPT) PRO
                     (To Terminate P20 - V56E
```

G/N OPT PWR - OFF)

	P30 EXTERNAL AV				
If uplinked REFSMMAT, do P52 (OPT 1) before P30					
1 F 06 33	V37E 30E TIG (hrs,min,.01sec) Load desired TIG PRO				
2 F 06 81	$\Delta V$ XYZ(LV) (.1fps) Load desired $\Delta V$ 's (Do not use all 0's) PRO				
3 F 06 42	HA,HP,ΔV(REQ) (.1nm,.1nm,.1fps) Set ΔV Counter PRO				
4 F 16 45	MARKS,TFI,MGA (marks,min-sec,.01°) (MGA Set to -00002 IF REFSMMAT FLAG NOT SET) Set DET PRO				
5 F 37					

## MINKEY SEQUENCER

```
31.1
                ΔV mag. <7 fps, perform P41 (CMC begins
                  at step 4)
                ΔV mag. >7 fps, perform P40 (CMC begins
                  at step 4)
31.2
                Perform P76
31.3
                Go to P32, step 2
32.1
                ΔV mag. <7 fps, perform P41 (CMC begins
                  at step 4)
                ΔV mag. >7 fps, perform P40 (CMC begins
                  at step 4)
32.2
                Perform P76
                R1 of N55 (P32) \leq 3, Go to P36, step 2
32.3
                                 = 4, Go to P31, step 2
                                 > 4, Go to P32, step 2
36.1
                If \Delta V mag. = 0, go to 36.2
                  52 in MM lights
                                                    (.01°)
     F 06 22 New ICDU angles
           (RECOMP) MNVR; V32E
           (ACCEPT) PRO
     F 50 25 00020 MINKEY PULSE TORQUE
           (TORQUE)
                    CMC MODE - FREE
                     PR0
                     (16 20 during torque)
                     Torque complete:
                       CMC MODE - AUTO
                       \Delta V <7 fps - P41 (step 4)
                       \Delta V > 7 fps - P40 (step 4)
```

Perform P41 (step 4)

(BYPASS) ENTR

33.3

```
36.2
               Perform P76
36.3
               If pulse torque not done, go to P33
                 step 2.
36.4
               If all gimbal angle changes for mnvr
                 back to rend. att < 10°, go to 36.5
                                                  (°10.)
     F 50 18 Request MNVR to RPY angles
          (ACCEPT) SC CONT - CMC
                    CMC MODE - AUTO
                    PRO
          (REJECT) ENTR to 36.5
                                                  (.01°)
       06 18
               MNVR in progress
               MNVR complete, to 36.5
36.5
          52 in MM lights
                                                  (.01°)
     F 06 22 New ICDU angles
          (RECOMP) MNVR; V32E
           (ACCEPT) PRO
     F 50 25
               00020 MINKEY PULSE TORQUE
                CMC MODE - FREE
                PR0
                (16 20 during torque)
     Torque complete: CMC MODE - AUTO
                       Go to P33, Step 2
33.1
                \Delta V mag. <7 fps, perform P41 (CMC begins
                  at step 4)
                ΔV mag > 7 fps, perform P40 (CMC begins
                  at step 4)
33.2
                Perform P76
```

Go to P34, step 2

34.1	$\Delta V$ mag. <7 fps, perform P41 (CMC begins at step 4) $\Delta V$ mag. $\geq$ 7 fps, perform P40 (CMC begins at step 4)
34.2	Perform P76
34.3	Go to P35, step 2
35.1	AV mag (7 fps nowform D41 /CMC harden

- ΔV mag <7 fps, perform P41 (CMC begins
   at step 4)
  ΔV mag. ≥7 fps, perform P40 (CMC begins
   at step 4)
  </pre>
- 35.2 Perform P76
- MCC2 complete, go to P79 step 2 MCC2 not complete, go to P35, step 2

6

F 06 33

TIG (HAM)

PR<sub>0</sub>

G 4-5

#### P31 HAM PRETHRUST V37E 31E (If no REFSMFLG, To 3) F 50 25 00017 MINKEY OPTION (ACCEPT) PRO (REJECT) ENTR 2 (Req'd Mnvr <10°, To 3) F 50 18 Request MNVR To RPY angles $(.01^{\circ})$ (ACCEPT) SC CONT - CMC CMC MODE - AUTO PR<sub>0</sub> (REJECT) ENTR To 3 06 18 MNVR in progress (°10.) When MNVR complete: MINKEY To 3 Non - MINKEY To 2 3 F 06 11 TIG (CSI) (hrs,min,.01sec) Load if needed PR0 4 F 06 55 APSIS CDH, TPI ELEVATION ANGLE (+0000N, .01° CENTRAL ANGLE, Passive Vehicle (ωt) (For CDH Nπ from CSI, load non-zero in R3) Load data PR<sub>0</sub> 5 F 06 37 TIG (TPI) (hrs,min,.01sec) Load data PR<sub>0</sub>

(hrs,min,.01sec)

```
F 16 45
                MARKS, TFI, -00001
                                          (marks,min-sec)
     (RECYCLE)
                   V32E
     (FINAL COMP) TERM MARKS
                   PR0
                           *F 05 09
                              00600 No Intersection on
                           ×
                                     First Iteration
                              00601 Post CSI hp<85/5.8nm*
                              00602 Post CDH hp<85/5.8nm*
                              00603 TIG(CDH) - TIG(CSI)
                           *
                                       <10 min
                              00604 TIG(TPI) - TIG(CDH)
                           *
                                       <10 min
                              00605 NO SOL IN 15 TRIES
                              00606 \Delta V(CSI) > 1000 fps in 2*
                                     Iterations
                                   V32E To 3: Adjust
                           *
                                     Inputs
                                                           *
                Y(Active), YDOT(Active), YDOT(Passive)
8
    F 06 90
                                       (.01nm,.1fps,.1fps)
                PR<sub>0</sub>
9
     F 06 81 \Delta V XYZ (LV) HAM
                                                    (.lfps)
                PRO (If recycle - To 7)
10
     F 16 45
                MARKS, TFI, MGA (marks, min-sec, .01°)
                  (MGA = -00002 \text{ if no REFSMFLG})
                SET EVENT TIMER
                PRO (If MINKEY, to Sequencer 31.1)
11
     F 37
```

```
DATE 3/22/71
```

```
P32 CSI PRETHRUST (P72 LM)
               V37E (32E or 72E)
               (If no REFSMFLG or P72, to 3)
     F 50 25 00017 MINKEY OPTION
         (ACCEPT) PRO
         (REJECT) ENTR
2
               (If req'd. mnvr < 10°, to 3)
               Request MNVR to RPY angles
     F 50 18
                                                 (°10.)
         (ACCEPT) SC CONT - CMC
                  CMC MODE - AUTO
                  PR0
         (REJECT) ENTR to 3
       06 18
               MNVR in progress
                                                 (.01°)
               When MNVR complete: MINKEY to 3
                                     Non - MINKEY to 2
3
     F 06 11
            TIG (CSI)
                                       (hrs,min,.01sec)
               Load if needed
               PR0
4
     F 06 55
               APSIS CDH, TPI ELEVATION ANGLE, (+0000N,.01
                 CENTRAL ANGLE, Passive Vehicle (ωt)
                 (For CDH Nπ from CSI, load non-zero
                 in R3)
               Load data
               PR0
     F 06 37 TIG (TPI)
                                       (hrs,min,.01sec)
               Load data
               PRO
6
     F 16 45 MARKS, TFI, -00001
                                        (marks,min-sec)
          (RECYCLE) V32E (MINKEY to 8)
          (FINAL PASS) TERM MARKS
               PRO (MINKEY to 8)
```

\*

```
4-8
                                                           *
                           *F 05 09
                                                           *
                             00600 No Intersection on
                                                           *
                           *
                                    First Iteration
                                                           ×
                            00601 hp+CSI <85nm/5.8nm
                             00602 hp+CDH <85nm/5.8nm
                                                           *
                           * 00603 TIG(CDH)-TIG(CSI)
                                                            *
                           *
                                      <10 min
                                                            *
                             00604 TIG(TPI)-TIG(CDH)
                                                            *
                           *
                                      <10 min
                                                            *
                             00605 NO SOL IN 15 Tries
                             00606 ΔV(CSI)>1000fps in 2
                                                            *
                                                            *
                           *
                                    Iterations
                                    V32E to 3 Adjust
                           ×
                           *
                                       Inputs
                \Delta H(CDH), \Delta T(CDH-CSI), \Delta T(TPI-CDH)
     F 06 75
                                            (.lnm,min-sec)
                PR0
                Y(Active), YDOT(Active), YDOT (Passive)
     F 06 90
8
                                       (.01nm,.1fps,.1fps)
                PR<sub>0</sub>
                                                    (.1fps)
     F 06 81 \Delta V XYZ(LV)CSI
                Change if desired
                PRO (If MINKEY: recycle, to 6
                                  final pass, to 11)
                                                    (.1fps)
                \Delta V XYZ(LV)CDH
     F 06 82
10
                 PRO (If Recycling to 6)
                 MARKS, TFI, MGA (marks, min-sec, .01°)
     F 16 45
11
                   (MGA Set to -00002 If No
                      REFSMFLG or If P72)
                 SET EVENT TIMER TO TFI
                 PRO (If MINKEY, to Sequencer 32.1)
12
      F 37
```

G

P72 - Transmit mnvr Parameters to LM

#### P36 - PLANE CHANGE PRETHRUST V37E 36E (If no REFSMFLG, to 3) F 50 25 00017 MINKEY OPTION (ACCEPT) PRO (REJECT) ENTR (Req'd Mnvr <10°, to 3) $(.01^{\circ})$ Request MNVR to RPY angles F 50 18 (ACCEPT) SC CONT - CMC CMC MODE - AUTO PR0 (REJECT) ENTR to 3 $(.01^{\circ})$ 06 18 MNVR in progress When MNVR complete: MINKEY to 3 non-MINKEY to 2 (hrs,min,.01sec) F 06 33 TIG (PC) 3 PR0 (marks,min-sec) F 16 45 MARKS, TFI, -00001 4 (RECYCLE) V32E (FINAL COMP) TERM MARKS PR<sub>0</sub> F 06 90 Y(Active), YDOT (Active), YDOT (Passive) (.01nm,.1fps,.1fps) PR0 (.1fps) ΔV XYZ (LV) PC F 06 81 6 PRO (If recycle - to 4) MARKS, TFI, MGA (marks, min-sec, .01°) F 16 45 (MGA = -000002 if no REFSMFLG)SET EVENT TIMER

PRO (If MINKEY, to sequencer 36.1)

8 F 37

```
G
4-10
```

```
P33 CDH PRETHRUST (P73 LM)
                V37E (33E or 73E)
                (If no REFSMFLG or P73, to 3)
     F 50 25 00017 MINKEY OPTION
           (ACCEPT) PRO
           (REJECT) ENTR
                (If req'd. mnvr <10°, to 3)
     F 50 18 Request MNVR to RPY angles
                                                     (.01^{\circ})
           (ACCEPT) SC CONT - CMC
                    CMC MODE - AUTO
                    PR<sub>0</sub>
           (REJECT) ENTR to 3
                                                     (.01^{\circ})
       06 18
                MNVR in progress
                When MNVR complete: MINKEY to 3
                                       Non - MINKEY to 2
                                          (hrs,min,.01sec)
     F 06 13
                TIG(CDH)
                PR0
                                           (marks,min-sec)
     F 16 45 MARKS, TFI, -00001
4
           (RECYCLE) V32E (MINKEY to 6)
           (FINAL PASS) TERM MARKS
                PRO (MINKEY to 6)
                            *F 05 09 00611 NO TIG FOR*
                                      SPECIFIED ANGLE *
                            *
                              (REDO) V32E to 3
                            *
                                      PRO to 5
                                        (6 if MINKEY)
                            *
                            *CMC will use last
                                                        *
                               calculated value of
                               TIG (TPI)
                                                        *
                 \Delta H(CDH), \Delta T(TPI-CDH), \Delta T(TPI-NOMTPI)
5
      F 06 75
                                             (.lnm,min-sec)
                 PRO
                Y(Active), YDOT(Active), YDOT(Passive)
      F 06 90
6
                                       (.01nm,.1fps,.1fps)
                 PR<sub>0</sub>
```

```
G
4-11
```

```
F 06 81 \Delta V XYZ(LV)CDH
                                                 (.1fps)
               PRO (If Recycling to 4)
8
               MARKS, TFI, MGA (marks, min-sec, .01°)
     F 16 45
                  (MGA Set to -00002 If No
                     REFSMFLG or If P73)
               SET EVENT TIMER TO TFI
               PRO (If MINKEY, to Sequencer 33.1)
    F 37
9
               P73 - Transmit mnvr Parameters to LM
               P34 TPI PRETHRUST (P74 LM)
                V37E (34E or 74E)
                (If no REFSMFLG or P74, to 3)
     F 50 25 00017 MINKEY OPTION
           (ACCEPT) PRO
                (If req'd. mnvr <10°, to 3)
                Request MNVR to RPY angles
     F 50 18
                                                  (.01^{\circ})
           (ACCEPT) SC CONT - CMC
                    CMC MODE - AUTO
                    PR0
           (REJECT) ENTR to 3
       06 18
                MNVR in progress
                                                   (.01^{\circ})
                When MNVR complete:
                                      MINKEY to 3
                                      Non - MINKEY to 2
     F 06 37
               TIG (TPI)
                                        (hrs,min,.01sec)
                Load desired TIG
                PRO.
4
     F 06 55 PRECISION OFFSETS, ELEV ANGLE, ωt
                                       (0000X,.01°,.01°)
                Load desired values
                (+00000 in R2 to CALC ELEV
                 ANGLE AT TIG TIME)
                PR0
```

```
4-12
                                        (marks, min-sec)
    F 16 45 MARKS, TFI, -00001
          (RECYCLE) V32E (TIG option, to 7)
          (FINAL PASS) TERM MARKS
               PRO (TIG option, to 7)
                         *F 05 09 (00611 NO. SOL)*
                          *PRO To 3
                                       (hrs,min,.01sec)
6 F 06 37 TIG (TPI)
               PRO (If not MINKEY final pass, to 8)
     F 06 55 PRECISION OFFSETS, ELEV ANGLE, ωt
                                       (0000X,.01°,.01°)
                PR<sub>0</sub>
     F 06 58 HP, ΔV(TPI), ΔV(TPF) (.1nm, .1fps, .1fps)
                PR<sub>0</sub>
                                                 (.lfps)
     F 06 81 \Delta V XYZ(LV)TPI
                PRO (recycle, to 5)
                MARKS, TFI, MGA (marks, min-sec, .01°)
    F 16 45
 10
                  (MGA SET To -00002 IF NO
                     REFSMFLG or If P74)
                SET EVENT TIMER TO TFI
                PRO (If MINKEY, to Sequencer 34.1)
      F 37
 11
                P74 - Transmit Mnvr Parameters To LM
                 P35 TPM PRETHRUST (P75 LM)
                 V37E (35E or 75E)
                 (If no REFSMFLG or P75, to 3)
                 00017 MINKEY OPTION
       F 50 25
            (ACCEPT) PRO
```

(REJECT) ENTR

G

06 18

(ACCEPT) SC CONT - CMC

PR0

MNVR in progress

When MNVR complete:

(REJECT) ENTR to 3

G

CMC MODE - AUTO

 $(.01^{\circ})$ 

 $(.01^{\circ})$ 

MINKEY to 3

Non - MINKEY to 2

```
3
            F 16 45 MARKS, TFI, -00001
                                                  (marks,min-sec)
                  (RECYCLE) V32E
                  (FINAL PASS) TERM MARKS
                       PR<sub>0</sub>
       4
            F 06 81
                      \Delta V XYZ(LV)TPM
                                                          (.lfps)
                       PRO (If recycle - to 3)
       5
            F 16 45
                       MARKS, TFI, MGA (marks, min-sec, .01°)
                          (MGA SET TO -00002 IF NO
                             REFSMFLG or If P75)
                       PRO (If MINKEY, to Sequencer 35.1)
       6
            F 37
                       P75 - Transmit Mnvr Parameters To LM
                       To change ATIGINC:
3/22/71
                                  V24N1E
                                   2021E
                       6 min:
                                  00002E
                                  06240E
                       10 min:
                                  00003E
                                  25140E
                       3 min:
                                  00001E
                                  03120E
```

```
P79 RNDZ FINAL PROGRAM
              V37E 79E
              (All gimbal angle errors <10°, to 3)
   F 50 18
              Request MNVR to RPY angles
                (X-axis track)
              SC CONT - CMC
              CMC MODE - AUTO
              PR0
     06 18
                                                  (.01^{\circ})
             MNVR in progress
              When MNVR complete: to 3
   F 16 54
              RANGE, RANGE RATE, THETA(.01nm,.1fps,.01°)
                (Ext. vbs. locked out)
              PR<sub>0</sub>
                      CIVEN
              P37 RETURN TO EARTH PGM
              (LONG CONTROL CANNOT BE DONE WHEN TIME
                TO ENTRY IS <4 HRS: Lunar return only)
  LONGTUDE
              Perform the following once:
                  VINIE
LOOKS AT
                  3012E
RI VALUE AT
                  Verify R1=
ADDRESS 3012.
 ENTER P37
              V37E 37E
   F 06 33
              TIG
                                        (hrs,min,.01sec)
              Load desired TIG From P37 PAD
              PR0
   F 06 60
              BLANK, AV DESIRED, GAMMA EI DESIRED
                                              (fps,01°)
              Load desired AV: FROM p37 PMD
                   PAD AV IF ON TLC -> AS ON OUTWARD PADS
```

IF ON TEC

0.

Load R3=0

PR<sub>0</sub>

\*V32E, RSET TO 1

00612 State vector in\*

Convergent

00605 Solution not

20607 Conic Routine

Failed

Lunar Influence\*

\*F 05 09

\*

\*

```
20610 State vector is*
                                                         below 400K ft
                                    *
                                                         altitude
                                    *F 37 37E to 1
                   CONIC SOLN
                           IMPACT LAT, IMPACT LONG (+E)
                If Impact LONG>12° from desired:
                   TEC:N40E Record R2 as \DeltaVmin (fps) TLC: V32E to
                        V32E to 1 & use |\Delta V| > \Delta V min Decrease \Delta V to
                               ΔV neg to move LONG WEST move LONG WEST
                        Load
                               \Delta V pos to move LONG EAST Increase \Delta V t
                        Load
                                                                 move LONG EAST
                           Continue recycles til <12° from desired LO
       If Impact LONG <12° from desired:

Record Impact LONG as ocl (.01°
                 Record Impact LONG as \underline{0c1} (.01°)
Record \underline{\Delta Vin1} (fps)
4 F 06 39 AT TRANSFER (TIG to EI) (hrs,min,.0 PRO
PRO
(RECYCLE) V32E To 1

He GET at EI

The GET at EI

(fps,.01°)
PRO
(RECYCLE) V32E To -
         4 F 06 39 ΔT TRANSFER (TIG to EI) (hrs,min,.01se
                       (RECYCLE) V32E To 1
                             ΔV XYZ(LV) at TIG
          6
                F 06 81
                              Record R3 as \( \Delta \text{Vzcl (.1fps)} \)
                              N40E
                              Record R2 as \Delta Vc1 (.1fps)
                              Make sign of \Delta VcI same as \Delta Vin1
                              KEY RLSE
                              PRO
```

53:41

```
4-16
                        *F 05 09 00605 Solution not *
                        *
                                            Convergent
                        *
                                            Flt Path Ang
                                    00613
                                            not reached
                        *RSET V32E to 1
                                     20607 Conic Routine*
                        *
                                            Failed
                        *F 37 37E to 1
        PRECISION SOLN
                  IMPACT LAT, IMPACT LONG
      F 06 61
                                                            (.01°)
                  Record LONG as ep1 (.01°)
                  If opl, acceptable, PRO to step 15
                  PR<sub>0</sub>
8
      F 06 39
                  ΔT TRANSFER
                  PR<sub>0</sub>
      F 06 60
                  BLANK, VPRED, GAMMA EI
                                                      (fps,.01^{\circ})
                  PR<sub>0</sub>
   F 06 81 \Delta V XYZ(LV) at TIG
10
                  Record R1 as \( \Dagger Vxpl (.1fps)
                  Record R3 as \Delta Vzp1 (.1fps)
                  V32E to 11
11 F 06 33 TIG
                                             (hrs,min,.01sec)
                  Load same value used initially
                  PR0
12
      F 06 60
                  BLANK, AV DESIRED, GAMMA EI DESIRED
                  To move WEST from opl:
                     Load \Delta Vin2 = \Delta Vc1-10
                       (If \Delta Vinl = 0 for TEC,
                        \Delta Vin2 = -\Delta Vcl-10)
                  To move EAST from opl:
                     Load \( \Delta \text{Vin2=} \Delta \text{Vc1+10} \)
                  Record \( \Delta \text{Vin2} \) (.1fps)
                  R2: Load ∆Vin2
                  PR0
                        *F 05 09 SAME AS IN 2*
                        *V32E. RSET to 11
```

G

(.01°)

13 F 06 61 IMPACT LAT, IMPACT LONG

```
DATE 3/22/71
```

```
Record LONG as 0c2 (.01°)
                    N81E Record R3 as \Delta Vzc2 (.1fps)
                    Compute K = \left| \frac{\theta c^2 - \theta c^1}{Vzc^2 - \Delta Vzc^2} \right|
                     Compute \Delta\theta LONG = \theta d - \theta pl (.01°)
                     Obtain from chart \Delta Vo (fps)
                     Make sign of \Delta Vo same as \Delta \theta LONG
                       Compute \( \Delta \Vd :
                        If TLC and \( \Delta Vzpl > 3\Delta Vxpl :
                       \Delta Vd = \Delta Vc1 + \Delta Vo
                       V32E to step 1 and use
                       ΔVd in R2 of N60
                       Otherwise:
                       \Delta Vzd = \Delta Vzpl + \Delta Vo
                       \frac{\Delta Vd}{\Delta Vd} = (\Delta Vzd^2 + \Delta Vxpl^2)^{1/2}
14
                        To solve for AVd:
                        V37E 30E, Use present time in N33.
                        Load N81:
                          Rl = \Delta Vxpl (should be)
                          R2 = 0 (should be)
                           R3 = \Delta Vzd (.1fps)
                        PRO and rcrd \Delta Vd (.1fps)
                           from N42 R3.
                        Make sign of \Delta Vd same as \Delta Vzd
                        V37E 37E to step 1 and use \Delta Vd
                           in R2 of N60
15
       F 06 39 \DeltaT TRANSFER
                                                       (hrs,min,.01sec)
              (RECYCLE) V32E To 1
                     PR0
16
       F 06 60 BLANK, V PRED, GAMMA EI
                                                                (fps,.01°)
              (RECYCLE) V32E To 1
                     PR<sub>0</sub>
```

```
G
4-18
```

```
17 F 06 81 ΔV XYZ(LV) TIG
                                                     (.lfps)
           (OPTION) N40E - VG MAG avail
                       in N40 and N80
                     KEY REL
                PR<sub>0</sub>
18
     F 04 06
                THRUST OPTION
                R1 00007
                R2 0000X
                      X=1 (SPS)
                        2 (RCS)
                Perform RO3 (V48) if not performed just
                  prior to P37 call
                PR0
19
     F 06 33
                TIG
                                           (hrs,min,.01sec)
                PR<sub>0</sub>
20
     F 16 45
                MARKS, TFI, MGA
                                      (00\ 00, min-sec, .01^{\circ})
                (MGA SET TO -00002 If No
                 REFSMMAT SET)
                PRO
21
                (40E \text{ or } 41E)
    F 37
                OBTAIN ENTRY REFSMMAT (No Comm)
                (Use only after final MCC)
                1. Record 400K time from final P37
                      solution.
                      (Step 1 TIG + FNL N39)
                2. Use 400K time for T-align P52
                      (Option 2).
                           *If PROG ALARM 401, Yaw 45°*
```

\* and V32E

#### G. 4-19

P76 - ΔV UPDATE (P77 CSM)

V37E (76E or 77E)

F 06 33 TIG
Load TIG
PR0 (hrs,min,.01sec)


2 F 06 84(81) ΔV XYZ
Load ΔV
PR0 (MINKEY, to Sequencer 3X.3)

3 F 37

G 4-20

# P37 LONGITUDE ITERATION

PARAMETER	STEP	1	2	3	
∆Vmin	3	•	·	<u> </u>	fps
θ <b>c</b> l	3	•	•	•	0
∆Vinl	3	•	•	•	fps
ΔVzcl	6		·	<u> </u>	fps
∆Vcl (Same sign as ∆Vinl)	6	·		• <u>-</u>	fps
θрΊ	7			·•	0
ΔVxpl	10		<del></del>		fps
∆Vzpl	10		<u> </u>		fps
∆Vin2	12			•_	fps
θ <b>с2</b>	. 13		<b>•</b>		٥
∆Vzc2	13	<u> </u>		<u>-</u> -	fps
0c2-0c1	13		<u></u>	<b></b> •	0
∆Vzc2-∆Vzc1	13	•	<del></del>		fps
K	13	•	•	•	
⊖d(desired long)	13	•	·····•	•	0
θ <b>d-</b> θ <b>pl(</b> Δθ <b>long</b>	) 13		<b></b>		0
∆Vo(from chart)	13	0	0_	0	fps
ΔVzd	13				fps
∆Vd	13/14	*		·_	fps

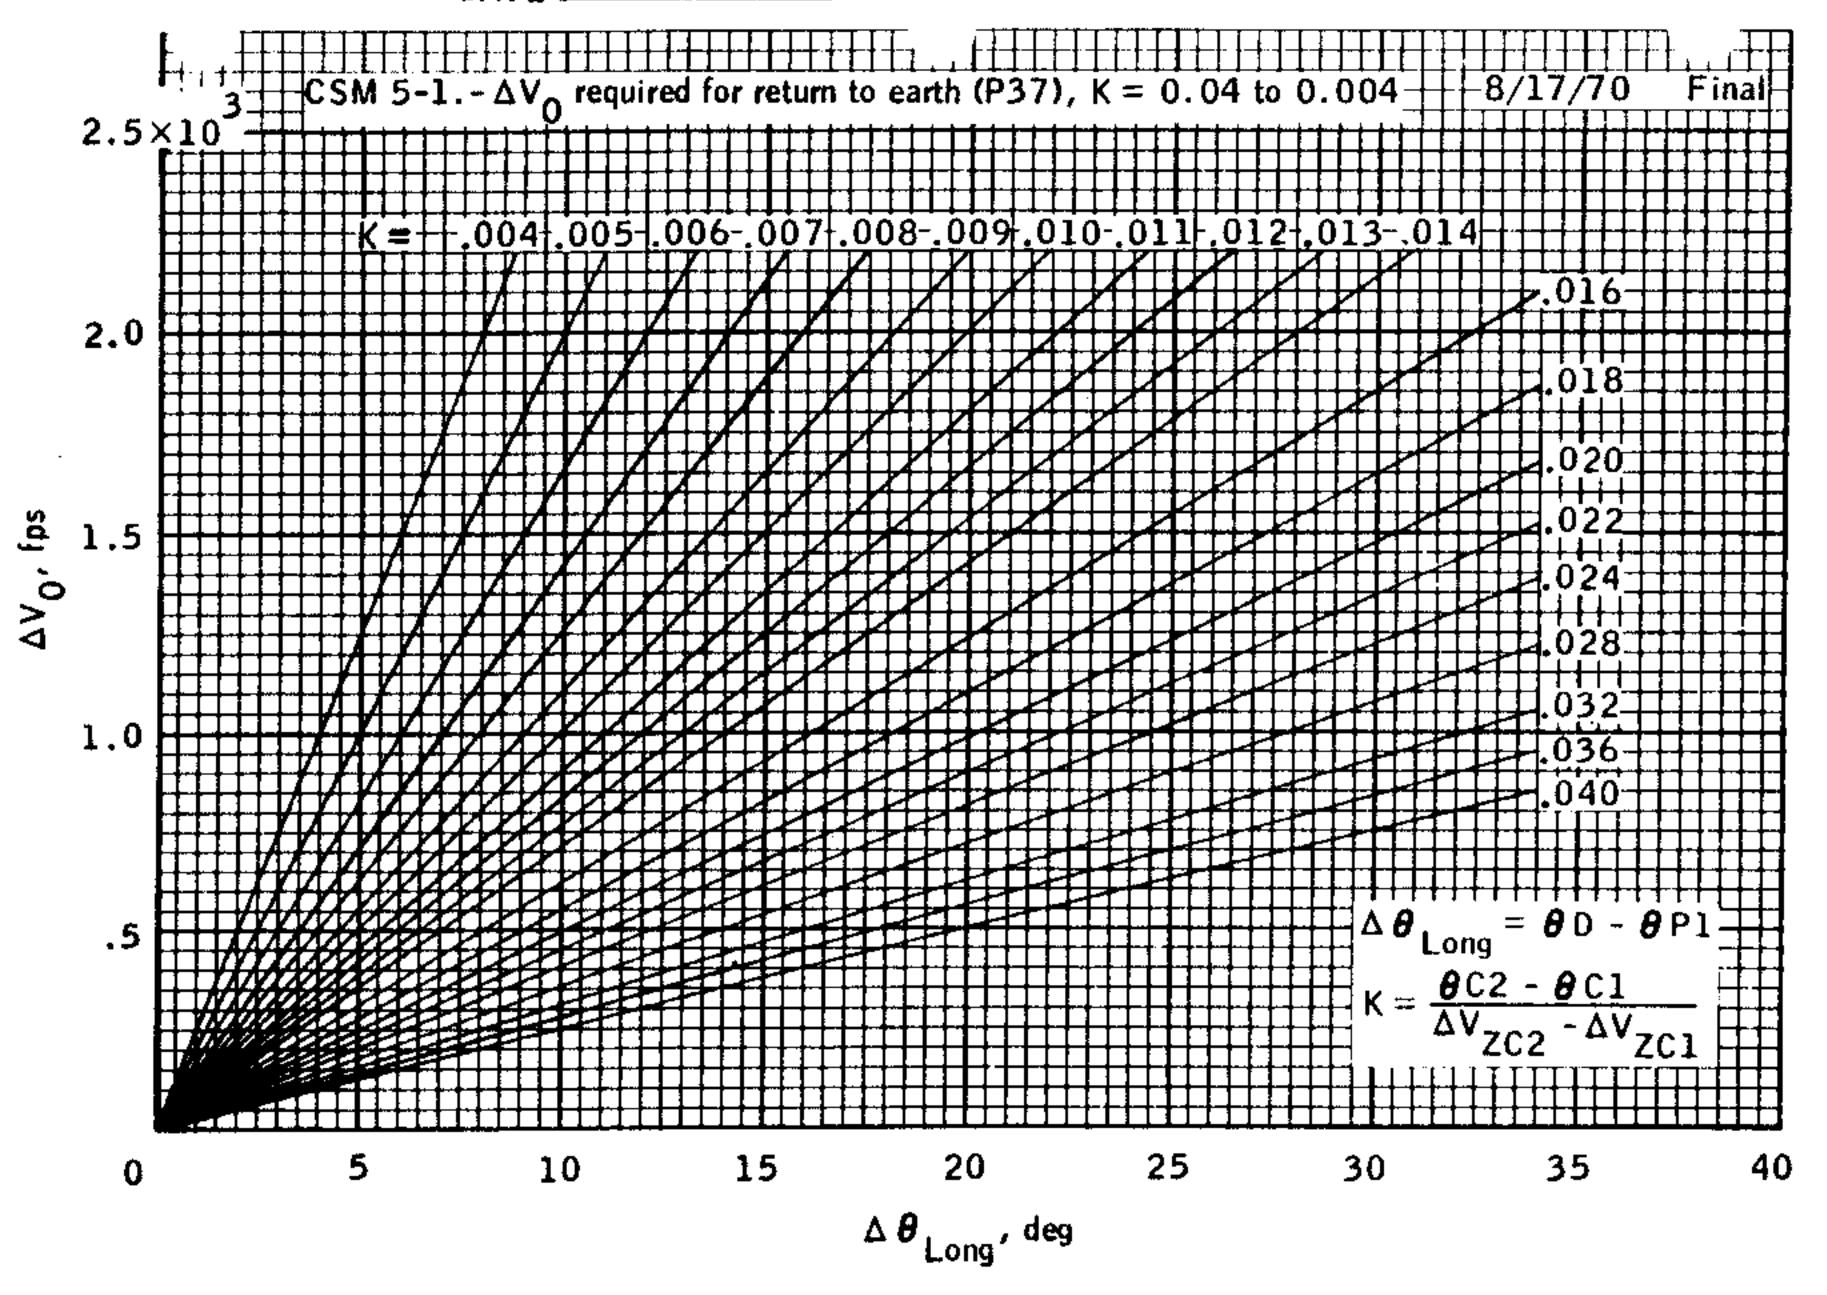

4-21

 $\Delta V_0$  required for return ' arth (P37), K = 0.4 to 0.04.

P37 BLOCK DATA				
				GETI
X		X		ΔVT
X		X		LONG
				GET <sub>400K</sub>
				GETI
X		X		△VT
X		X		LONG
				GET <sub>400</sub> K
	•			GETI
X		X		△VT
×		X		LONG
	-		*	LONG GET <sub>400K</sub>
<u> </u>	*			GETI
X		X		ΔVT
X		X		LONG GET <sub>400K</sub>
				GET <sub>400K</sub>
			1	GETI
X		X		△VT
X		X		LONG GET <sub>400K</sub>
				GE 400K
	-			GETI
X		X		△VT
X	<u> </u>	X		LONG GET <sub>400K</sub>
				GET <sub>400K</sub>
				GETI
X		X		ΔVT
X		X		LONG GET <sub>AOOK</sub>
				GETANNY

/22/71	7
m	3
DATE	DATE

<del></del>	<del></del>		·	
. <u>.</u>		P3	7 BLOCK	CDATA
				GETI
Х		X		△VT
X		X		LONG
			•	GET <sub>400K</sub>
			*	GET!
Х		Х		△VT
X		X		LONG
			*	LONG GET <sub>400K</sub>
	<b>‡</b>		*	GETI
Х		X		△VT
Х		Х		LONG
	•		•	LONG GET <sub>400K</sub>
	•		*	GET1
X		X		△VT
Х		Х		LONG
	-			GET <sub>400K</sub>
				GET1 ·
X		Х		ΔVT
X		Х		LONG
				LONG GET <sub>400K</sub>
	•			GETI
Х		Х		ΔVT
Х		Х		LONG
	•		•	LONG GET <sub>400K</sub>
	•			
Х		Х		GETI  ΔVT  LONG  GET <sub>400K</sub>
Х		Х		LONG
				GET <sub>400K</sub>

```
Changes read down at 58:59:03
They one Meand for G2 ( Actorions)
This version out of date
                                                 5-1
Should be a line:
                                   P40 SPS THRUSTING
  VERIFY SIM FOLKROOWN
                                         Prethrust Program Complete
After this, insert
                                         CMC & ISS - on
 CB, SPS PILOT YALVES (2) OPEN VERIFY / Cycle CRYO FANS
CB EPS, GROUP 5,(2) CLOSED, WERIFY /
                                         SCS - OPERATING
                                       _TEST C/W LAMPS
   EMS FUNCTION, OFF. VERIFY
                                         Perform EMS AV TEST & NULL
CB EMS MIN A+B (2) CLOSE
                                           BIAS CHECK, pg G/2-5
                                         Set AVC
                                         EMS FUNC - AV
                                         SPS GAUGING - ACT
                                         PUG MODE - NORMAL
                                         OXID FLOW vlv - PRI
                                         MAP CAMR ON - STBY
                                         PAN CAMR PWR - BOOST
                                         SM/AC PWR - on (up)
                                         BMAG MODE (3) - RATE 2
                                         CMC MODE - FREE
                                         AUTO RCS SELECT(16)-as reg'd
                                         LOAD DAP (Check roll jets)
                                         ROT CONTR PWR NORM (2) - AC/DC
                                         Set DET
                                   V37E 00E
                                         SC CONT - CMC/AUTO
                                   MNVR TO PAD BURN ATT
           3/22/7
                                   V49E
       DATE 3/22/71
                                   PERFORM BORESIGHT & SXT STAR CHECK
                                   V41 N91E
            DATE
                  3
                                    V37E 40E
                                    (TFI available via N40, N45 or N35)
                                    REQUEST MNVR TO FDAI RPY ANGLES (.01°)
                        F 50
                  4
                                         BMAG MODE (3) - RATE 2
                              (AUTO)
                                         SC CONT - CMC/AUTO
                                    PRO
                  5
                                   AUTO MNVR TO FDAI RPY ANGLES
                                                                         (.01°)
                          06 18
```

F 50 18 REQUEST TRIM MNVR TO FDAI RPY ANGLES ALIGN S/C ROLL  $(.01^{\circ})$ GDC ALIGN

TVC CHECK & PREP

cb STAB CONT SYS (all) - close (Pnl 8) cb SPS (12) (2) close
SET  $\Delta VC$  (verify)

EMS FUNC -  $\Delta V$  (verify)

MAN ATT (3) - RATE CMD ch 259:2234

ATT DB - MIN RATE - LOW TRANS CONT PWR - ON SCS TVC (2) - RATE CMD △VCG - LM/CSM or CSM TVC GMBL DRIVE P&Y - AUTO

+54:00m (-06:00)

MN BUS TIE (2) - ON TVC SERVO PWR #1 - AC1/MNA TVC SERVO PWR #2 - AC2/MNB ROT CONTR PWR NORMAL (2) - AC ROT CONT PWR DIRECT (2) - OFF BMAG MODE (3) - ATT1/RATE 2 SC CONT - SCS RHC #2 - ARMED

55:00m (-05:00)

PRIMARY TVC CHECK

GMBL MOT PI-Y1-START/ON (LMP Confirm) Verify TRIM CONTROL & SET

Verify MTVC

\*IF SCS: SCS TVC (2) - AUTO\*

SC CONT - CMC (SCS)

THC - CW

Verify NO MTVC

SEC TVC CHECK

GMBL MOT P2-Y2-START/ON (LMP Confirm) SET GPI TRIM Verify MTVC THC NEUTRAL Verify NO MTVC

3/22/71

DATE

(-00:35)

DSKY BLANKS

ages due to

1 20 m

@ 39:00:34

5-3 Verify GPI returns to 0,0(CMC) or t (SCS) ROT CONT PWR NORM (2) - AC/DC ROT CONT PWR DIRECT (2) - MNA/MNB (TRIM) BMAG MODE (3) - RATE 2 PRO BMAG MODE (3) - ATT1/RATE 2 (verify **ENTR** F 50 25 00204 GMBL TEST OPTION (ACCEPT) SC CONT - CMC (verify) PR<sub>0</sub> changes due to SPS Short. Monitor GPI Response: A @59:50:34 00,02,-02,00,02,-02,00, Trim \*TEST FAIL: \*SC CONT - SCS \* \*SCS TVC(2) - AUTO\* (REJECT) ENTR 06 40 TFI, VG, ΔVM 8 (min-sec,.lfps) \*PROG ALARM - TIG Slipped\* \*V5N9E 01703 \*KEY RLSE TO 8 FDAI SCALE - 5/5 RATE - HIGH UPDATE DET SPS He vlvs (2) - AUTO (verify) Check N2 A and N2 B CB SPS PILOT VALUE MAIN B, CLOSE 58:00 (-02:00)- AV THRUST A(B) - NORMAL THC - ARMED RHC (2) - ARMED TAPE RCDR - HBR/RCD/FWD/CMD RESET 59:25

G

```
changes due to SPS Short:
Ch @ 59:01:54
                  (AVE G ON)
       59:30
     (-00:30)
                         EMS MODE - NORMAL
          06 40 TFI, VG, ΔVM
                                               (min-sec,.lfps)
                   CHECK PIPA BIAS <2fps for 5 sec
       59:XX
                   ULLAGE
     (-00:XX)
                              *If no ULLAGE:
                              * DIR ULLAGE PB - PUSH*
                                Control Att with RHC*
                   MONITOR AVM (R3) COUNTING UP
       59:55
     (-00:05)
        F 99 40 ENG ON ENABLE REQUEST (2) ALBERTAL (2) ALBERTAL
              (AUTO IGN) PRO AT TFI >0 Sec__/
              (BYPASS IGN) ENTR to 11 (Perform switching in 10)
                            EXIT - V37E 00E
       00:00
                    IGN
                              *IF SCS: THRUST PB - PUSH*
           06 40 TFC, VG, ∆VM
                                        (min-sec,.lfps,.lfps)
                               *F 97 40 SPS Thrust fail
   CB S PS PILOT VALUE HWA-CLOSE* AV THRUST B(A)-NORMAL-
                               *(RESTART) PRO to IGN
                               *(RECYCLE) ENTR to TIG-05sec*
                         SPS THRUST Lt - ON
CB SPS PILOT WALVE FIN A-CLOSED AV THRUST B(A) - NORMAL *IF SCS: +X & THRUST PB - PUSH*
                    MONITOR THRUSTING
                      Pc 95-105 psia
                      EMS COUNTING DOWN
                           SPS INJ VLVS (4) - OPEN
                           SPS He vlvs tb-gray
                           SPS FUEL/OXID PRESS - 170-195 psia
                            PUGS - BALANCED NO PUGS APTER 6 MINS
  FOR LOI, AT 6 MW INTO BURN
SPS PILOT VALVE MN A-OPEN
                                 FOR TEI: CUT-OFF - 10 Sees, CB SPS PILOT VALUE
                                                  MN A- OPEN
```

```
changes due to 5PS
                                  5-5
                                              59:01.54
       00:XX
                  ECO
   10 F 16 40 TFC (STATIC), VG, ΔVM (min-sec,.lfps)
                          ∆V THRUST A&B - OFF
                    VERIFY THRUST OFF
                          SPS INJ VLVS (4) - CLOSED
                          SPS He vlvs tb (2) - bp
                          GMBL MTRS (4) - OFF (LMP Confirm)
                          TVC SERVO PWR 1&2 - OFF
                          MN BUS TIE (2) - OFF
                    PRO -
   11 F 16 85 VG XYZ (CM)
                                                          (.lfps)
                      NULL RESIDUALS
                      RECORD AV COUNTER & RESIDUALS AVC
                                                        VGX
VGY
VGZ
                          EMS FUNC - OFF
                          EMS MODE - STBY
                          RHC & THC - LOCKED
                                                        VGZ
                          ATT DB - MAX
                          TRANS CONT PWR - OFF
                          ROT CONTR PWR DIRECT (2) - OFF
                          BMAG MODE (3) - RATE 2
     LOI + TEI
                          cb DIRECT ULLAGE (2) - open
CB SPS PILOT VILV MN B- OPEN CD SPS P1 & Y1 - OPEN
FOR TE!

PCM BIT RATE - LOW


MAP CAMR ON - OFF

PAN CAMR PWR - OFF
                          SM/AC PWR - OFF
                         (If MINKEY, To Sequence 3X.2)
                    PRO
         F 37
                    V82E
   13
         F 16 44
                    HA, HP, TFF
                                                  (.lnm,min-sec)
                    PR<sub>0</sub>
```


14


F 37

00E

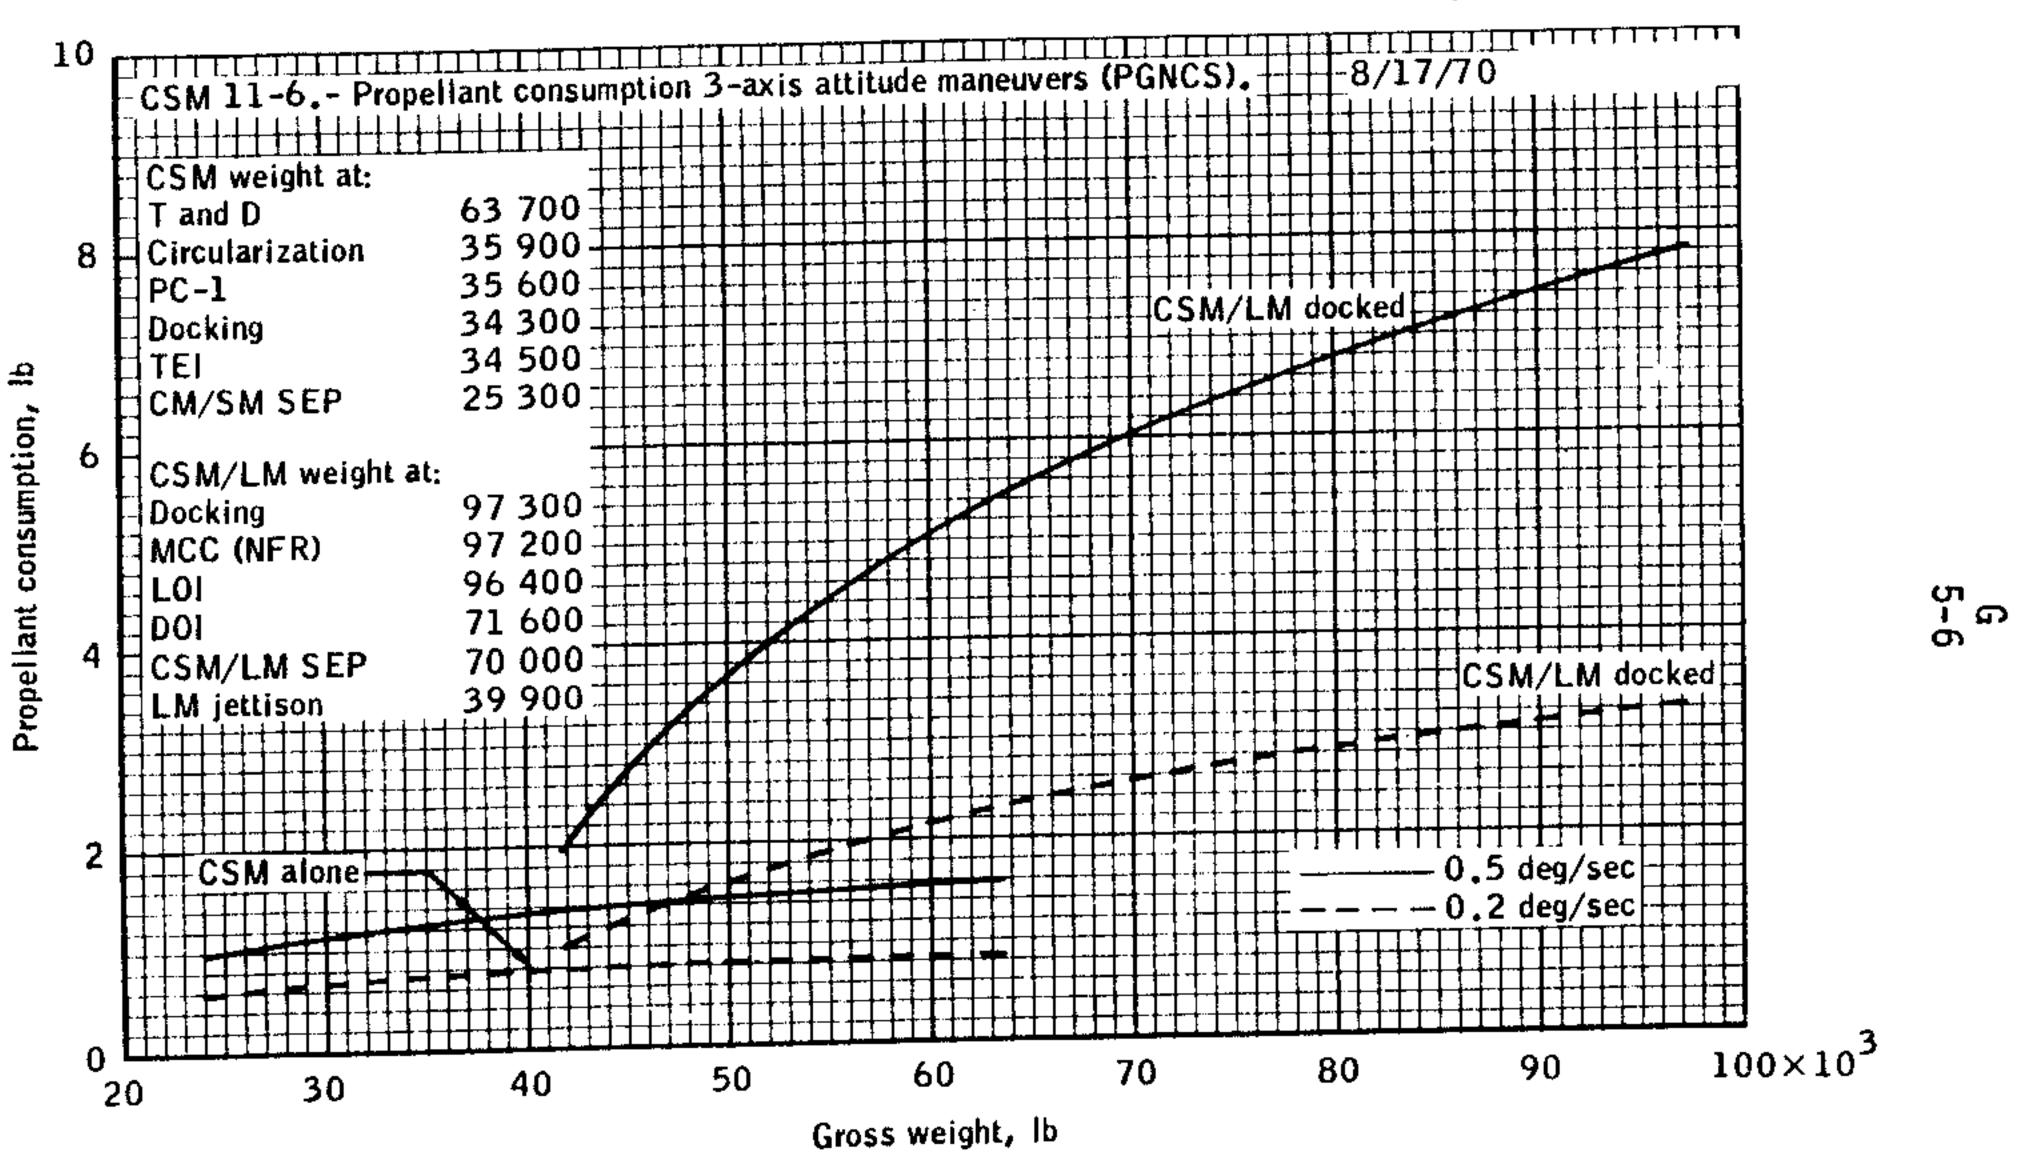


Propellant consumption 3-axis attitude maneuvers (PGNCS).

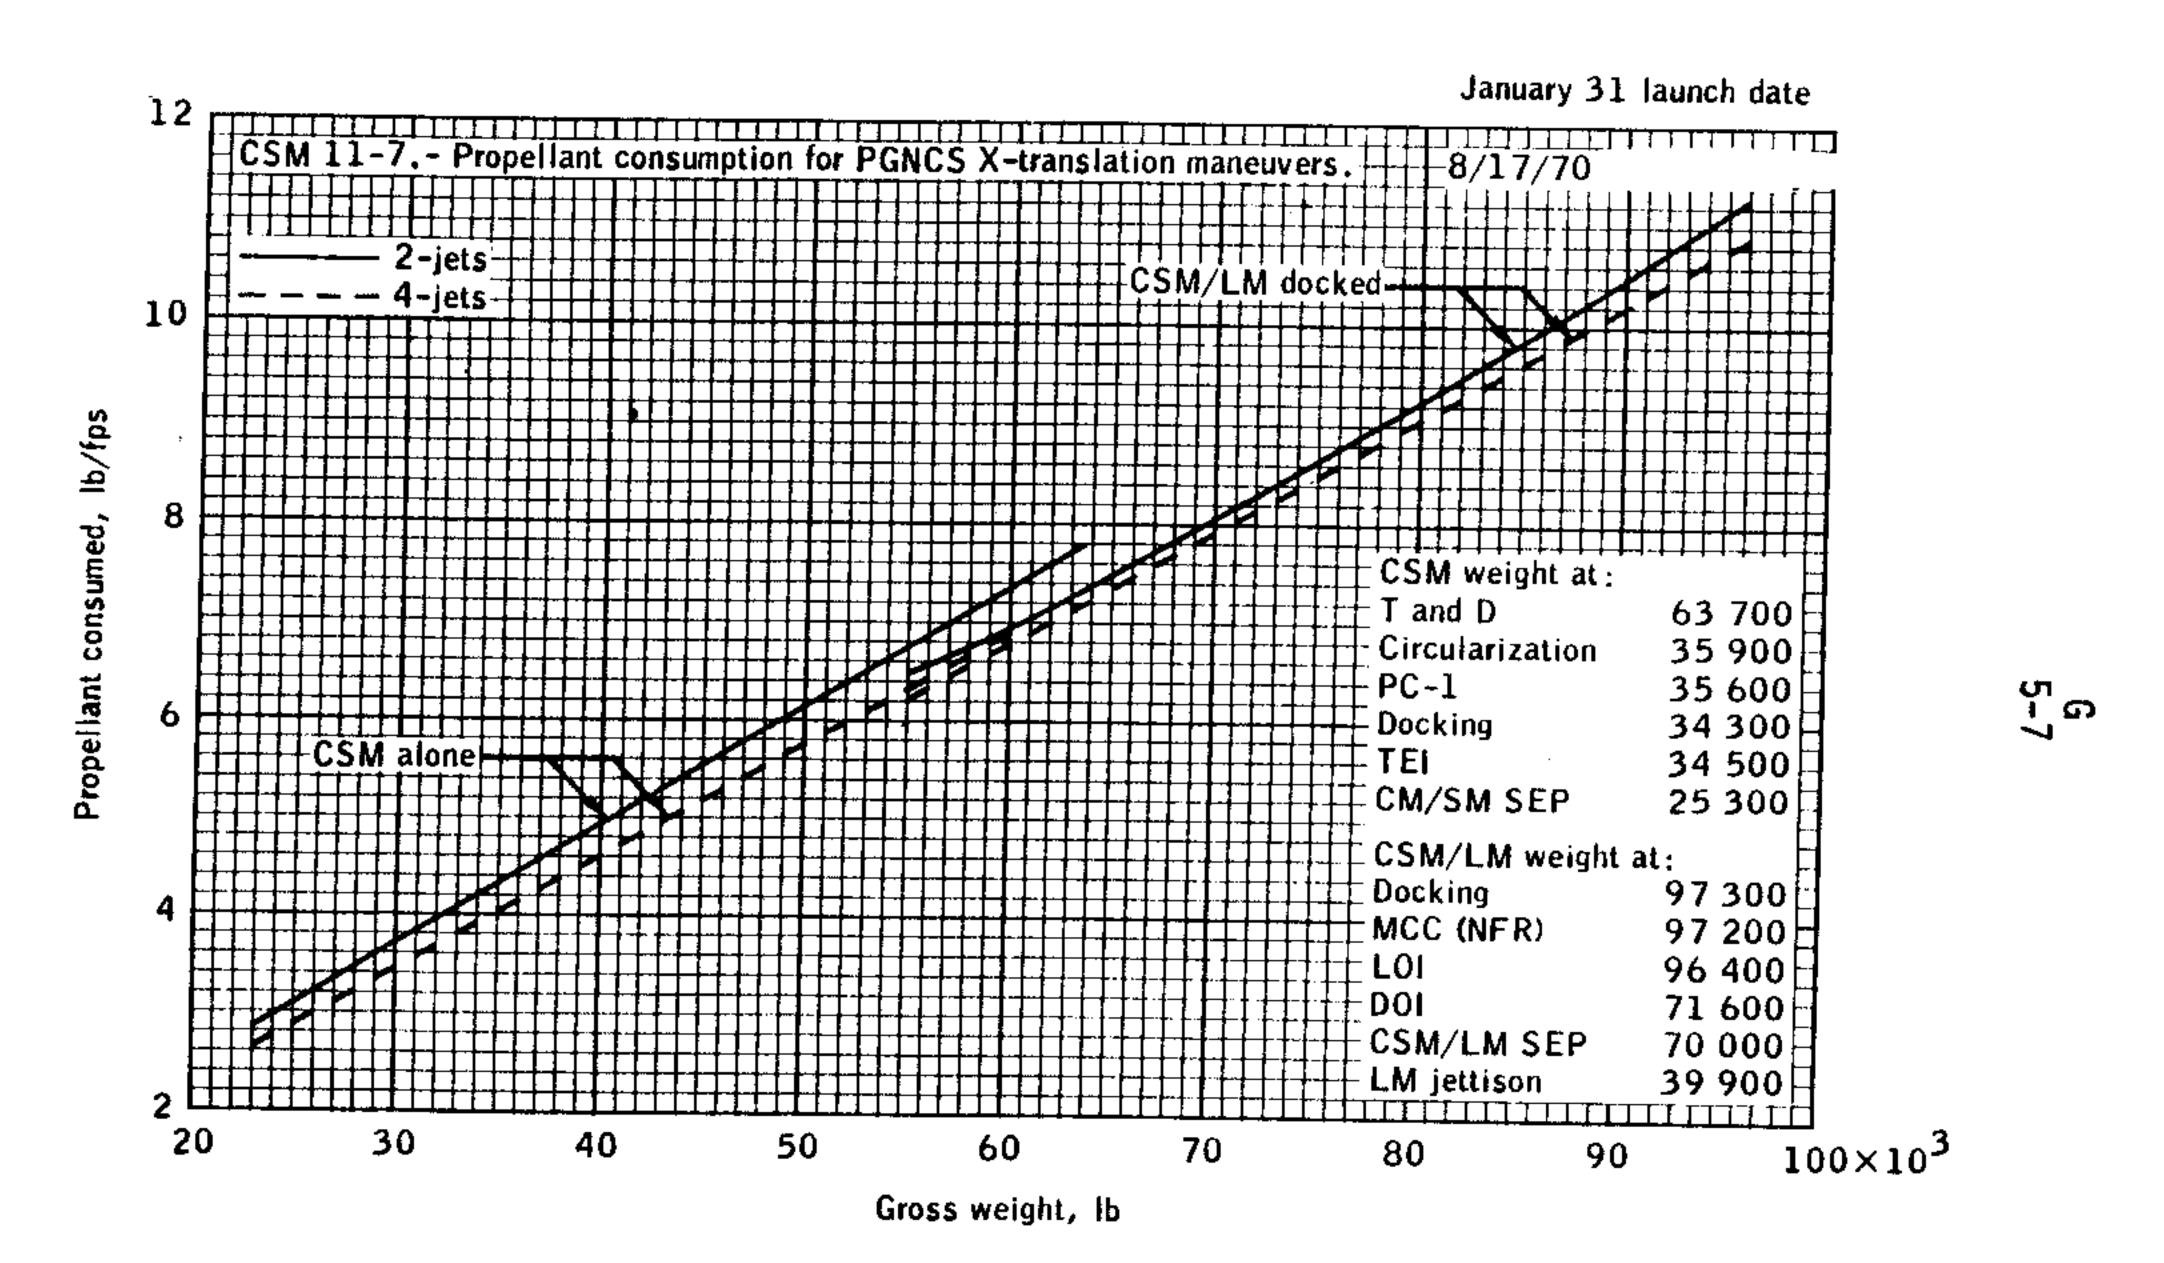

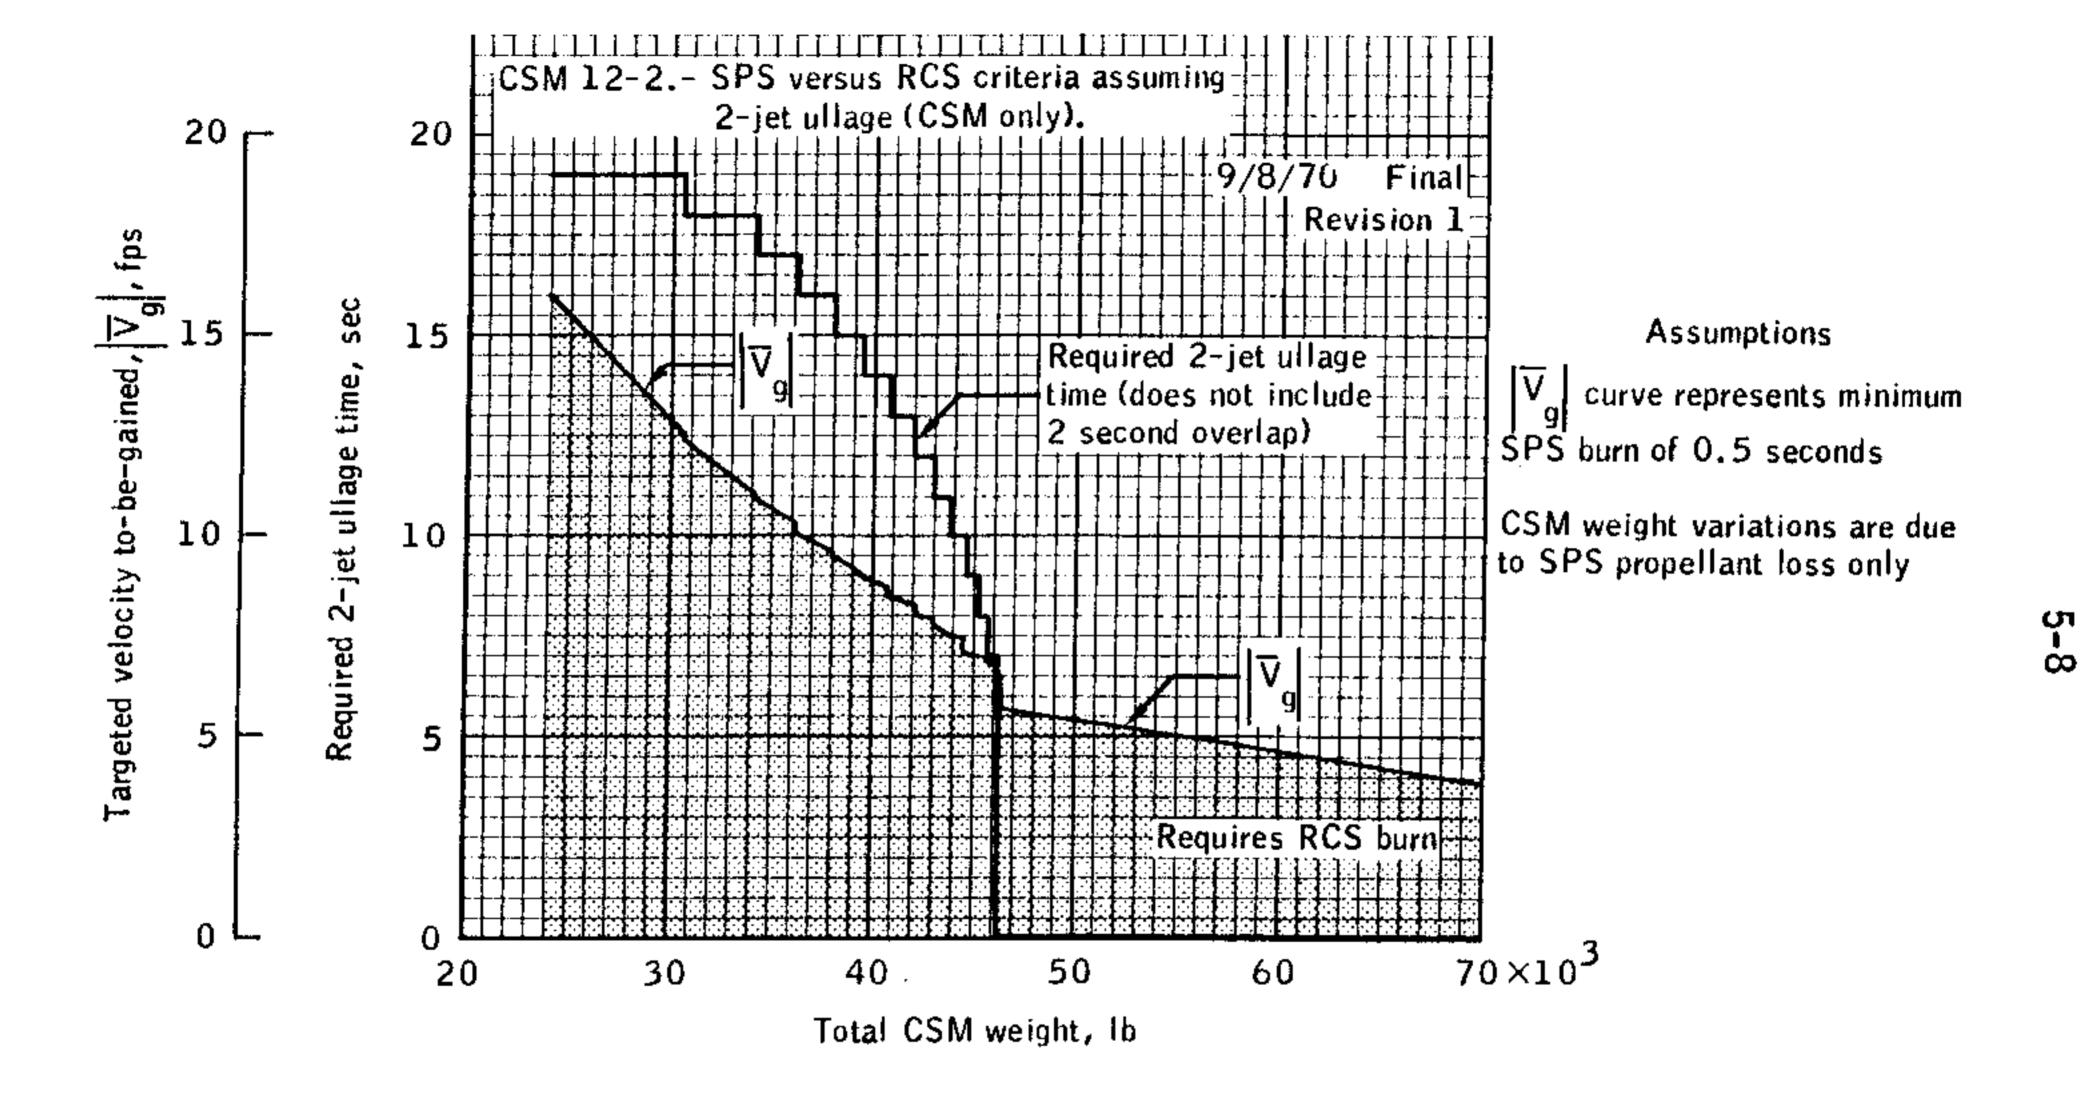

SPS versus RCS criteria assuming 2-jet ullage (CSM only).

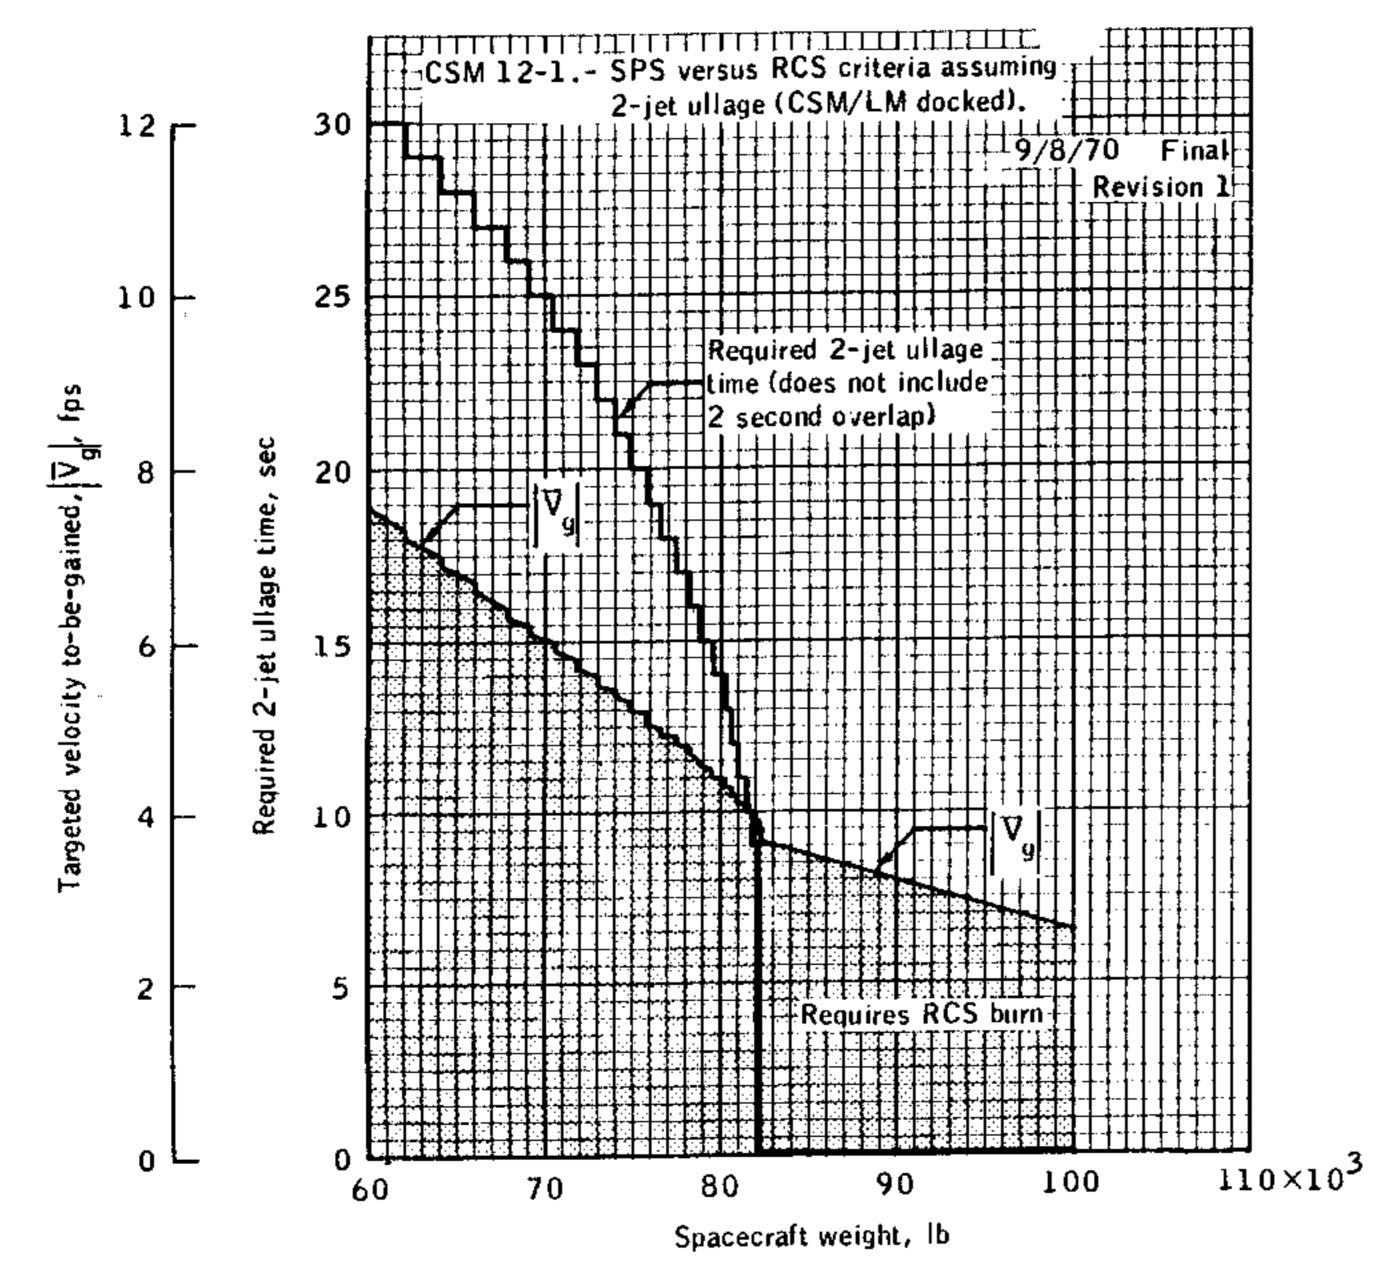


#### Assumptions

Spacecraft weight assumed to consist of CSM and fully loaded LM


 $\left| \overline{V}_{g} \right|$  curve represents minimum SPS burn of 0.5 seconds

G-5

CSM weight variations are due to SPS propellant loss only

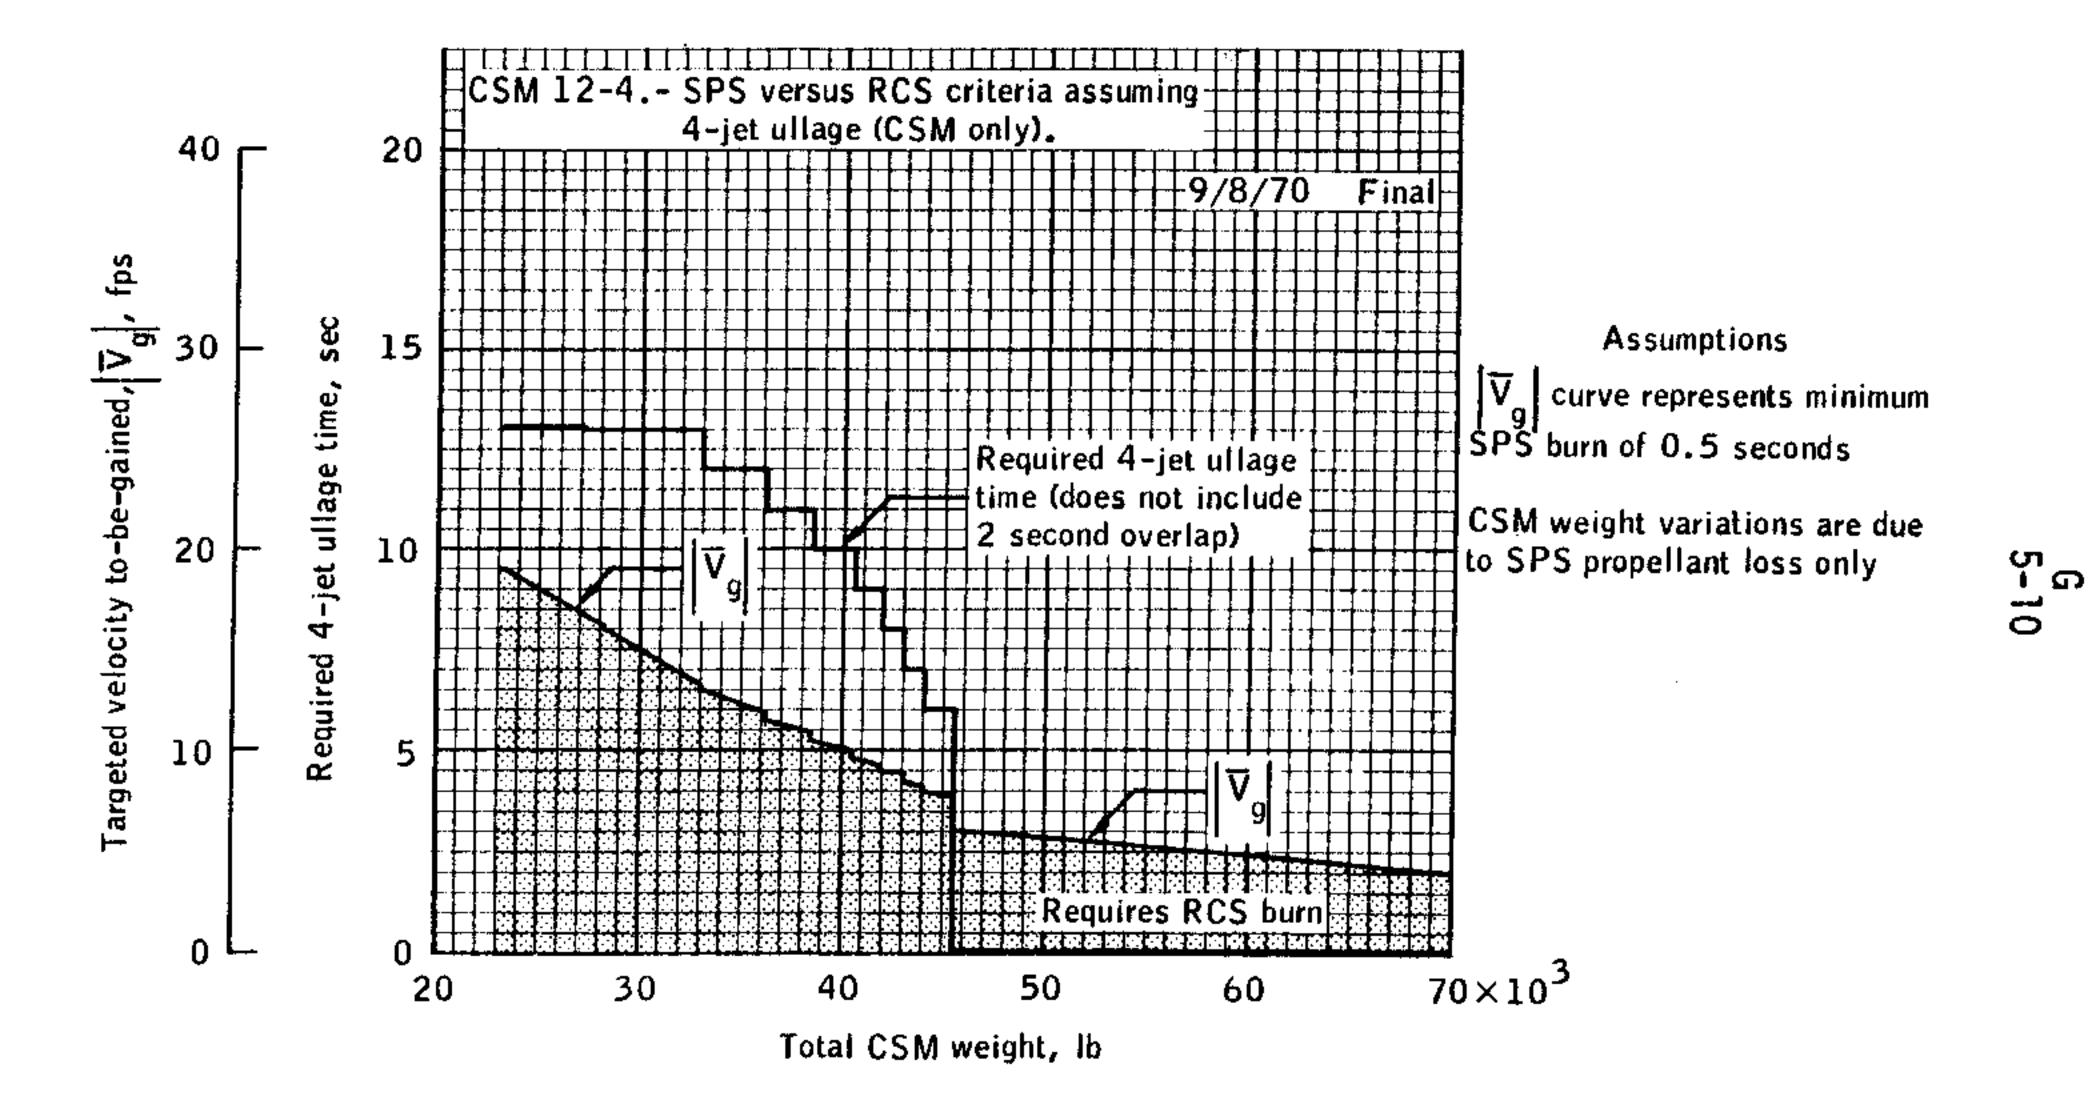

SPS versus RCS criteria assuming 4-jet ullage (CSM only).

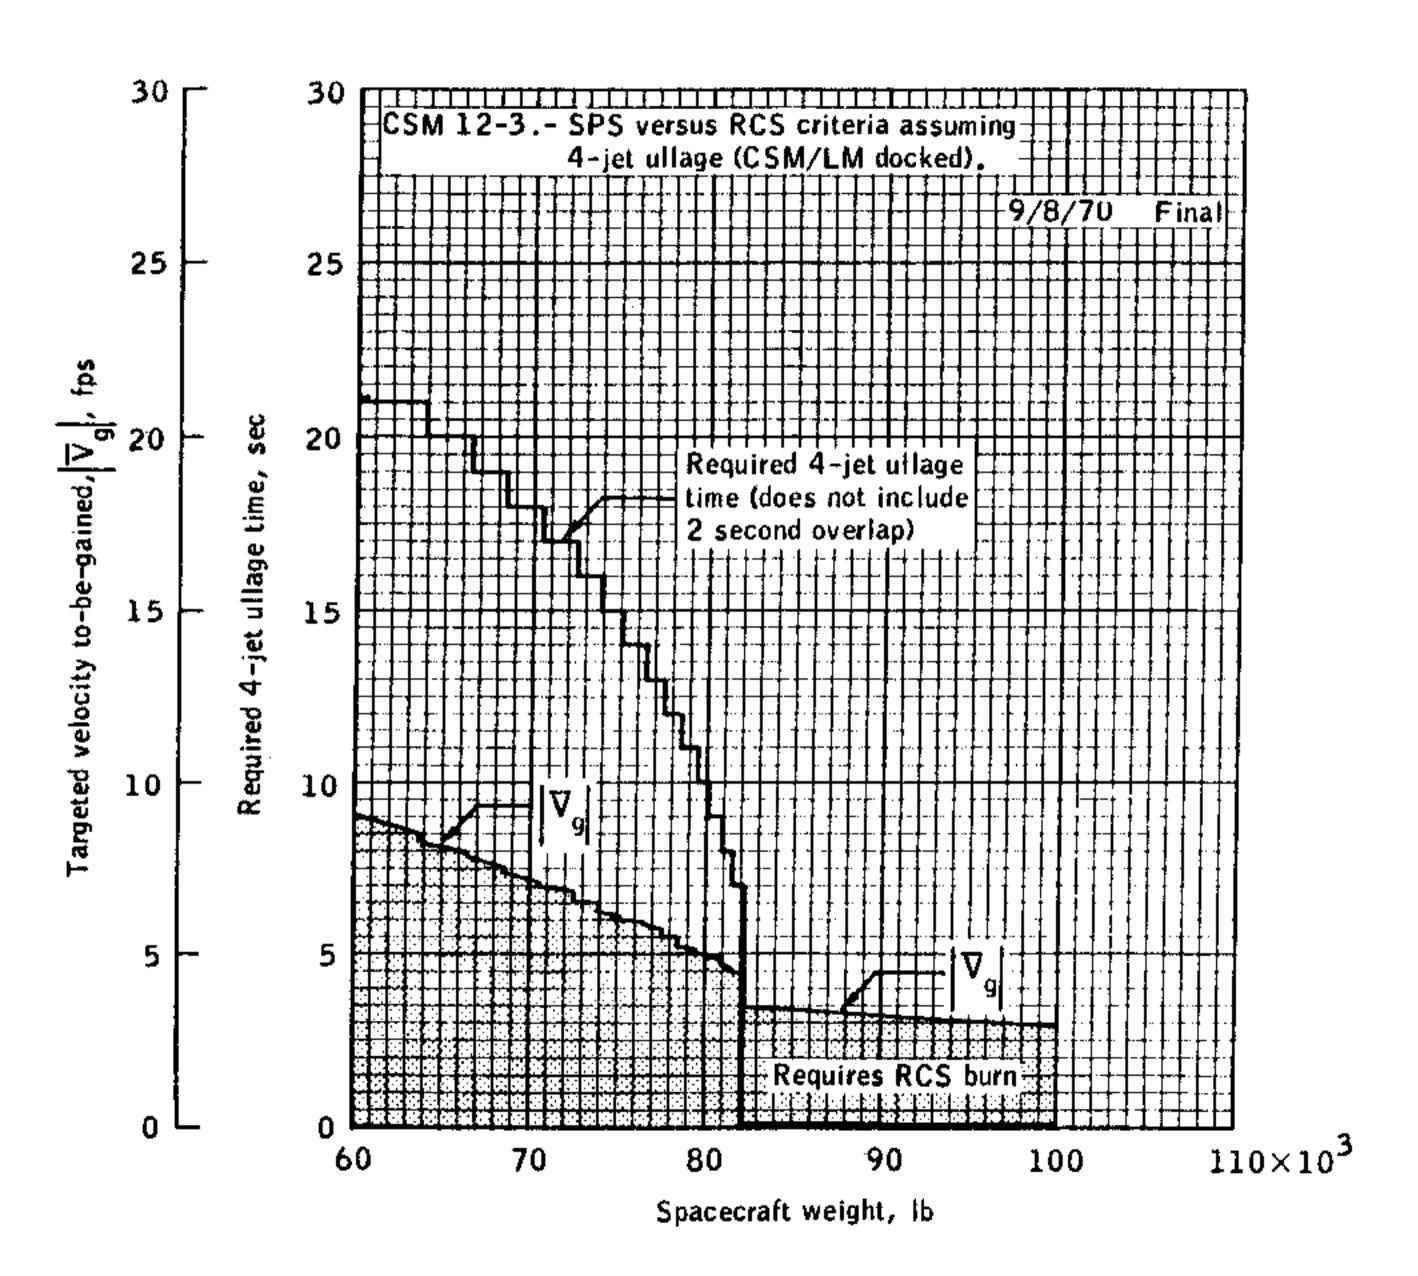

#### Assumptions


Spacecraft weight assumed to consist of CSM and fully loaded LM


 $\left| \overline{V}_{g} \right|$  curve represents minimum SPS burn of 0.5 seconds

CSM weight variations are due to SPS propellant loss only

<del>5-</del>]

CSM 14-2 SPS ENGINE TRIM GIMBAL ANGLES VERSUS SPACECRAFT WEIGHT

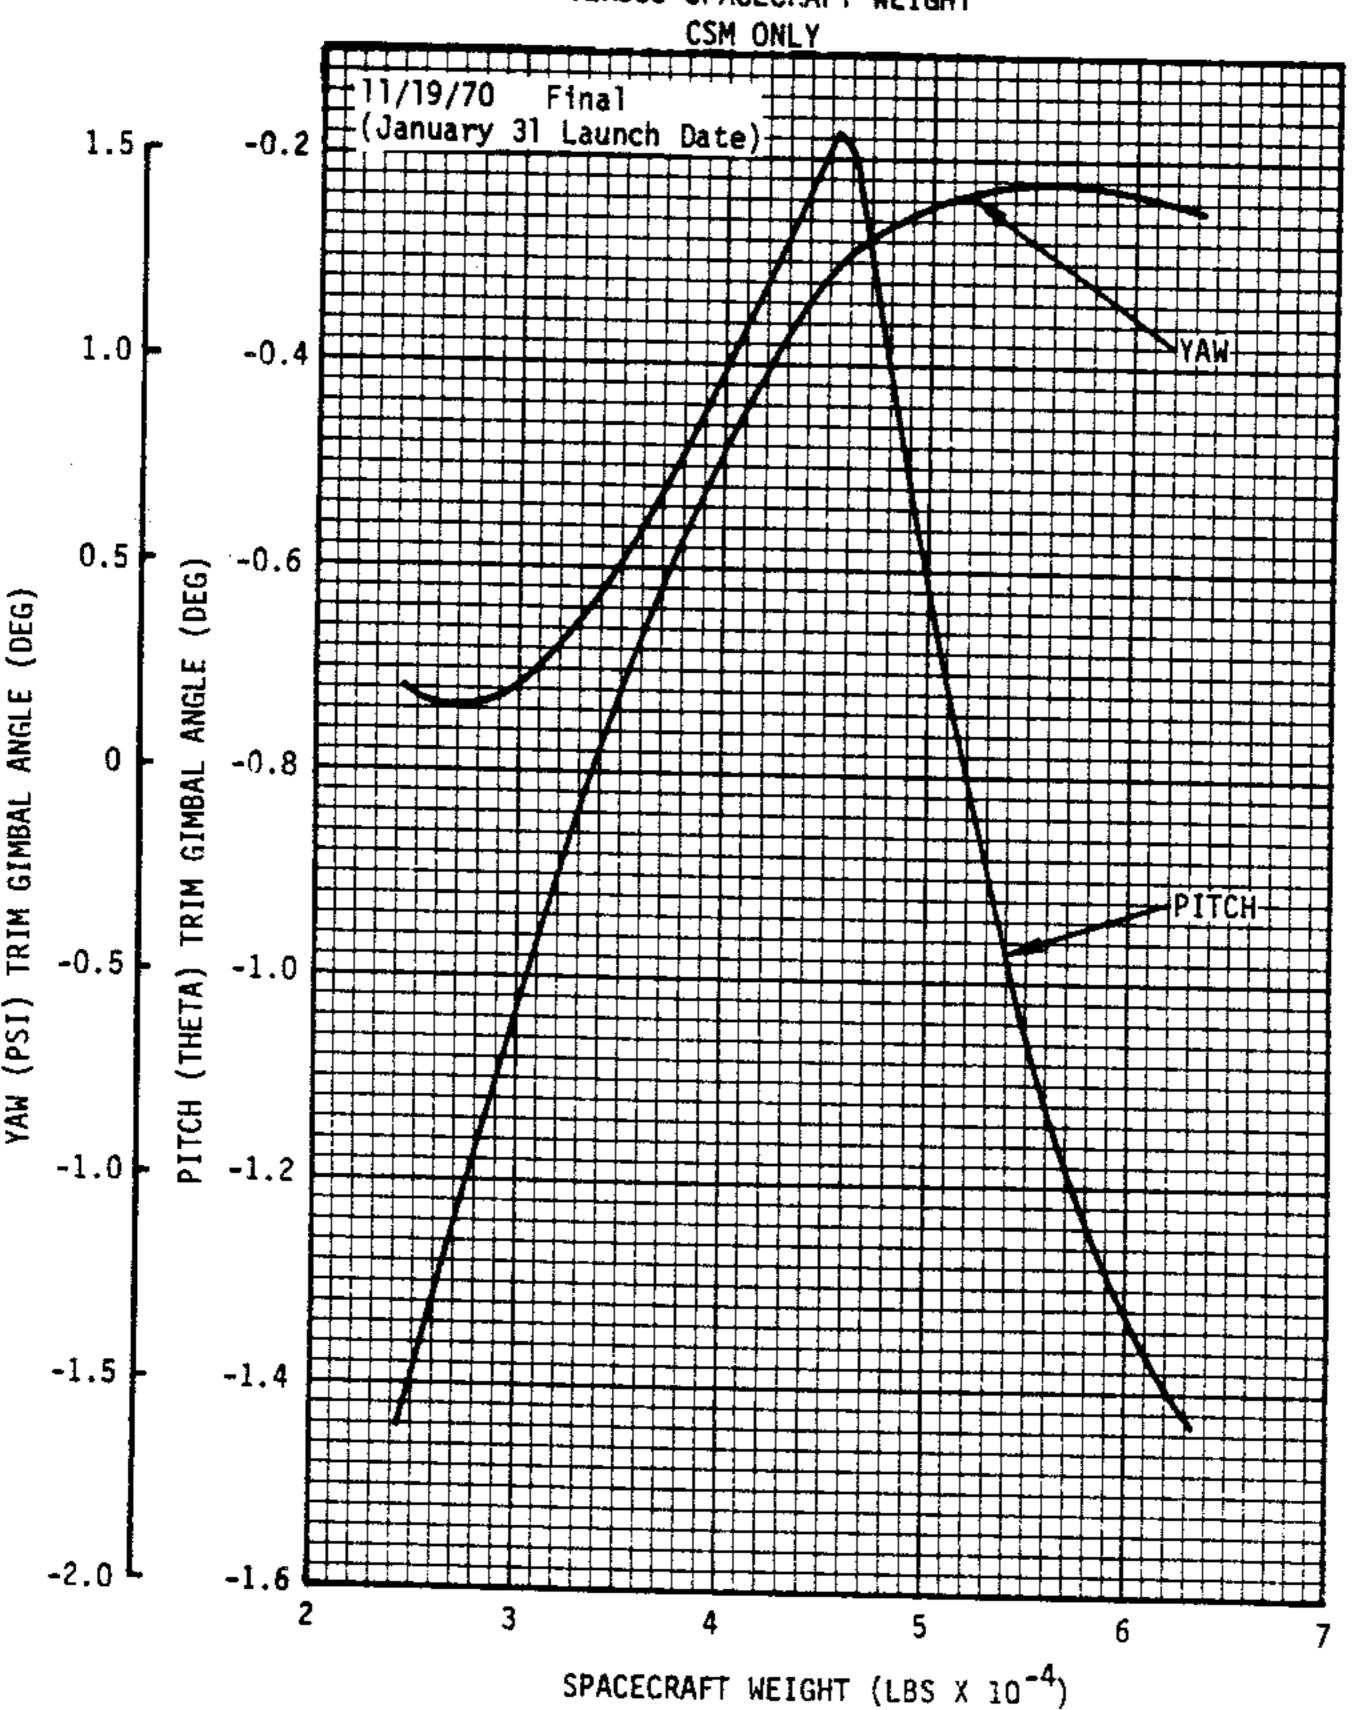

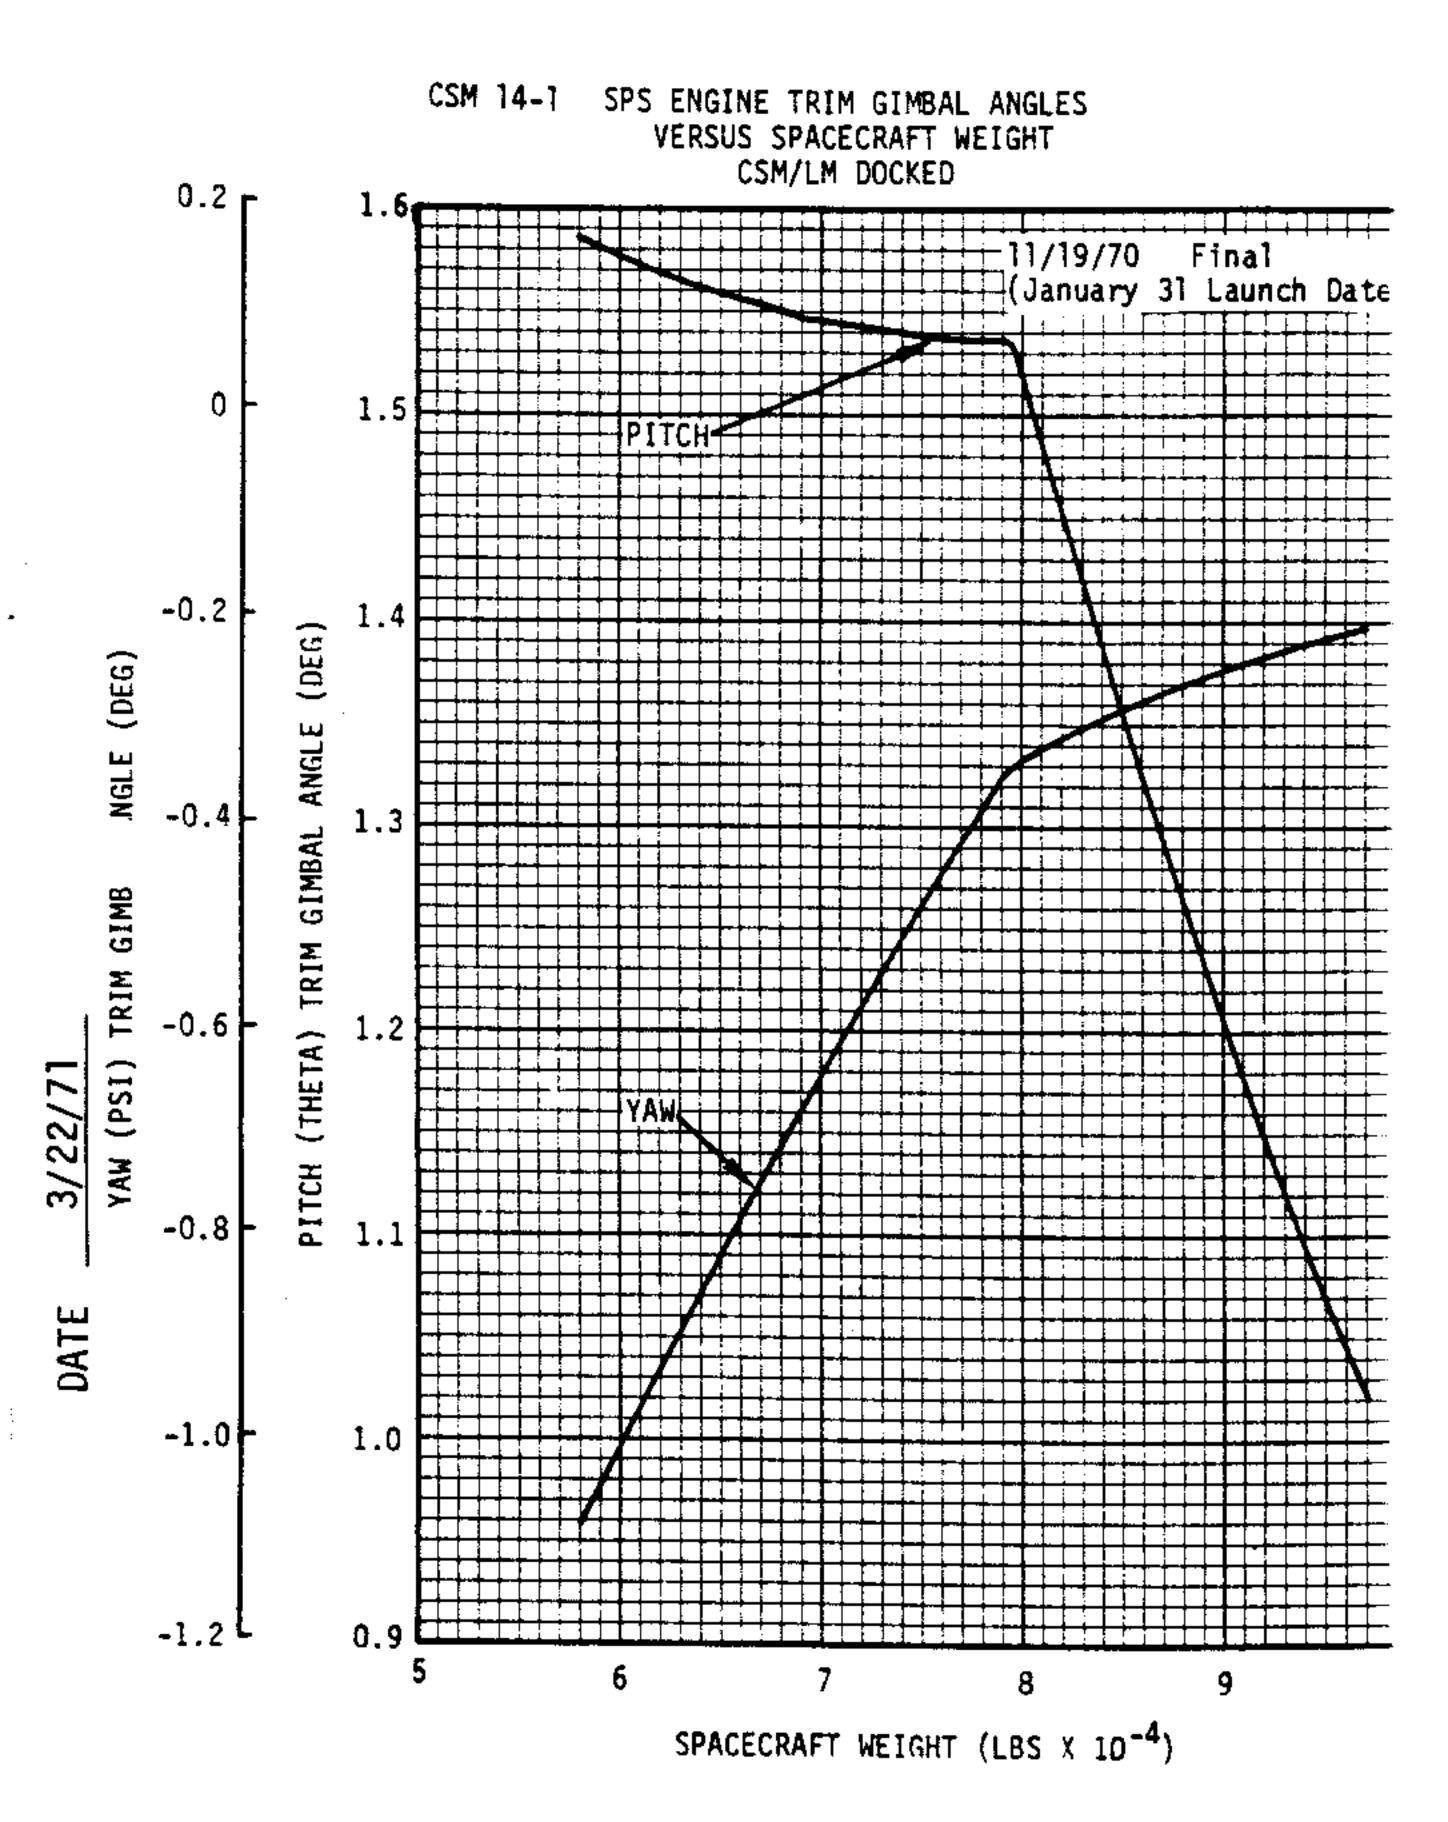

THIS PAGE INTENTIONALLY BLANK

3/22/71

SPS

## G&N CRITICAL BURNS

# IF NO START OR ISS LITE + PROG LITE IF CMC LITE, PROG ALARM 1407 OR EARLY CUTOFF

SCS TVC (2) - AUTO
SC CONT - SCS
ATTITUDE
SPS THRUST - DIRECT (momentary), if req'd

# IF ABNORMAL DYNAMICS

THC CW, control rates by MTVC After SHUTDOWN, AUTO RCS (16) - OFF

# IF MN BUS A LOST

TVC GMBL DR (P&Y) - 2, Go to pg EMER/1-10

# IF NO CUTOFF AFTER AV THRUST (BOTH - OFF

cb SPS PILOT VLVS - open

# IF EMS & N40 (R3) STILL COUNTING AFTER SHUTDOWN

SC CONT - SCS TRANS CONT PWR - OFF cb DIR ULLAGE (2) - open IF CONDITION PERSISTS, AUTO RCS SEL (16) - OFF SM RCS PRPLNT (AFFECTED QUAD) - OFF

# IF SPS PRESS LITE

CONTINUE CRITICAL BURN
IF FUEL & OX PRESS (both) > 200 psi
 SPS HE vlvs (2) - OFF, then control manually between 170-200 psi
IF FUEL/OX ΔP > 20 psi, SPS HE vlvs (2) - OFF IF CONDITION PERSISTS, SPS HE vlvs (2) - ON

SPS THRUST - DIRECT (momentary)

#### IF RATE NEEDLE HARDOVER & FDAIs DIVERGE OPPOSITE

BMAG MODE (3) - RATE 1 THC - CW, use MTVC

### IF ABNORMAL DYNAMICS IN AUTO MODE

THC - CW, use MTVC BMAG MODE (3) - RATE 2

#### IF ABNORMAL DYNAMICS IN MTVC MODE

THC - CW IF PROBLEM PERSISTS, SHUTDOWN AUTO RCS (16) - OFF

# IF MN A LOST

TVC GMBL DR (P&Y) - 2 SCS TVC (2) - RATE CMD, use MTVC, Go to pg EMER/1-10

#### IF MN B LOST

SCS TVC (2) - RATE CMD, use MTVC, Go to pg EMER/1-11

## IF AC BUS 1 LOST

TVC SERVO PWR 2 - AC2/MNB SCS TVC (2) - RATE CMD, use MTVC, Go to pg EMER/1-11

# IF AC BUS 2 LOST

TVC SERVO PWR 1 - AC1/MNA
BMAG MODE (3) - RATE 1
SCS TVC (2) - AUTO

ΔV CG - LM/CSM, MTVC w/trim tw's, Go to pg EMER/1-11

3/22/71

				V37E	RCS THRUSTING  Prethrust Program Complete CMC - on ISS - on SCS - OPERATING TEST C/W LAMPS  Perform EMS ΔV TEST & NULL  BIAS CHECK, pg G/2-5  Set ΔVC EMS FUNC - ΔV  BMAG MODE (3) - RATE 2  CMC MODE - FREE  AUTO RCS SELECT (16) - as Req'd  LOAD DAP (Check roll jets)  ROT CONTR PWR NORMAL (2) - AC/DC ROT CONTR PWR DIRECT (2) - MNA/B  Set DET OOE SC CONT - CMC/AUTO
1				MNVR V49E	TO PAD BURN ATTITUDE
2				PERFO V41 N	ORM BORESIGHT & SXT STAR CHECK
3				V37E (TFI	41E available via N4O, N45 or N35)
4	F	50	18 (AUT)	REQUE )) PRO	EST MNVR TO FDAI RPY ANGLES (.01°) BMAG MODE (3) - RATE 2 SC CONT - CMC/AUTO
5		06	18	AUT0	MNVR TO FDAI RPY ANGLES (.01°)

```
TF 3/2
```

```
5-18
6
    F 50 18 REQUEST MNVR TO FDAI RPY ANGLES (.01°)
          (AUTO TRIM) BMAG MODE (3) - RATE 2
                        ALIGN SC ROLL
                        SC CONT - CMC/AUTO
               PRO
                     MAN ATT (3) - RATE CMD
                     ATT DB - MIN
                     RATE - LOW
                     BMAG MODE (3) - ATT1/RATE 2
                     GDC ALIGN
               ENTR
       06 85 VG X,Y,Z
                                                 (.lfps)
                          * PROG Alarm 1t
                                                         *
                          * V5N9E - 01703 - TIG SLIPPED *
                          * KEY RLSE To 7
                                                         *
    55:00
  (-05:00)
                     TRANS CONT PWR - on (up)
                     HAND CONTROLLERS - ARMED
    59:25
  (-00:35)
                     DSKY BLANKS
    59:30
  (-00:30)
       16 85
8
                VG X,Y,Z (AVE G ON)
                     TAPE RCDR - HBR/RCD/FWD/CMD RESET
```

LIMIT CYCLE - OFF

EMS MODE - NORMAL

G

NULL COMPONENTS
RECORD ΔV COUNTER & RESIDUALS

EMS FUNC - OFF

EMS MODE - STBY

RHC & THC - LOCKED

G

TRANS CONT PWR - OFF

ROT CONTR PWR DIRECT - OFF

BMAG MODE (3) - RATE 2 TAPE RCDR - off (ctr) PCM BIT RATE - LOW

PRO (IF MINKEY, to sequencer 3X.2)

10 F 37 V82E

11 F 16 44 HA, HP, TFF

(.lnm,min-sec)

ΔVC

VGX

VGY

VGZ

PR<sub>0</sub>

12 F 37

00E

13

9

When COMP ACTY 1t out:

V66E (If LM S.V. not needed)

# P47 Thrust Monitor Program

CMC - on

ISS - on & aligned

1

V37E 47E

F 16 83  $\Delta V XYZ(CSM)$ 

(.1fps)

\*VI, HDOT, H available by N62E\* \*KEY RLSE to return to N83 \*

(RECYCLE) V32E (TERM) PRO

2 F 37

00E

TE 3/22/71

```
6-1
```

	P51 IMU ORIENTATION  CMC - on  ISS - on  SCS - operating  BMAG MODE (3) - RATE 2  G/N PWR OPTICS - on  OPT ZERO - OFF then ZERO (15 sec)  OPT MODE - MAN
1	V37E 51E F 50 25 00015 MNVR TO ACQ STARS (Coarse Align IMU To 0,0,0) - ENTR to 2 (BYPASS) PRO to 3
2	41 22 DESIRED GIMBAL ANGLES (0,0,0) NO ATT 1t - on then off, to 1
3	F 51 PLEASE MARK OPT ZERO - OFF MARK
4	F 50 25 00016 TERMINATE MARKS PRO
5	F 01 71 000DE STAR CODE Load desired code PRO to 3 after 1st MARK (to 6 if DE=00) to 7 after 2nd MARK (to 6 if DE=00)
6	F 06 88 CELESTIAL BODY VECTOR Load desired vector PRO to 3 after 1st MARK to 7 after 2nd MARK
7	F 06 05 STAR ANGLE DIFFERENCE (.01°) N 05 LIMITS 2 stars: $SXT \le + 00003$ SCT $\le + 00011$
	Star/planet: SXT < + 00018 SCT < + 00021
	(RECYCLE) V32E to 1 (ACCEPT) PRO

```
8 F 37 52E - bypass ZERO OPTICS or XXE
OPT ZERO - ZERO
```

```
P52 IMU REALIGN

CMC - on

ISS - on

SCS - operating

BMAG MODE (3) - RATE 2

G/N PWR OPTICS - on

OPT ZERO - OFF then ZERO (15 sec)

OPT MODE - CMC
```

Note: MINKEY displays not shown

```
V37E 52E
F 04 06 R1 00001 IMU ALIGN OPTION
R2 00001 PREF PRO to 4
2 NOM PRO to 2
3 REFSMMAT PRO to 7
4 LDG SITE PRO to 2
```

- F 06 34 GET ALIGN (0,0,0 initially)
  (hrs,min,.0lsec)
  Load desired GET
  TO SPECIFY PRESENT TIME PRO on (0,0,0)
  PRO (NOM go to 4)
- F 06 89 LAT, LONG/2, ALT (.001°,.001°,.01nm)
  Load 1dg site coords
  PRO
- F 06 22 NEW ICDU ANGLES OG, IG, MG (.01°) (IF MG>+70°, MNVR) V32E to 4
- F 50 25 00013 GYRO TORQUE (COARSE) PRO - NO ATT 1t - on then off - to 7 (TORQUE) CMC MODE - FREE ENTR
- 6 16 20 ICDU ANGLES (.01°)
  When torque complete go to 17

F 50 25 00015 STAR SELECT

```
JE 3/22/71
```

```
(MNVR If Necessary)
          (PICAPAR) PRO
                          *F 05 09 00405 NO PAIR
                          *(CREW SPECIFY) PRO - to 8*
                          *(PICAPAR) MNVR-V32E to 7 *
          (MAN ACQ) ENTR
8
    F 01 70
               OOODE STAR CODE
               Load desired code
                    OPT MODE - CMC (verify)
                    OPT ZERO - OFF
               PRO to 10 (to 9 if DE=00)
                          *F 05 09 00404 (TA>90°)*
                          *MNVR - PRO to 10
     F 06 88 CELESTIAL BODY VECTOR
               Load desired vector
               P<sub>R</sub>0
                          *F 05 09 00404 (TA>90°)*
                          *MNVR - PRO to 10
10
       06 92 SHAFT, TRUN
                                             (.01°,.001°
          (MARK ROUTINE) OPTICS MODE - MAN
11
   F 51
               PLEASE MARK
               MARK
12
     F 50 25
               00016 TERMINATE MARKS
               PRO
13
     F 01 71
               OOODE STAR CODE
               Load code (if necessary)
               PRO to 8 after 1st MARK (to 14 if DE=00
                    to 15 after 2nd MARK (to 14 if DE=0
14
     F 06 88
               CELESTIAL BODY VECTOR
               Verify vector
               PRO to 8 after 1st MARK
                    to 15 after 2nd MARK
```

```
(.01^{\circ})
15 F 06 05 STAR ANGLE DIFFERENCE
                           N 05 LIMITS
                               SXT < + 00003
                     2 stars:
                               SCT ₹ + 00011
                     Star/planet: SXT \leq + 00018
SCT \leq + 00021
           (REJECT) V32E to 17
           (ACCEPT) PRO
                                                  (.001°)
     F 06 93 TORQUING ANGLES OG, IG, MG
16
           (TORQUE) CMC MODE - FREE
                     PR0
           (BYPASS) V32E
     F 50 25 00014 ALIGNMENT CHECK
17
           (RECHECK) PRO to 7
                   ENTR
           (BYPASS)
                XXE
18
     F 37
                OPT ZERO - ZERO
                G/N PWR OPTICS - OFF
                P53 - BACKUP IMU ORIENT DETERMINATION
                                                              3/22/71
                      CMC - on
                      ISS - on
                      SCS - operating
                      MAN ATT (3) - MIN IMP
                      COAS LOS DETERMINATION - complete
                 V37E 53E
                00015 MNVR To ACQ STARS
      F 50 25
           (BYPASS) (Coarse Align IMU to 0,0,0) - ENTER to 2
                     PRO to 3
                 DESIRED GIMBAL ANGLES (0,0,0)
        41 22
 2
                 NO ATT 1t - on then off, to 1
                 ALT LOS OPT ANGS SHAFT, TRUN (.01°,.001°)
      F 06 94
 3
                 Load proper angles
                      COAS NOM: Shaft +00000
                                  Trun +57470
                 PR0
```

```
)ATE
```

```
G
                           6 - 5
4
    F 53
                PLEASE MARK
                Center Target
                ENTR
5
                00016 TERMINATE MARKS
     F 50 25
           (REJECT) ENTR to 4
                PR<sub>0</sub>
     F 01 71
                OOODE STAR CODE
                Load desired code
                PRO to 3 after 1st MARK (to 7 if DE=00)
                     to 8 after 2nd MARK (to 7 if DE=00)
     F 06 88
                CELESTIAL BODY VECTOR
                Load desired vector
                PRO to 3 after 1st MARK
                     to 8 after 2nd MARK
     F 06 05 STAR ANGLE DIFFERENCE
8
                                                     (°10.)
                      N 05 LIMITS (COAS)
                      2 stars: < + 00070
                      Star/plane\overline{t}: \leq + 00072
            (RECYCLE) V32E to 1
           (ACCEPT)
                     PR<sub>0</sub>
9
     F 37
                XXE
                 P54 - BACKUP IMU REALIGN
                      CMC - on
                      ISS - on
                      SCS - operating
                      MAN ATT (3) - MIN IMP
                      COAS LOS DETERMINATION - complete
                 V37E 54E
      F 04 06
                 R1 00001
                            IMU ALIGN OPTION
                 R2 00001
                           PREF
                                     PRO to 4
                           NOM
                                     PRO to 2
                            REFSMMAT PRO to 7
                            LDG SITE PRO to 2
```


```
G
6-6
```


```
F 06 34 GET ALIGN (0,0,0 initially)
                                        (hrs,min,.Olsec)
               Load desired GET
               TO SPECIFY PRESENT TIME - PRO on (0,0,0)
               PRO (NOM go to 4)
3
     F 06 89
               LAT, LONG/2, ALT (.001°,.001°,.01nm)
               Load 1dg site coords
               PR<sub>0</sub>
4
     F 06 22 NEW ICDU ANGLES OG, IG, MG
                                                  (.01°)
          (IF MG>70°, MNVR) V32E to 4
               PRO
5
     F 50 25 00013 GYRO TORQUE
          (COARSE) PRO - NO ATT 1t - on
                          then off - to 7
          (TORQUE) CMC MODE - FREE
                   ENTR
6
       16 20
               ICDU ANGLES
                                                  (.01°)
               When Torque complete go to 17
     F 50 25 00015 STAR SELECT
          (Mnvr If Necessary)
          (PICAPAR) PRO
                          *F 05 09 00405 NO PAIR
                          *(CREW SPECIFY) PRO to 8 *
                          *(PICAPAR) MNVR-V32E to 7*
          (MAN ACQ) ENTR
8
     F 01 70
               OOODE STAR CODE
               Load desired code
               PRO to 10 (to 9 if DE=00)
9
     F 06 88
               CELESTIAL BODY VECTOR
               Load desired vector
```

PR0

```
10
     F 06 94
               ALT LOS OPT ANGS SHAFT, TRUN(.01°,.001°)
                Load angles
                     COAS Nom: Shaft +00000
                                Trun
                                      +57470
               PRO
11
     F 53
               PLEASE MARK
               Center Target
               ENTR
12
     F 50 25
               00016 TERMINATE MARKS
          (REJECT) ENTR to 11
               PR0
     F 01 71
13
               OOODE STAR CODE
               Load code (if necessary)
               PRO to 8 after 1st MARK (to 14 if DE=00)
                    to 15 after 2nd MARK (to 14 if DE=OC
14
     F 06 88
               CELESTIAL BODY VECTOR
               Verify vector
               PRO to 8 after 1st MARK
                    to 15 after 2nd MARK
15
   F 06 05 STAR ANGLE DIFFERENCE
                                                   (°10.)
                           N 05 LIMITS (COAS)
                     2 stars: < + 00070
                    Star/plane\overline{t}: \leq + 00072
           (REJECT)
                    V32E to 17
          (ACCEPT) PRO
     F 06 93 TORQUING ANGLES OG, IG, MG
16
                                                  (.001°)
          (TORQUE) CMC MODE - FREE
                     PR<sub>0</sub>
          (BYPASS)
                    V32E
17
     F 50 25 00014 ALIGNMENT CHECK
          (RECHECK)
                      PRO to 7
           BYPASS)
                     ENTR
18
     F 37
```


XXE

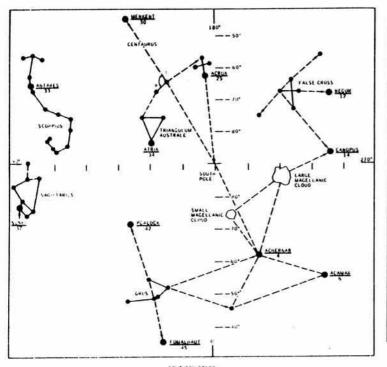

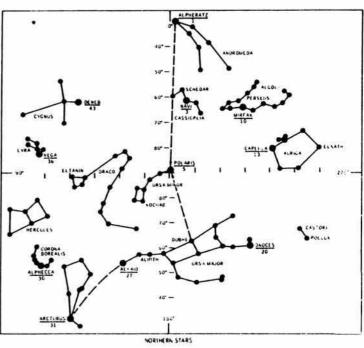

SOUTHERN STARS

Ī	2	2				•	•-	2722													4	POL ARIS	
•;									· Nachan													-	
	CEPHENS	1			1	1							a	,								CASSIOPEIA N	
			-43		*****	1		•	ALKAI		• ::	•;	- T-		DNO	CES			MI	RFAK		sender	•.
		CYCLUS	DENE	EB.	(nm.	1			27-	7.	CAMES VEH	une:	u.uin		20	5			CAPELL	••		;~~	WE DA
		•	**		vi	EGA		500TES /	1		8 cm m	1		a Linca		Cur		•.		PERSCUS			•
-	•	•		• 30-	-	MERCULES		-		31				.•.		•		, "		(0	1	ALPHERAT	TZ.
	Mortet	C-44	og) sums	-40 A	RASALH	AGUE		ALPHECO		ARCTU	RUS	DENEB					٠.,	-	AL DEBAR	PAN		· Sheether	
-	,	ENIF	ALTAI	1.5 /			•			****/	4	23	1 4	22	US PRO	OC YON	*	• • •	NION		MENKAR	Vernal Eq	- Smiles
rnal Eq	******	۲,,,	:							-	1	Autumnal	Equinox		21	SKINON		N.			1		
	***		nuus is	DABIH		·	1			26	SPICA	GIENAH 24		,.:2.		4	SIRIUS		RIGEL		)		/
~	5 FOMALH			NUNK			×33	1	•						~	*	*****					DIPHDA 2	7
7	•	.,		372		ANIA		O APIG		MENKE	NT									. ,	ACAMAR	8	
_	***	C T	٠,			•			•				1	Ā 5		REGO	R				1		:
	1	•	- ^	-#42				;		1		7	ěī'		¥, .		· Vc	ANOPUS		or adus	``	ACHER	RNA
-+			PEACOCK	(				ANICA .	1 1		25 ACRUX	•.		•.							1	•	
- 1		. =	4		1 -	4	IVE		1	-	AUNUA	-	1	-			-		-	-	f 15 00	HTDRUS	-

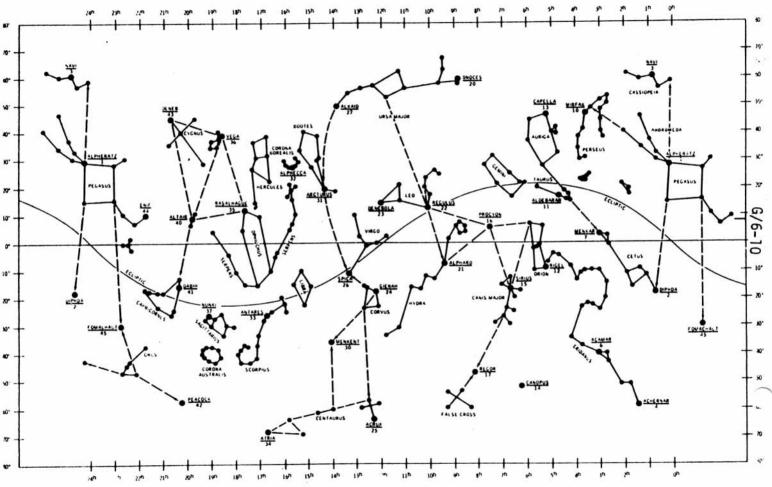

### RAPID IMU REALIGN

NOTE: This procedure assumes a good GDC alignment

- 1 V41 N20E
  Load R,P,Y from GDC Ball
- V40 Verify R,P,Y on GDC Ball - ENTR (Releases Platform And Recovers PGNS Control Modes)
- 3 V25 NO7E 77E, 10000E, 1E (Sets REFSMMAT FLAG)
- 4 V37E 51E, PRO (Sets Drift Flag) V37E 00E
- 5 Perform P52, Option 3

V37E 52E

NOTE: If Loss of Alignment Is Due To Temporary Loss of DC BUS, Update CMC Clock With V55 To Complete Recovery.

# CHANGING LANDING SITE REFSMMAT FOR OUT-OF-PLANE BURNS

- 2 F 04 06 R1=00001 R2=00004 (LOAD LANDING SITE OPTION) 3 F 06 34 GET ALIGN
  - F 06 34 GET ALIGN

    Present Pitch ΔVy R1

    Load R1: 0 ± 90° ± RLS LAT ±35°

    180 ± 90° ± RLS LAT ∓35°
- 5 F 06 22 NEW ICDU ANGLES

PRO

ENTR (TO LEAVE P52)

F 50 25 R1=00013 CMC MODE-FREE ENTR TO GYRO TORQUE 16 20 UNTIL TORQUING COMPLETE R1=00014 ALIGNMENT CHECK F 50 25 CMC MODE - AUTO **ENTR** P30 P40 YAW BACK TO 0° (MANUALLY) V37E 52E F 04 06 R1 = 00001R2=00004 (LOAD LANDING SITE OPTION) GET ALIGN (LOAD TIME OBTAINED FROM MSFN) F 06 34 F 06 89 LAT, LONG/2, ALT (LAT WILL BE CHANGED BACK TO STORED RLS) F 06 22 NEW ICDU ANGLES F 50 25 R1 = 00013CMC MODE-FREE ENTR TO START TORQUING UNTIL TORQUING COMPLETE 16 20 F 50 25 R1=00014 ALIGNMENT CHECK CMC MODE - AUTO

(TO SELECT 2 STARS IF TIME PERMITS)

171 001 0

	GDC ALIGNMENT TO IMU GIMBAL ANGLES  IMU - on SCS - operating
1	Damp vehicle rates
2	ATT SET dials - set to IMU angles of FDAI SELECT - 1 FDAI SOURCE - ATT SET ATT SET - IMU ATT SET dials - null FDAI 1 err needles ATT SET - GDC GDC ALIGN PB - push until needles FDAI SEL - 1/2
	BACKUP GDC AND/OR IMU ALIGNMENT  (IMU or CMC failed)  SCS - operating  RECORD: R,P,Y ALIGN from MSFN
1	IMU PWR - OFF Wait ∿5 min for gyros to run down before step 8
2	Set SCT to 0° SHFT, 352.5° TRUN OPTICS PWR - OFF
3	ATT SET dials - R,P,Y ALIGN
4	Mnvr to position stars in SCT O° mark - Vega (36) R line - Deneb (43)
	or

SOUTH Acrux (25) Atria (34)

NORTH
O° mark - Navi (3)
R line - Polaris (5)

```
G
7-4
```

```
5
                       FDAI SELECT - 1
                       ATT SET - GDC
                       GDC ALIGN PB - push until needles
                                                    nulled
6
                     ATT SET dials - 0,0,0
                    MNVR to 0,0,0 and null error needles
8
                     IMU PWR - on (up)
                       (IMU drives to 0°, 0°, 0°)
                    Wait 90 sec.
9
                    Uncage IMU
                       IMU CAGE - on (up) ~5 sec
                                  then release
                 IN-PLANE GDC ALIGNMENT
                      CMC - on
                      ISS - on
                      SCS - operating
                 V37E 52E
      F 04 06
                 00001
                 Load R2=00002
                 PR<sub>0</sub>
     F 06 34
                 GET ALIGN 0,0,0
                 PR<sub>0</sub>
3
     F 06 22
                R,P,Y
4
                      Set ATT SET dials to R,P,Y on DSKY
5
                        FDAI SELECT - 1
                        ATT SET - GDC
                        GDC ALIGN - push
6
                V37E XXE
```

3/22/71

1		FDAI 1 or 2 - ORB RATE EARTH/LUNAR - as req'd
2	F 04 12	V82E 00002 SPECIFY VEHICLE 00001 PRO
3	F 06 16	GET EVENT (hrs,min,.01sec)
4	F 16 44	HA, HP Calculate Average ALT SET - Set Average PRO
5	F 16 54	V83E R,RDOT,THETA (.01nm,.1fps,.01°)  MODE - HOLD/FAST SLEW - To THETA MODE - OPR/SLOW PRO
		SCS ORDEAL INITIALIZATION (IN-PLANE GDC ALIGNMENT REQ'D)
1		FDAI 1 or 2 - ORB RATE EARTH/LUNAR - as req'd
2		MSFN Supply Altitude ALT SET - Set
3		SC +X At the Horizon
4		MODE - HOLD/FAST SLEW FDAI (See table) MODE - OPR/SLOW

G

7-5

ı	H	N	Δ	R
٠,	v	11	Л	П

### EARTH

Angle*	Alt(nm)	Angle*
78	100	14°
20°	200	19°
32°	500	29°
	<del></del>	20° 200

\*Angle from +X S/C axis to horiz

```
COAS LOS DETERMINATION

CMC - on

ISS - on

SCS - operating

SC CONT - SCS

MAN ATT (3) - MIN IMP

G/N PWR OPTICS - on

OPT MODE - CMC

OPT ZERO - OFF then ZERO (15 sec)
```

V37E 52E

(REPEAT) KEY RLSE (EXIT) V37E XXE

OPT ZERO - ZERO

G 7-7

CMC/LGC CLOCK SYNC/TEPHEM UPDATE V16 N65E (On LM request)

(hr,min,.01sec)

Voice CMC time to LM VO5 NOIE 1706E (On LM request) Voice TEPHEM to LM

V55 CMC TIME UPDATE
(See EXT VERBS pg. G/1-27)

ALIGN LM IMU TO CSM IMU

ATT DB - MIN

RATE - LO

LIMIT CYCLE - ON

SC CONT - SCS

MAN ATT (3) - RATE CMD

BMAG MODE (3) - ATT1/RATE2

V06 N20E

Voice ICDU angles to LM\*

Terminate attitude hold on LM cmd

V06 N20 (On LM request)

On LM MARK, Key ENTR

Copy ICDU angles and transmit to

\*LM (IGA)p = P20 + 180° LM (OGA)y = 300° -R20 +  $\Delta \emptyset$ LM (MGA)r = 360° -Y20

MSFN

G 7-8

### Align LM IMU to CSM GDC

SCS - on GDC - on and aligned

1 On LM Request, hold att.:

ATT DB - MIN RATE - LO LIMIT CYCLE - ON BMAG MODE (3) - ATT 1/RATE 2

On LM Request, Read GDC FDAI R,P,Y then
ATT SET dials - Set to FDAI R,P,Y
FDAI SELECT - 1
FDAI SOURCE - ATT SET

FDAI SCALE - 5/1

ATT SET - GDC

Null FDAI 1 error needle using ATT SET dials Read ATT SET dial angles to LM

3 On LM Request, terminate att hold

### ALIGN LM AGS TO CSM IMU/GDC

CMC - on

ISS - on and orientation known

or

SCS - on

GDC - on and aligned

Upon LM request, MNVR to

 $R = 300^{\circ} + \Delta \emptyset$ 

 $P = 180^{\circ}$ 

 $Y = 0^{\circ}$ 

and hold att., min DB

(If SCS: RATE-LO, LIMIT CYCLE-ON)

- 2 Notify LM when at attitude
- 3 When LM alignment complete terminate att hold

# 3/22/71

# Align CSM GDC to LM IMU

## GDC - on (req)

- Request LM to Hold Attitude, Min DB
- 2 Request and copy LM Readout of V06N20 angles:

- ATT SET dials Set to  $R = 300^{\circ} + \Delta \phi LM (OGA)y$   $P = LM (IGA)p 180^{\circ}$   $Y = 360^{\circ} LM (MGA)r$
- 4 FDAI SELECT 1 ATT SET - GDC GDC ALIGN - Push
- 5 Notify LM att hold not req

# Align CSM GDC to LM AGS

- Request LM MNVR to 0,0,0 on AGS FDAI, min DB
- 2 ATT Set dials Set to  $R = 300^{\circ} + \Delta \phi$   $P = 180^{\circ}$   $Y = 0^{\circ}$
- 3 FDAI SELECT 1 ATT SET - GDC
- 4 When LM at Attitude: GDC ALIGN - Push
- 5 Notify LM Att Hold not req'd

Align CSM IMU to LM IMU

CMC - on ISS - on SCS - on

- Verify LM in MIN DB, ATT HOLD
- Request and copy LM Readout of V06N20E

  LM(OGA)y

  LM(IGA)p

  LM(MGA)r
- Calculate Gimbal Angles:  $CM (OGA) = 300^{\circ} + \Delta \phi LM (OGA)y$   $CM (IGA) = LM (IGA)p 180^{\circ}$   $CM (MGA) = 360^{\circ} LM (MGA)r$
- 4 V41N2OE Load Gimbal Angles
- 5 V40E Allow 10 sec before step 7 Notify LM Att Hold Not Req.
- 6 Set REFSMFLG: V25N7E, 77E, 10000E, 1E
- 7 V37E51E PRO V37E00E
- Request MSFN Uplink REFSMMAT then Perform P52 (OPT 3)

V06N2O On CM Mark - ENTR
Voice Angles to MSFN for calculation
of Gyro Torquing Angles.
Perform V42 GYRO TORQUING using ground
calculated Torquing Angles (pg. G/1-24)

```
G
7-11
```

# Align CSM IMU TO LM AGS

CMC - on ISS - on

- Request LM MNVR to 0,0,0 on AGS FDAI
- When LM at Attitude:
  V41N2OE

  LOAD: R1 = 300° + ΔØ

  R2 = 180°


  R3 = 0°
- 3 V40E Allow 10 sec before step 5 Notify LM Att Hold not req.
- 4 Set REFSMFLG: V25N7E, 77E, 10000E, 1E
- 5 V37E51E PRO V37E00E
- Request MSFN Uplink REFSMMAT, then, if desired, perform P52 (OPT 3)

G 7-12 CRESCENT ALIGN

If SCT: Drive optics To 180,32.5

G&N PWR OPT - OFF

MNVR to acquire EARTH in Optical System's field-of view. Then MNVR to align required Reference line along Earth's Crescent.

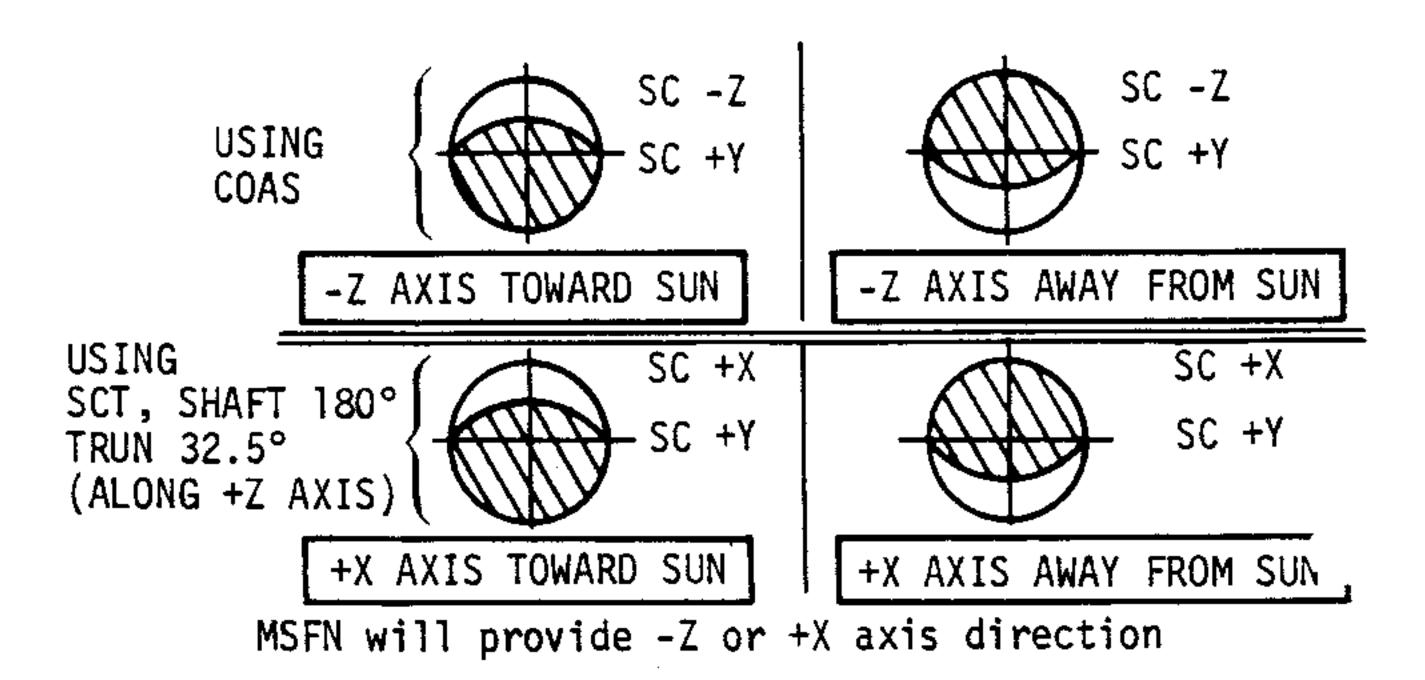

- (For GDC only, see step 8)
  If CMC not avail:
   Verify IMU PWR OFF (5 min)
  Go to Step 9
- 3 V41N2OE, load desired angles from MSFN or 0,0,0
- 4 V40, Verify Ref. Line Aligned with Crescent ENTR
  Allow 10 sec before step 6
- 5 V25NO7E, 77E, 10000E, 1E
- 6 V37E51E, PRO, V37E00E (Request MSFN uplink REFSMMAT and, if desired, do P52

```
ATT SET - GDC
            ATT SET DIALS - 0,0,0 (or angles from MSFN)
             Verify Ref line aligned to crescent, then:
            GDC ALIGN - Push
       9
             Do not perform this step if CMC avail:
               IMU PWR - ON (up)
               Wait 90 sec
               IMU CAGE - on (up) ~5 sec then release
                                 GDC REFSMMAT DETERMINATION
                                 GDC - on
                                 CMC - on
                                 IMU - off
                                 G/N PWR OPTICS - on
                                 OPT ZERO - OFF THEN ZERO (15 se
                                 OPT MODE - MAN
                       Acquire Apollo Nav star
                       in optics
                       FDAI Scale - 5/1
3/22/71
                       Hold att (ATT DB - MIN, RATE - LO)
                       Align GDC to 0,0,0
                       V25 N20E
                       E,E,E
       2
                       V37E00E
                       V96E
       3
                       Initiate P51 logic
                       as follows:
                          V21N1E
                            1214E
                              63E (65 if P53 desired)
                         V25N26E
                           13001E
                            3425E
                           30005E
                             V30E
                        (Note: Major mode Its. on DSKY do not
                                  change from 00 to 51)
```

G

7-13

Align GDC to IMU, if desired

or

FDAI SELECT - 1

8

```
7-14
     F 50 25
4
               00015 ACQ STARS
               PR0
     F 51
5
               PLEASE MARK
                If necessary, mnvr and:
                  V25N20E
                  Load present GDC angles
                OPT ZERO - OFF
                Null FDAI needles with Min imp
                  then:
                MARK
     F 50 25
               00016 TERM MARKS
6
                PR0
                OOODE STAR CODE
     F 01 71
                Load star code
                PRO to 5 after 1st MARK (8 \text{ if DE} = 00)
                    to 9 after 2nd MARK (8 if DE = 00)
                CELESTIAL BODY VECTOR
     F 06 88
8
                Load vector
                PRO to 5 after 1st MARK
                    to 9 after 2nd MARK
                                                     (°10.)
9
     F 06 05 STAR ANGLE DIFFERENCE
                  (Expect <.1°)
           (RECYCLE) V32E to 1
           (ACCEPT) PRO
10
     F 37
                XXE
                  OPT ZERO - ZERO
```

CMC has now calculated

has set REFSMFLG and

DRIFTFLG.

a REFSMMAT for the GDC,

G

```
G
7-15
```

GDC - on and REFSMMAT Known (pg G/7-13)

### GDC REFSMMAT REALIGN (P52)

```
CMC - on
               SCS - operating
               IMU - off
               G/N PWR OPTICS - on
               OPT ZERO - OFF THEN ZERO (15 sec.)
               OPT MODE - MAN
               Acquire nav. target in
                 optics
               Hold att (ATT DB-MIN, RATE-LO)
               V25N20E
                 Load GDC angles
               V37E52E
     F 04 06
2
               R1 00001
               R2 00001 PREF PRO to 5
                       2 NOM PRO to 3
                         REFSMMAT PRO to 7
                       4 LDG SITE PRO to 3
     F 06 34 GET ALIGN (0,0,0 initially)
3
                                         (hr,min,.01 sec)
                Load desired GET
                TO SPECIFY PRESENT TIME - PRO on (0,0,0)
                PRO (NOM go to 5)
4
     F 06 89
               LAT, LONG/2, ALT (.001°,.001°,.01nm)
                Load 1dg site coords
                PR<sub>0</sub>
                                                    (.01°)
5
     F 06 22
                NEW ICDU ANGLES OG, IG, MG
                (If MG > + 70^{\circ}, MNVR and reload N20)
                  V32E - to 5
                Align GDC to new angles
                V25N20E
                Load new angles
                PRO
6
     F 50 25
                00013 GYRO TORQUE
```

PRO (NO ATT 1t-on then off,

PROG ALM - ignore)

```
7-16
    F 50 25 00015 ACQ STARS
         (opt 3) PRO
      (Not opt 3) OPT ZERO - ZERO
                    G/N PWR OPTICS - OFF
                    V37EXXE - procedure complete
8 F 01 70
            000 DE STAR CODE
               Load desired code
                    OPT MODE - CMC (verify)
                    OPT ZERO - OFF
               PRO to 10 (to 9 if DE = 00)
                         *F 05 09 00404 (TA > 90°)
                          *MNVR & reload N20 - PRO to 10*
    F 06 88 CELESTIAL BODY VECTOR
               Load desired vector
               PR<sub>0</sub>
                         *F 05 09 00404 (TA > 90°)
                          *MNVR & reload N20 - PRO to 10*
10
       06 92 SHAFT, TRUN
                                            (.01,.001^{\circ})
          (MARK ROUTINE) OPTICS MODE - MAN
11 F 51
                         PLEASE MARK
          (If required)
                         V25N20E
                          Load present GDC angles
                          Null FDAI needles with
                           min imp, then:
                          MARK
12
     F 50 25
               00016 TERMINATE MARKS
               PRO.
13
     F 01 71
               OOODE STAR CODE
               Load code (if necessary)
               PRO to 8 after 1st MARK (to 14 if DE=00)
                    to 15 after 2nd MARK (to 14 if DE=00)
14
     F 06 88
               CELESTIAL BODY VECTOR
               Load vector
               PRO to 8 after 1st MARK
```

to 15 after 2nd MARK

G

```
G
7-17
```

F 06 05 STAR ANGLE DIFFERENCE (.01°) (Expect < .1°, if not V32E to 17) (Accept) PRO

TORQUING ANGLES OG, IG, MG (.001°)

N93 is indicative of BMAG drift
since last alignment

If torque angles excessive
perform P51

Otherwise: OPT ZERO - ZERO

G/N PWR OPTICS - OFF

V37EXXE - procedure complete

17 F 50 25 00014 ALIGNMENT CHECK PRO to 7

### LM STEERABLE ANT POINTING

- Select V64 (pg G/1-27)
- 2. Mnvr to N51 angles:

R1 = +03000, R2 = 09000 (+Z orien) R1 = -03000, R2 = 27000 (-Z orien)

<u> </u>	J
	_
2	2
$\alpha$	١
PR	_
$\subseteq$	)
	•
TC/UI	,
ユ	_

```
8-1
                       Opt 2 (PTC/Orb rate)
                P20
                V37E 20E
      F 04 06
                   00024 TRACKING OPTION
                R2 00000
                Load 2 in R2
                PRO
2
     F 06 78
                AXIS YAW, AXIS PITCH, OMICRON
                                                     (°10.)
                Load values (OMICRON ignored)
                PRO
3
     F 06 79
                RATE, DEADBAND, Blank (.0001°/sec,.01°)
                Load desired values
                PR<sub>0</sub>
4
     F 06 34
                START TIME
                                         (hrs,min,.01 sec)
               Load desired GET
                     (all 0's for present time)
                PR<sub>0</sub>
5
               Maneuver starts at requested GET
               Selection of the following programs will
                  not stop rotation:
                     P21, P22, P24, P27, P29,
                     P30
                     P52,P54
                     P72-P75
```

(r

```
PASSIVE THERMAL CONTROL (G&N)
```

```
RHC - Locked
               FDAI SCALE - 5/1
               RCS DAP - Activated
1 COPP
             V48E (Select 0.5° DB)
     CHANGE PROG V37E OOE
 MANEOVER RED V49E
2 F 06 22 Load PTC Attitude R - Present
 DISP DEC ANGLES (PLLOWS LOAD?)
                                P - 90° (TLC) or 270°
                                    Y - 0°
                                                  (TEC)
               PR<sub>0</sub>
3 F 50 18 BMAG MODE (3) - RATE 2
PLEASE PERFORM
               SC CONT - CMC
AUTO MANEUVER
               CMC MODE - AUTO
                PR0
```

DISP ANTO MANEUVER

06 18 AUTO MANEUVER

F 50 18

PLEASE PERF

5 ANTO PARTIE

6

Damp vehicle rates:

ENTR

Disable all jets on two adjacent quads Wait 20 minutes for rates to damp AUTO RCS SEL (2)-MNA or MNB as follows:

+ROLL -ROLL
A1,C1 A2,C2
or B1,D1 or B2,D2
Remaining AUTO RCS SEL (14) - OFF

MAN ATT (ROLL) - RATE CMD

Perform P20, opt-2 (p. G/8-1) Use 0,0,0 in N78

Disable RCS and Term. P20
AUTO RCS SEL (16) - OFF
ROT CONTR PWR DIR (2) - OFF (verify)
V56E

3

4

To exit G&N PTC to new att:

1. MAN ATT (3) - ACCEL CMD AUTO RCS SEL (12) - MNA/B

2. Verify DAP load

3. Select new desired att:
V37E00E
V49E
F 06 22 New ICDU angles
PR0
F 50 18

4. Start auto manevuer: PRO within 180° (in direction of roll) of new att MAN ATT (3)-RATE CMD

### PASSIVE THERMAL CONTROL (SCS)

SCS - operating S/C CONT - SCS ROT CONTR PWR NORMAL #2 - AC/DC

MAN ATT (3) - RATE CMD
LIMIT CYCLE - on(up)
DEADBAND - MIN
RATE - LOW
BMAG MODE (3) - ATT 1/RATE 2

AUTO RCS SEL Configure for single jet operation
(Wait 20 min to allow rates to damp)

FDAI SCALE - 5/1
MAN ATT (ROLL) - ACCEL CMD or MIN IMP
DEADBAND - MAX
RATE - HIGH

Enable jet couple in roll Initiate Desired Roll Rate

AUTO RCS SEL (16) - OFF ROT CONTR PWR DIR (2) - OFF (verify) BMAG MODE (3) - RATE 2

### G 8-4

### TERMINATE PTC

AUTO RCS SEL (12) - MNA/B Null Rates

### PITCH ORBIT RATE MANEUVER (G&N)

Note: P20, opt 1 or 5 (p. G/3-1) may also be used to achieve orb rate.

Establish initial attitude

Perform P20 Opt. 2 (p. G/8-1)

To terminate: V56E

## PITCH ORBIT RATE MANEUVER (SCS)

ORDEAL - initialized (p G/7-5) SCS - Operating

FDAI SCALE - 5/1

Maneuver to desired LCL Vert Att (Roll = 7.25° or 187.25°)

BMAG MODE (3) - ATT 1/ RATE 2
DEADBAND - MAX
RATE - LOW
MAN ATT (ROLL, YAW) - RATE CMD
MAN ATT (PITCH) - MIN IMP

Establish desired Pitch Rate using MIN IMP & ORDEAL FDAI

To terminate:
MAN ATT (PITCH) - RATE CMD

4

3

5

ERASABLE LOAD UPDATE

In the event of PROG ALARM 1107, perform the following:

V74E (Wait 42 sec:HBR) (DUMP E MEMORY)

**V36E** 

V48E (LOAD DAP as DESIRED - use

V46E latest known weights)

V25N07E 77E 10000E 1E (set REFSMMAT)

VINIE 104E (verify CMOON FLAG and LMOON FLAG)
(BITS 11 AND 12 SHOULD BE 0 IN

EARTH SPHERE and 1 in MOON SPHERE)

Verify E MEMORY (should be done ASAP)

VINIE

XXXXE (LOAD OID 2 OF UPDATE)

N15E, READ R1, E REPEAT FOR UPDATES A-L

FOR UPDATE M

VINIE

1. XXXXE (LOAD EVEN OID'S)

2. READ R1, E (READ ODD OÍD'S IN R1) RETURN TO 1

IN CASE OF A DISCREPANCY LOAD THAT UPDATE AS A NORMAL P27

> V37E51E, PRO V37E00E (Sets drift flag) OPT ZERO - OFF OPT ZERO - ZERO

P52-OPTION 3-AUTO OPTICS

AUTO OPTICS SUCCESSFUL, REFSMMAT VALID AUTO OPTICS UNSUCCESSFUL, DO P51 V16 N65 verify CMC CLOCK (UPDATE) TO CHECK STATE VECTOR CALL P21
AND LOAD PRESENT TIME. WHEN COMP CYCLE
IS COMPLETE

VO6 N73E

READ R1 (R1 X 10=CURRENT ALT (NM))

COMPARE TO SOME KNOWN VALUE (E.G., FLIGHT PLAN)

IF ANSWER COMPARES - STATE VECTOR IS OK AND

P23 SHOULD BE USED TO IMPROVE IT.

IF GROSS ERRORS ARE OBSERVED, P23 IS UNLIKELY

TO CORRECT THEM. IN THIS CASE PERFORM

V71 LOAD OF LATEST PAD S.V. - SELECT

P00 TO BRING S.V. TO PRESENT TIME.

# THIS PAGE INTENTIONALLY BLANK

OID	A	В	С	D	Ε	F	G
	V71	V71	٧71	V71	V71	V71	V71
01	00021	00013	00012	00015	00023	00023	00024
02	01452	01706	01346	01765	02000	02021	02042
03	77143	00006	00005	00001	00137	00001	00001
04	71737	33304 32251	06510	27404	00763	03120	33443
05	00110	07000	07025	⊕+ <i>\$⊃+</i> 00000 ⊕+ <u></u> ⊕-5 ~	00023	00001	00003
06	67635	00000	00620	15514	° /4° 0001	03120	02115
07	76745	17356	00000	00542	00000	00311	77775
10	72727	00000	33260	02210	00000	31727	70001
11		22764	37723	36321	00471	77700	77777
12	77115	37777	01163	12160	00364	60177	40174
13	00314	37777		03363	04400	77762	77774
14	00000			00233	77772	55276	62760

01614 ch@ 21241:10

17 77425

DATE 3/22/71

OID	Α	В	С	D	E	F	G
	٧71	V71	٧71	٧٦١	V71	٧71	V71
15	77640			00502	53647	00007	00004
16	01371		-		00002	04312	36300
17	00023		·		12573	07147	00002
20	00071				00001	77775	15226
21	77706				35676	77411	00077
22					00002	00003	03412
23					27310	31036	77754
24							75526

1) 200 19 9-5

OID	Н	I	J l	K	L	М	S.V.
<u> </u>	V71	٧7٦	٧7٦	٧7٦	٧7٦	V72	٧71
01	00024	00024	00022	00023	00021	00017	
02	02064	02106	02130	03000	03025	00736	
03	77771	01077	02375	00436	37777	37777	<del>.</del>
04	72235	27652	04715	02732	00000	01477	<u>.</u>
05	77461	02631	14650	00000	00000	00000	
06	70714	37371	12113	00000	54360	02377	
07	77510	70643	65411	77777	21075	00142	<u>.</u>
10	61414	71747	72642	77777	37777	03021	·
31	77622	74315	73351	42757	60465	01000	
12	70025	55007	43037	10510	00000	03022	
13	76777	66437	14427	06477	54360	00232	
14	71317	70077	13747	74470	21075	03376	

Apollo /

DATE 3/22/71

OID	Н	I	J	K	L	М	S.V.
	٧7٦	٧7٦	V71	٧71	V71	V72	٧71
15	01363	75440	14732	01605	37777	00000	
16	04371	54216	02326	00105	57142	03377	
17	00555	76105	05465	00123	33106	00000	
20	13342	73515	20402	00175	50741		
21	04303	76002	00545	17433	31162		
22	36426	71056	36577	04500			
23	01477	04770		00334			
24	27000	07136					

Apollo 1

### LM OR CSM S.V. READOUT

**V83E** 

2 After Integration: V05N01E

CSM S.V.	LM S.V.
2253E	2223E
E,2256E	E,2226E
E,2261E	E,2237E
•	
E,2264E	E,2242E
_,	
E,2333E	E,2333E
L, LJJJL	2,2335
PRO	PRO L.

Transmit S.V. & Time Tag
To LM

### LM OR CSM S.V. LOADING

V37E00E V71E 21E 1501E

Earth: (CSM S.V.) 00001E, Plus Xmitted Pad

(LM S.V.) 77776E, Plus Xmitted Pad

Lunar: (CSM S.V.) 00002E, Plus Xmitted Pad (LM S.V.) 77775E, Plus Xmitted Pad

V33E

UNIT VECTOR

Z(R3)

(LAUNCH JAN 31,1971 20.0HR GMT)

Y(R2)

CSM 6-1. - Venus unit vectors.

TIME (GET)

.0

4.0

8.0

12.0

16.0

20.0

24.0

28.0

32.0

36.0

40.0

44.0

48.0

52.0

56.0

60.0

64.0

68.0

HOURS

VENUS

X(RI)

0 HR GET = 1:31:20:20 GMT

9/8/70 Final L0 = 1:31:\_\_:\_\_ UNIT VECTOR VENUS (LAUNCH JAN 31,1971 20,0HR GMT) TIME (GET) Y(R2) 21R31 X(R1) HOURS -. 34954 12.0 -.03327 -.93633 -. 34974 -.93636 76.0 -.03016 -.34993 -.C2705 -.93639 80.0 -.35012 -.02394 -.93640 84.0

-.34550 -.C8900 . -.93419 -.34575 -. 93439 -.08591 -.34600 -.93457 -.08282 -.34624 -.93475 -.07973 -.35031 -.02083 -.93640 88.0 -.93492 -.34648 -.07664 -.35049 -.01771 -.93640 92.0 -.93508 -.34672 -.07355 -.01459 -.93638 -.35067 96.0 -.34695 -.93523 -.07046 -,35085 -. 93636 100.0 -.C1148 -.34718 -.93537 -.06737 -.35103 -.93633 -.00836 104.0 -.34741 -.93551 -.06428 -.35120 -.00524 -. 93629 108.C -. 34764 -.93563 -.06118 -.35137 -.93623 112.0 - +00 211 -.93574 -.34786 -.05809 -.35153 -.93617 .03101 116.0 -.34808 -.93585 -.05499 -.35170 -.93610 120.0 .00414 -.34830 -.05189 ~.93595 -.35186 -.93603 .00727 124.0 -.34851 -.93803 -.04879 -.35201 -.93594 .01040 128.0 -.34872 -. 93611 -.04569 -.93584 -.35217 .Cl353 132.0 -.93618 -. 34893 -.04259 -.35232 -.93573 -01667 136.0 -. 34914 -.93624 -.03948 -.35246 .01980 -.93562 140.0 ~. 34934 -, 93629 » 03638

8 1-0-1 6

0 HR GET = 1:31:20:20 GMT L0 = 1:31:\_\_:\_

			0  HK GFI = 1
	MENULE	UNIT WE	L0 = 1
TIME (GET)		<u>UNIT VE</u>	20.0HR GMT)
HOURS	X(R1)		
710000	ATRE!		
144.0	-02294	93549	35261
148.0	.02608	93536	35275
152.0	.02922	9352 L	35288
156.0	.03237	93506	35302
160.0	-03551	93489	35315
164.0	.03866	93472	35327
168.0	.04181	93454	35340
172-0	.04496	93435	35352
176.0	.04812	93415	35363
180.0	.05128	93393	35375
184.0	.05443	93371	35386
188.C	.05759	93348	35396
192.0	.06076	93325	35466
196.C	.06392	93300	35416
200.0	.06709	93274	35426
204.0	.07026	93247	35435
200.C	.07343	93219	35444

·	VENUS	UNIT VI	ECTOR
TIME (GET)	(LAUNCH J X(R1)	AN 31,1971 Y(R2)	20.0HR GHT! Z(R3)
216.0	.C7978	93161	35460
220.0	.08295	93130	35468
224.0	.08613	-,93098	35475
228.0	.08932	93066	35482
232.0	.09250	93032	35489
236.0	.09568	92998	35495
240.0	-09887	92962	35501
244.0	.10206	92925	35506

10-2



.07660

212.0

-.93190 -.35452

0 HR GET = 1:31:20:20 GMT L0 = 1:31:\_\_:\_

9/8/70 Final

	MARS	UNIT VI	ECTOR LO =
FIME (GET)	{LAUNCH JA X{R1)		20.0HR GMT1 Z(R3)
•0	41404	83881	35351
10.0	40993	84048	35432
20.0	40582	84214	35512
30.0	40170	84378	35592
40.0	39758	84540	35671
50.0	39345	84699	35749
60.0	38932	84857	35826
70.0	38518	85014	35903
80.C	38104	85168	35979
90.c	37689	85320	36055
100.0	37274	85471	36129
116.0	36858	85620	36203
120.0	36441	85767	36277
130.0	36023	85913	36350
140.0	35605	86057	36422
150.0	35186	86199	36494
160.0	34765	86339	36565
170.0	34344	86477	36635

_;	MARS	UNIT VECTOR	
TIME (GET)	L AUNCH J XIRL)	AN 31,1971 Y(R2)	20.0HR GMT
180.0	33922	86614	36705
190.0	+.33499	86750	36774
200.0	33075	86883	36842
210.0	32650	87015	36910
220.0	32224	87145	36977
230.0	31797	87274	37044
240+0	31369	87401	37109
250.0	30940	~.87526	37175

···	JUPITER UNIT VECTOR		
TIME (GET) HOURS	* LAUNCH JAN X{RL}	31,1971 Y(R2)	20.0HR GMT1 Z(R3)
-0	45824	82167	33894
50.0	45392	82372	33978
100.0	44974	8256#	34057
150.0	44570	82755	34134
200.0	44178	82935	34207
250.0	43797	83107	34278

	SATURN	UNIT VI	ECTOR
TIME (GET) HOURS	(LAUNCH JAN X(RI)	31,1971 Y(R2)	20.0HR GMT) Z(R3)
.0	. 69562	.67354	.24992
100.0	.69393	.67492	.25091

10-3

NASA --